

Juliette Media Cabinet

Assembly Instructions

URBAN OUTFITTERS

 
NO ADDITIONAL TOOLS REQUIRED

WARNINGS:


Do not throw away packing materials and carton until after assembly.
Ensure all parts are present prior to assembly.
Contact customer service immediately if parts are missing.
Assemble all parts on a clean smooth surface.

CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.
Do not place over heat or air conditioning vents.
Adjust levelers so that the furniture sits flat on uneven floors.
Blot spills with a clean white cloth, do not rub.
Do not use harsh chemicals.
Before cleaning any part test a small spot in a hidden area.
You may need to re-tighten all bolts after initial use.

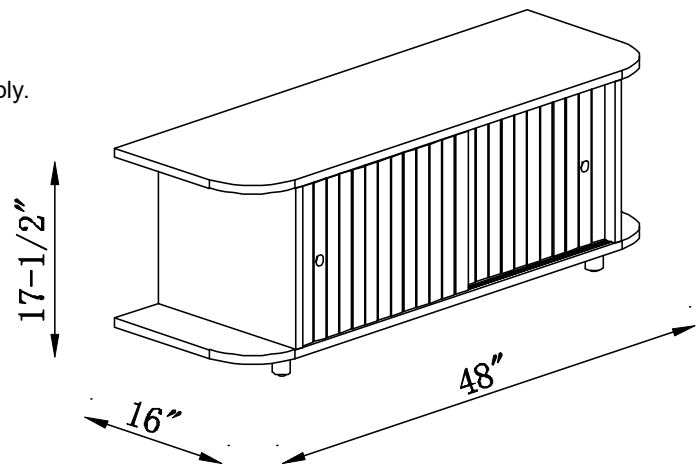


PARTS INCLUDED:

 

 
(A) Top panel
x1

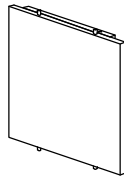

 
(B) Side panel
x1

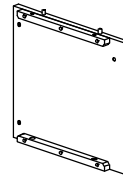

 (C) Side panel
x1



 
(D) Bottom panel
x1

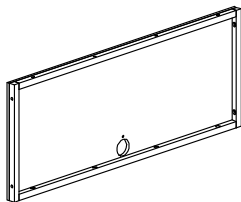


(E) Back panel
x1



 (F) Leg
x4

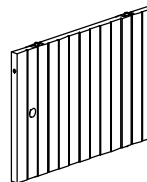

 
(G) Door
x1

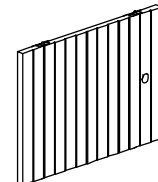

(H) Door
x1



 (I) Hex key
x1



(J) Bolt
[1/4" x 1"] x21



(K) Spring washer
[1/4"] x20



(L) Flat washer
[1/4"] x20



(M) Nut
[Φ16 x 14mm] x1

 
Juliette Media Cabinet

Assembly Instructions

URBAN OUTFITTERS


STEP 1

With help, lay the parts out onto a clean smooth surface such as carpet or cardboard. Align the side panels (B&C) to back panel (E) and press firmly into place as shown. Insert the flat washer (L), spring washer (K) and bolt (J). Tighten with supplied hex key (I). Do not over-tighten.

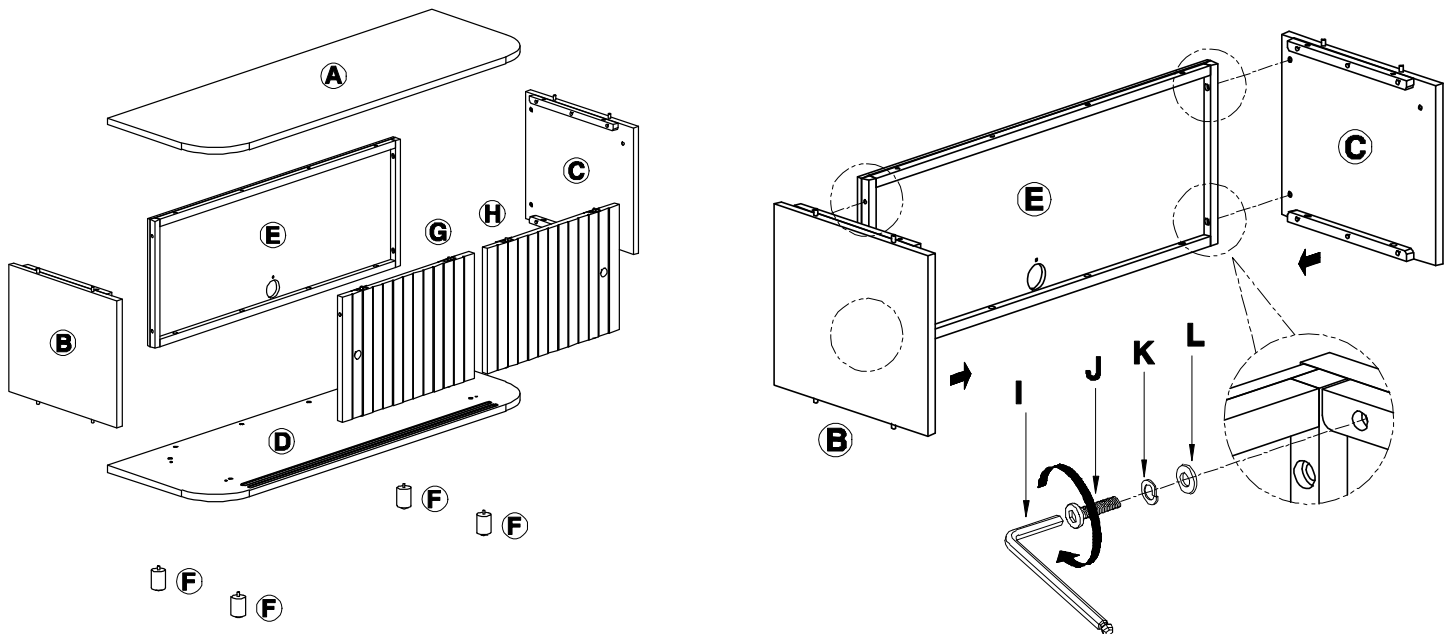


STEP 2

 Align the back panels (E) and side panels (B&C) with the bottom panel (D) and press firmly into place. Insert the flat washer (L), spring washer (K) and bolt (J). Tighten with supplied hex key (I). Do not over-tighten. Place the top panel (A) on top of the partially assembled case as shown. Insert the flat washer (L), spring washer (K) and bolt (J). Tighten with supplied hex key (I).

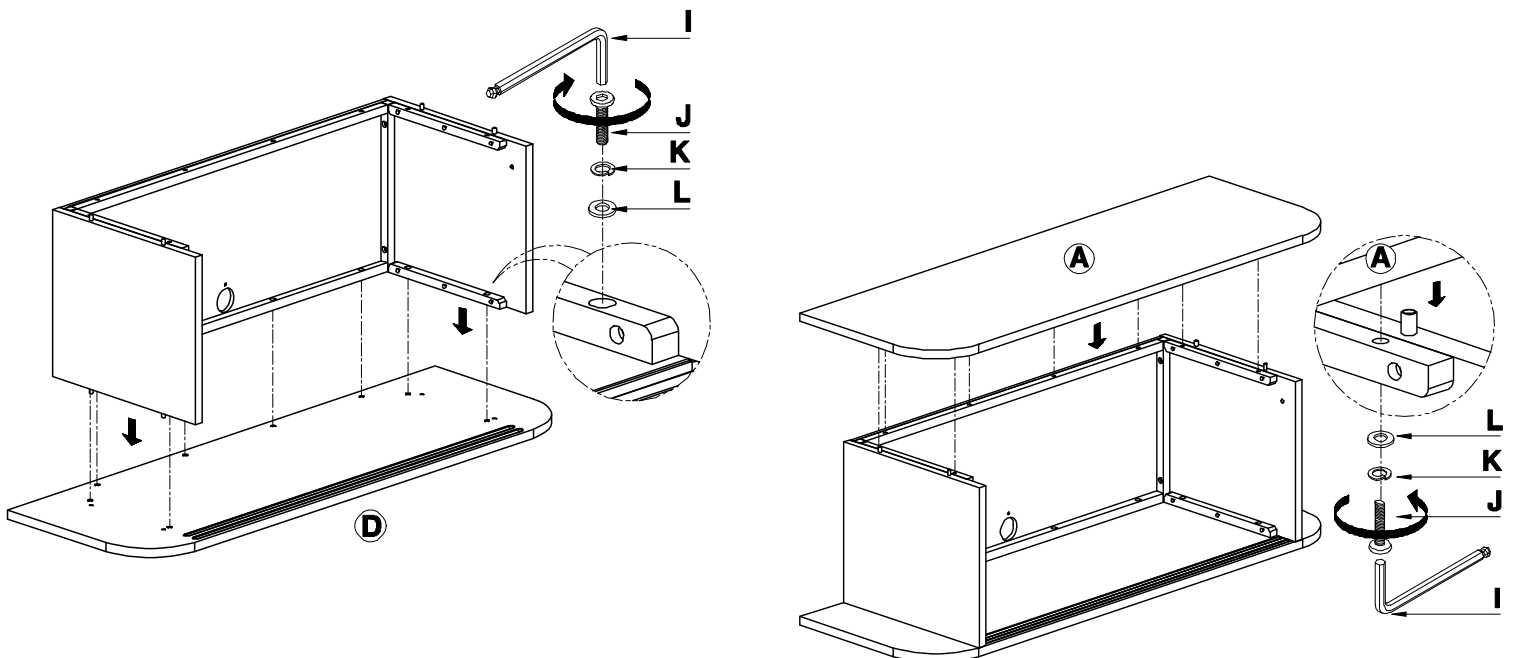


STEP 3

 Screw the legs (F) into the cabinet clockwise until tight. With help stand the media upright making sure you do not lean it on its legs

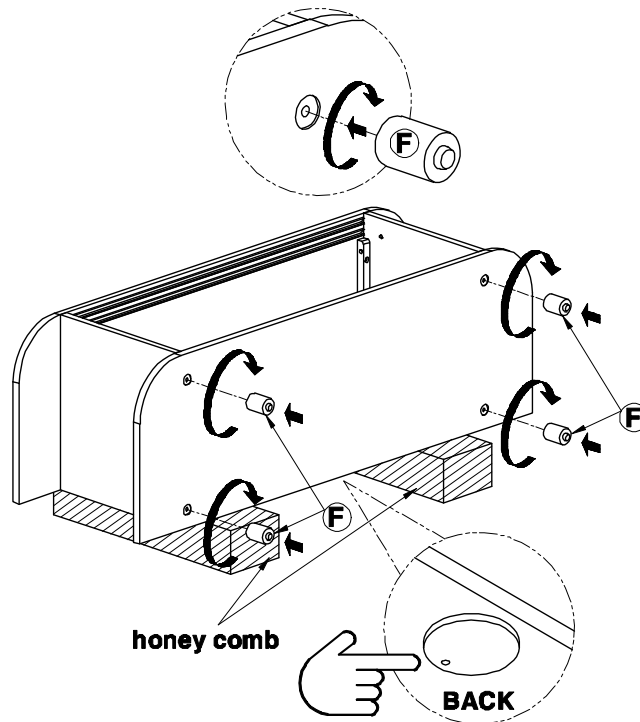

STEP 4

 Slide down the latches in the top of doors (H&G). Use the screw in the doors to adjust the height of the glides. Insert the nut (M), bolt (J) into the door (G). Tighten with supplied hex key (I).

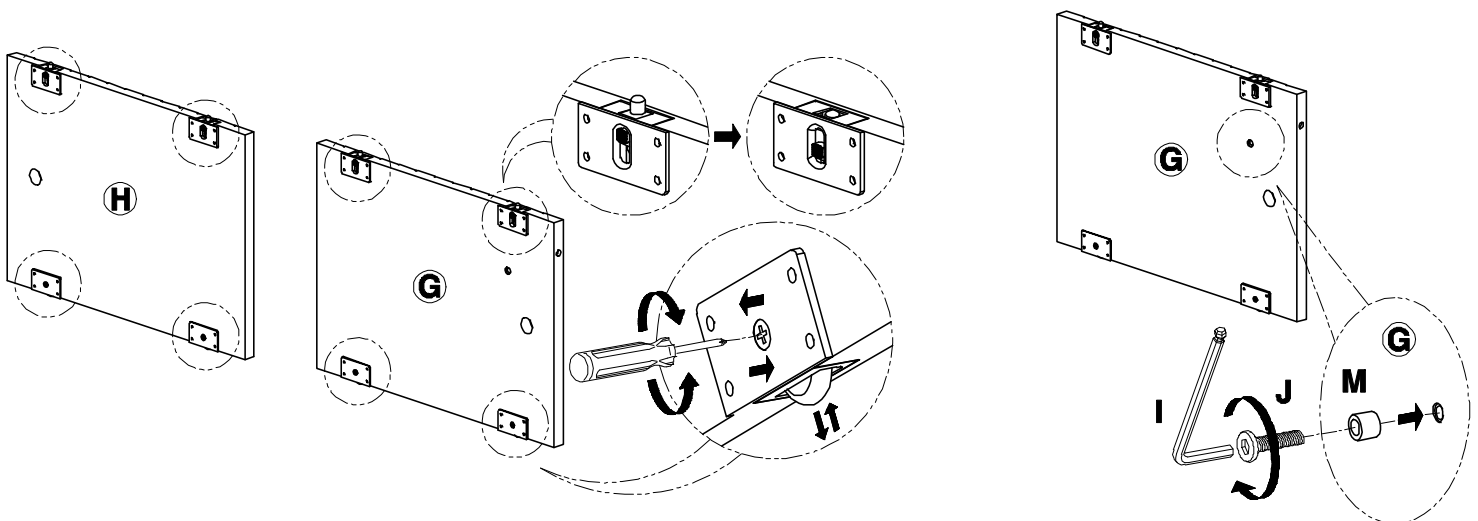


Juliette Media Cabinet

Assembly Instructions

URBAN OUTFITTERS

STEP 5

 Align and insert the doors (H&G) into the door tracks then, slide the latch back up. Adjust the height of the glides to ensure the doors operate smoothly.

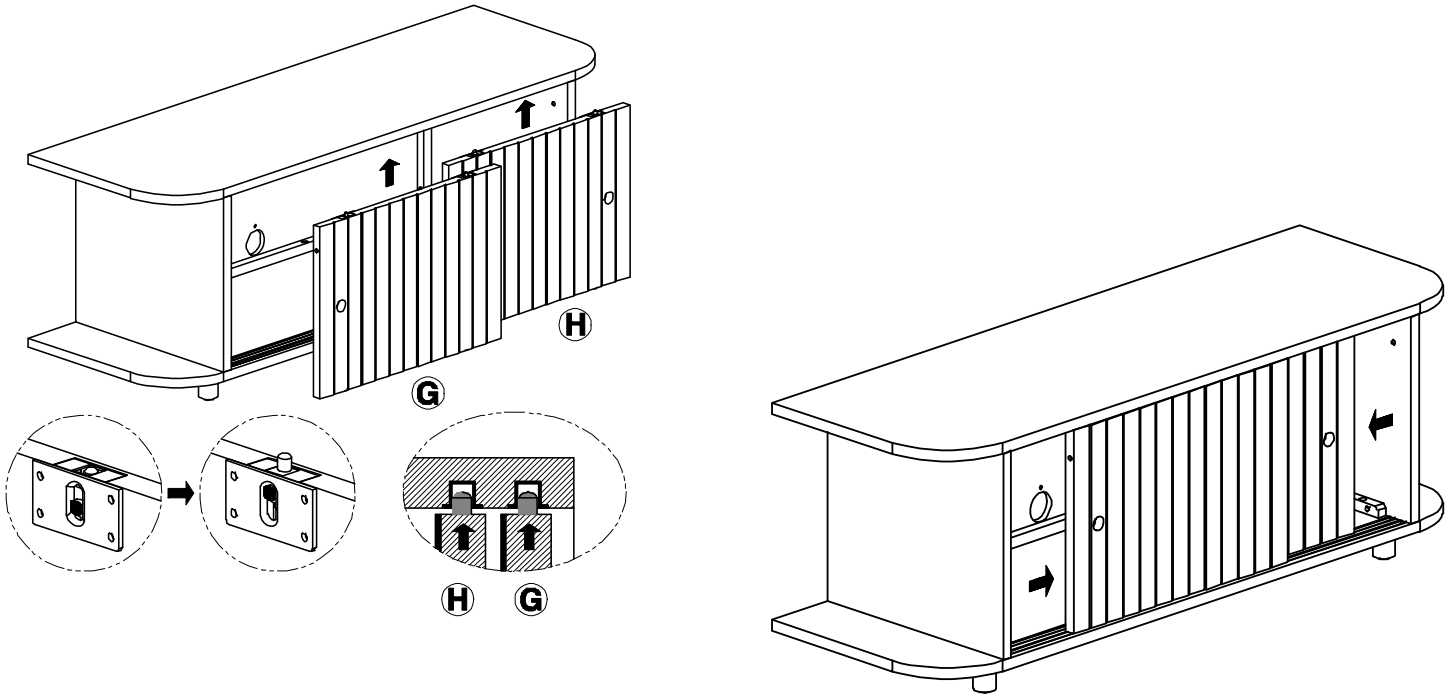

STEP 6

Adjust the levelers to accommodate uneven floors.

