

# Silas Nightstand

## Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED



### WARNINGS:

Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.


### CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.  
Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills with a clean white cloth, do not rub.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.


### PARTS INCLUDED:

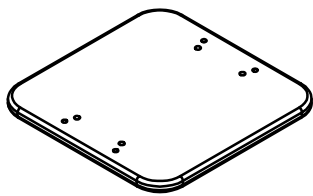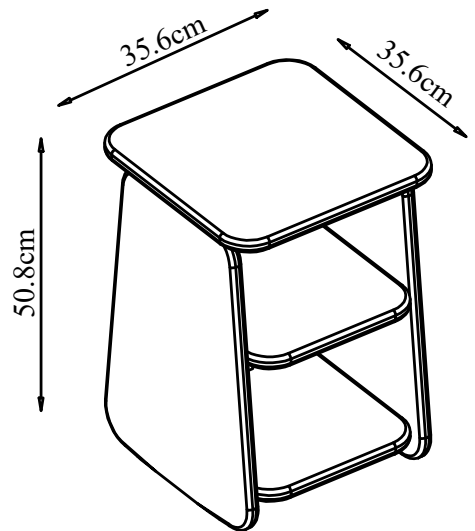

1) Top Panel  
(14 x 14 x 0.75") x 1  
or  
(35.6 x 35.6 x 1.9cm)

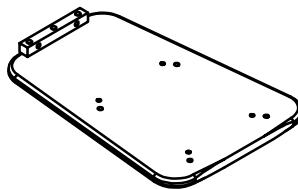

2) Legs  
(19.25x 13.6 x 1.5") x 2  
or  
(48.9 x 34.6 x 3.8cm)

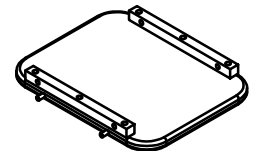

3) Shelf  
(14 x 11.1 x 1.5") x 2  
or  
(35.6 x 28.2 x 3.9cm)



A) Bolt  
(D 0.47 / 0.24 x 1.38") x 12  
or  
(D 12 / 6 x 35 mm)



B) Spring Washer  
(D 0.47 / 0.24 x 0.08") x 12  
or  
(D 12 / 6 x 2 mm)



C) Flat Washer  
(D 0.63 / 0.24 x 0.08") x 12  
or  
(D 16 / 6 x 2 mm)



D) Allen Key  
(D 0.16 x 2.32") x 1  
or  
(D 4 x 59 mm)


# Silas Nightstand

## Assembly Instructions

URBAN OUTFITTERS


### STEP 1

Attach the top panel (1) to one leg (2), with bolts (A), spring washer (B) and flat washer (C), using Allen key (D) as shown.

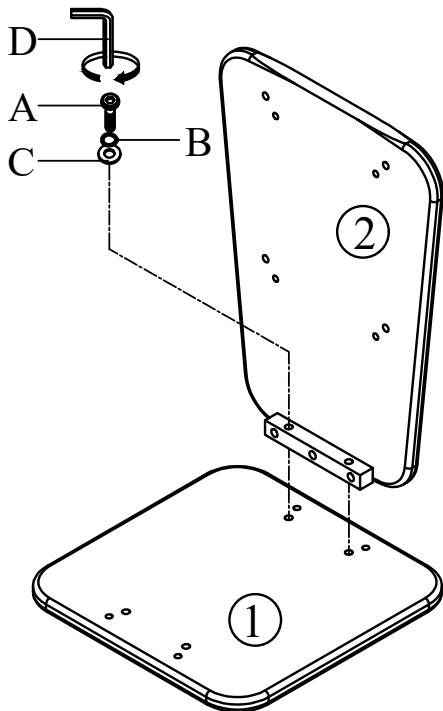

### STEP 2

Attach two shelves (3) to leg (2) with bolts (A), spring washer (B) and flat washer (C), using Allen key (D) as shown.

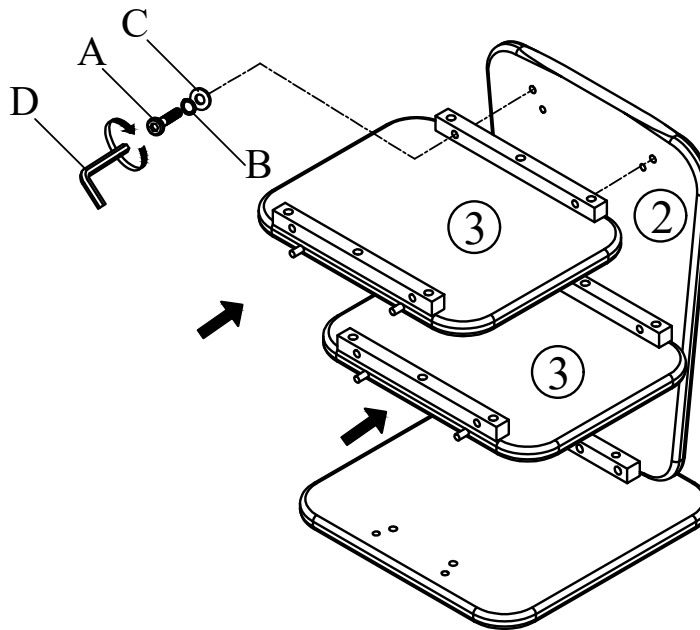

### STEP 3

Attach the additional leg (2) to the shelves and the top panel with bolts (A), spring washer (B), flat washer (C), using Allen key (D) as shown. Flip the furniture upright to finish the assembly.

