

Wabi Paper Lantern

Assembly Instructions

URBAN OUTFITTERS

NO ADDITIONAL TOOLS REQUIRED

WARNINGS:

Do not discard packing materials and the carton until assembly is complete.

Ensure all parts are present prior to assembly.

Contact customer service immediately if any parts are missing.

Assemble all parts on a clean, smooth surface.

Use an E26 60W bulb, do not exceed recommended wattage.

The paper shade is delicate, do not over stretch!

CARE INSTRUCTIONS:

Avoid direct exposure to sunlight.


Blot spills with a clean, white cloth; do not rub.

Do not use harsh chemicals.


Before cleaning any part, test a small spot in a hidden area.

Do not over-tighten the parts.

The parts may loosen after initial use; re-tighten as necessary.

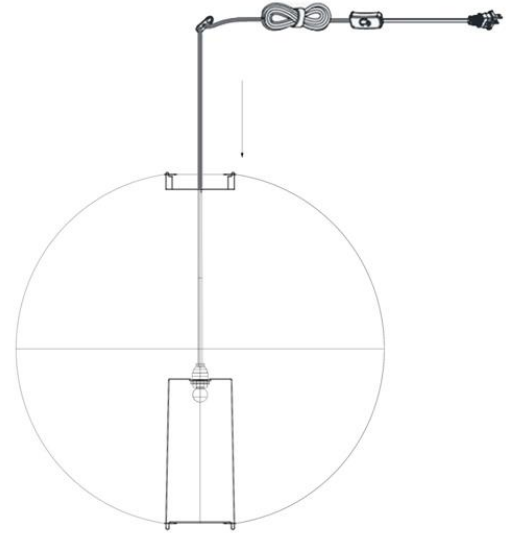

PARTS INCLUDED:

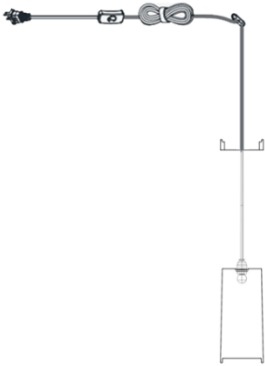

(B) Socket / Chord



(A) Paper Shade


Wabi Paper Lantern

Assembly Instructions

URBAN OUTFITTERS


STEP 1

Carefully insert the socket / chord (A) through the shade (B). Place the rings at the bottom of the shade (B) carefully into the points at the bottom of the socket / chord (A) as shown.

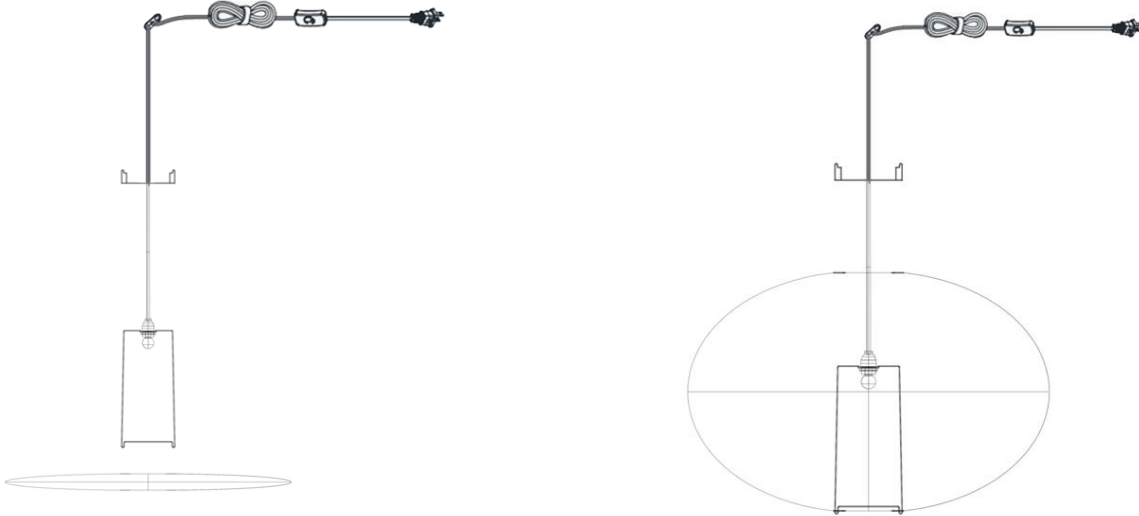

STEP 2

Carefully stretch the top of the shade (B) to the socket / chord (A). Place the rings at the top of the shade (B) into the points at the top of the socket / chord (A) as shown. Plug in your new lamp, and use the switch attached to the chord to turn it on and off.

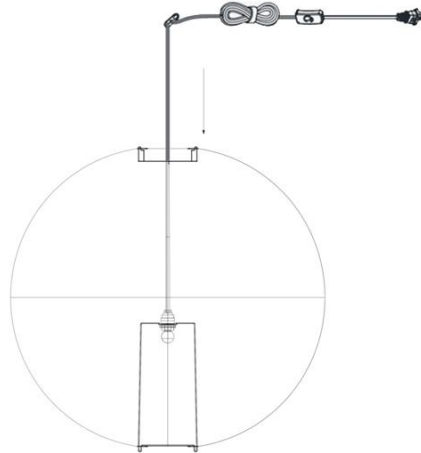

STEP 3 (optional)

The plastic tab on the chord can be used to hang the lamp as shown below. Contact your local hardware store to purchase the correct hardware for your ceiling and follow the hardware's mounting instructions to ensure safe installation.

