

# Stassi Outdoor Dining Table

URBAN OUTFITTERS

## Assembly Instructions


NO ADDITIONAL TOOLS REQUIRED

### WARNINGS:


Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills with a clean white cloth, do not rub.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

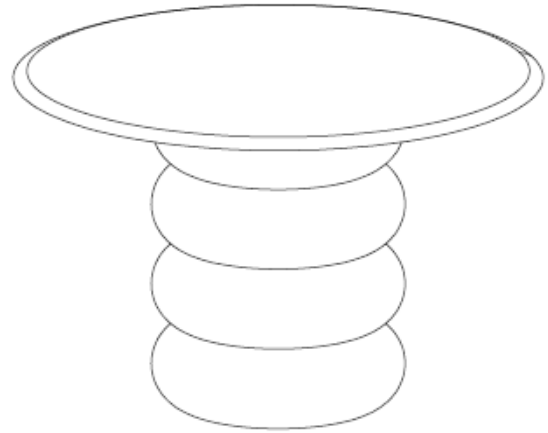

### PARTS INCLUDED:

 

(A) Table Top

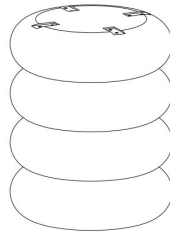

(B) Base



(C) Bracket

x4



(D) Bolt

[M6 x 20mm] x12



(E) Washer

[M6 x 16 x 1.5 mm] x4



(F) Allen Key

M4


# Stassi Outdoor Dining Table

## Assembly Instructions

URBAN OUTFITTERS


### STEP 1

Carefully unpack the dining table and place the contents on a clean smooth surface such as carpet or cardboard. Place the brackets (C) into the slots in the top of the base (B) Then, screw the brackets (C) into place with the bolts (D) using the Allen key (F).

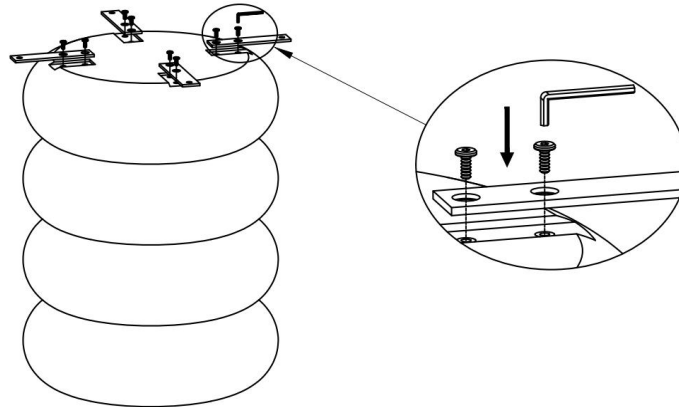

### STEP 2

Ensure the table top (A) is upside down then, with help, flip the table base (B) onto the table top (A) as shown. Ensure the holes in the brackets (C) are aligned with the holes in the table top (A). Screw the base (B) to the table top (A) with the bolts using the Allen key (F).

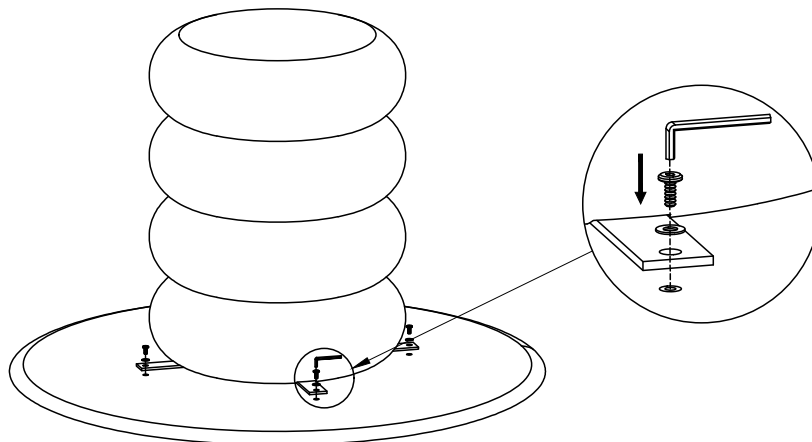

### STEP 3

With help, flip the table right-side up to complete the assembly.

