

# Clara Media Console

## Assembly Instructions

URBAN OUTFITTERS

### TOOLS REQUIRED BUT NOT INCLUDED:


Phillips head screwdriver

### WARNINGS:

Do not throw away packing materials and carton until after assembly.  
Ensure all parts are present prior to assembly.  
Contact customer service immediately if parts are missing.  
Assemble all parts on a clean smooth surface.

### CARE INSTRUCTIONS:


Avoid direct exposure to sunlight.  
Do not place over heat or air conditioning vents.  
Adjust levelers so that the furniture sits flat on uneven floors.  
Blot spills with a clean white cloth, do not rub.  
Do not use harsh chemicals.  
Before cleaning any part test a small spot in a hidden area.  
You may need to re-tighten all bolts after initial use.

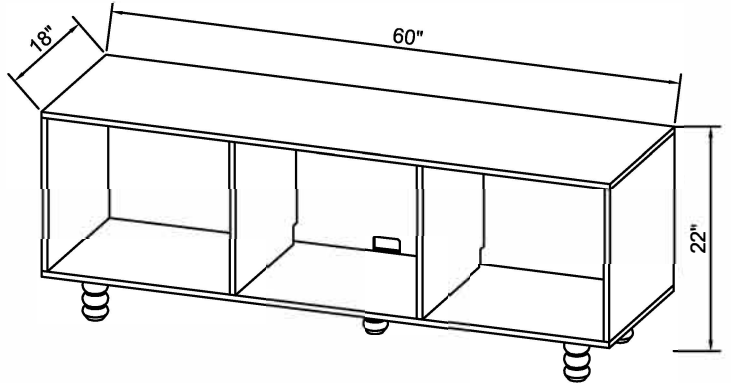

## PARTS INCLUDED



 (A) TOP PANEL  
x1




(B) BOTTOM PANEL  
x1



(C) SIDES  
x2



(D) PARTITION  
x2

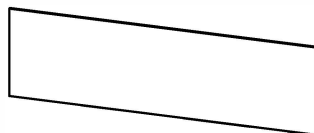

(E) BACK  
x1



(F) LEGS  
x5



(G) ROUND HEAD ALLEN BOLT  
[M6X 16MM] x20



 
(H) WASHER  
[M6X 20MM] x20



(I) ALLEN KEY [4MM]  
x1



(J) WOODEN DOWEL  
x16



(K) CAM BOLT  
x24



(L) CAM LOCK  
x24


# Clara Media Console

## Assembly Instructions

URBAN OUTFITTERS


### STEP 1

Carefully unpack the media console parts onto a clean smooth surface such as carpet or cardboard. Insert the dowels (J) into the edges of the sides (C) and the partitions (D).

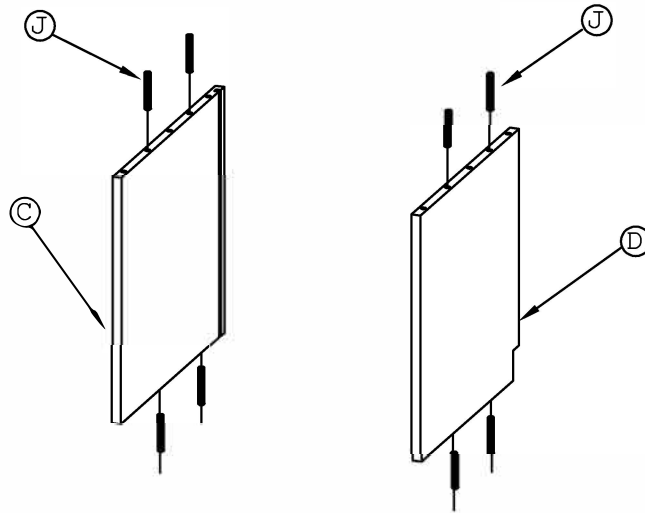

### STEP 2


Screw the cam bolts (K) into the top and bottom panels (A&B).

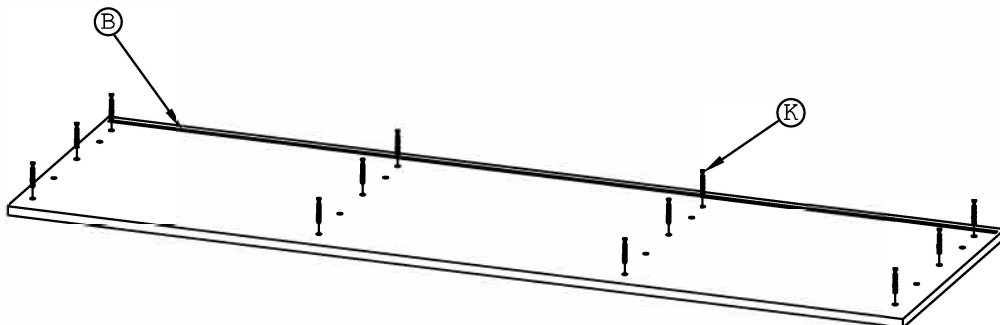

## Assembly Instructions


### STEP 3

Align the sides (C) and partitions (D) as shown then, press them into place on the bottom panel (A).

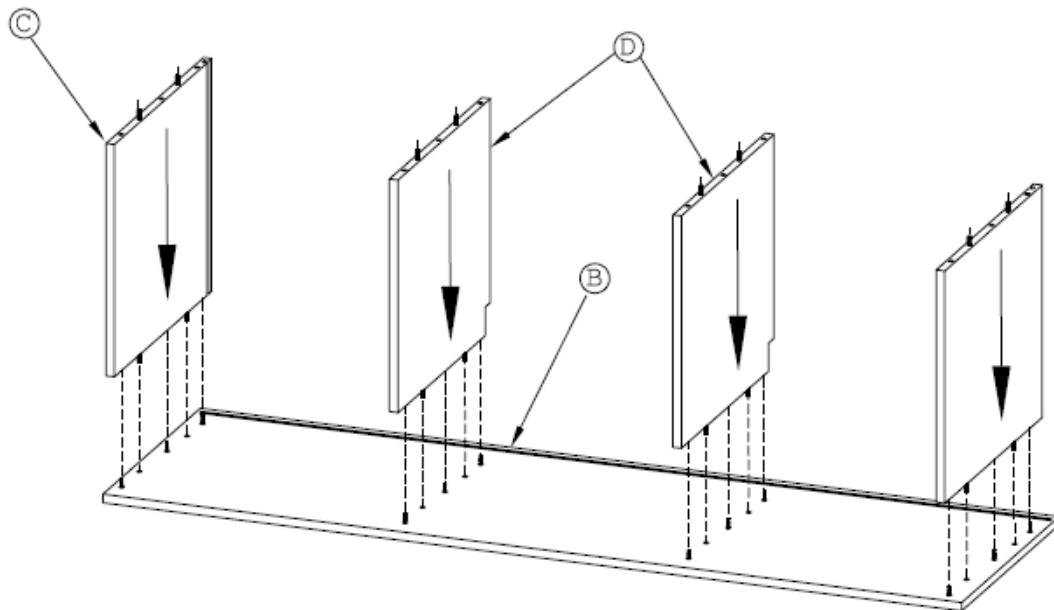

### STEP 4


Insert the cam locks (L) into the sides (C) and partitions (D) as shown. Use a Phillips head screwdriver to secure the cam locks (L).

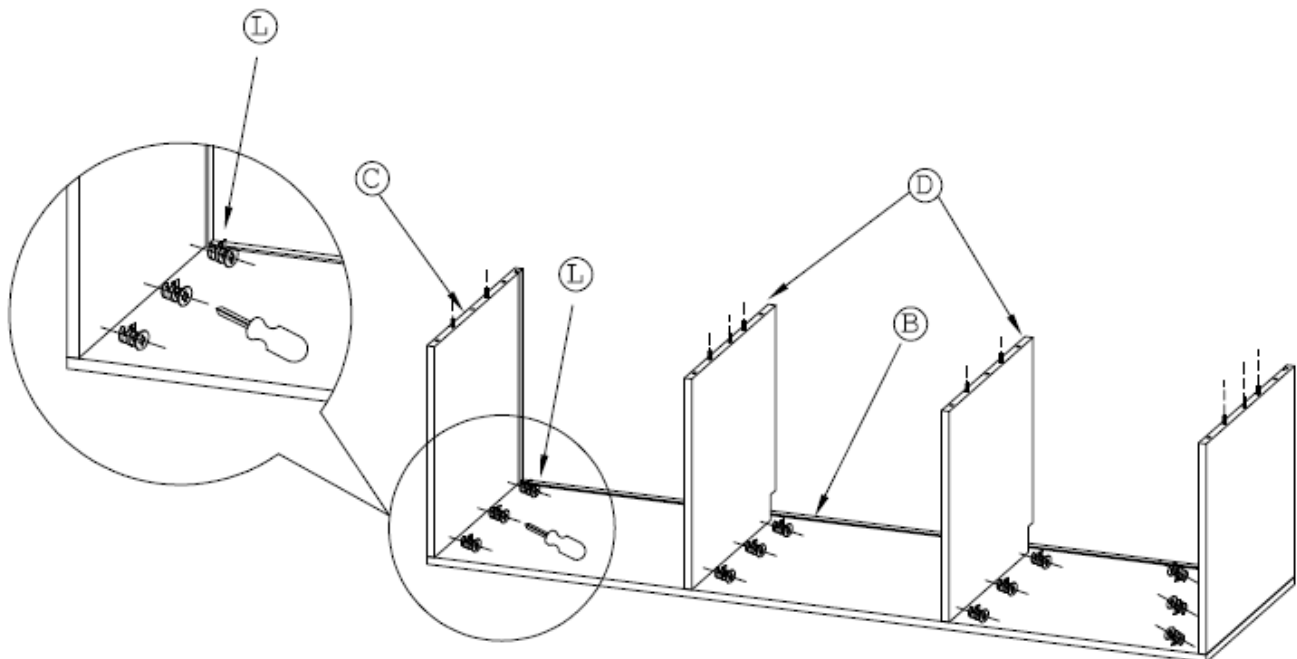

## Assembly Instructions


### STEP 5

Insert the back panel (E) as shown.

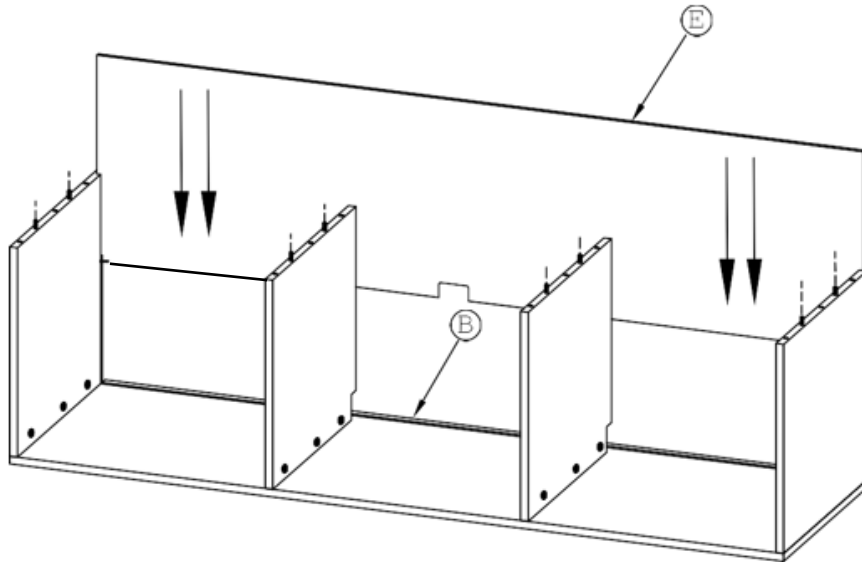

### STEP 6

Align the top panel (A) with the sides (C), partitions (D) and back panel (E) then, press it into place as shown.

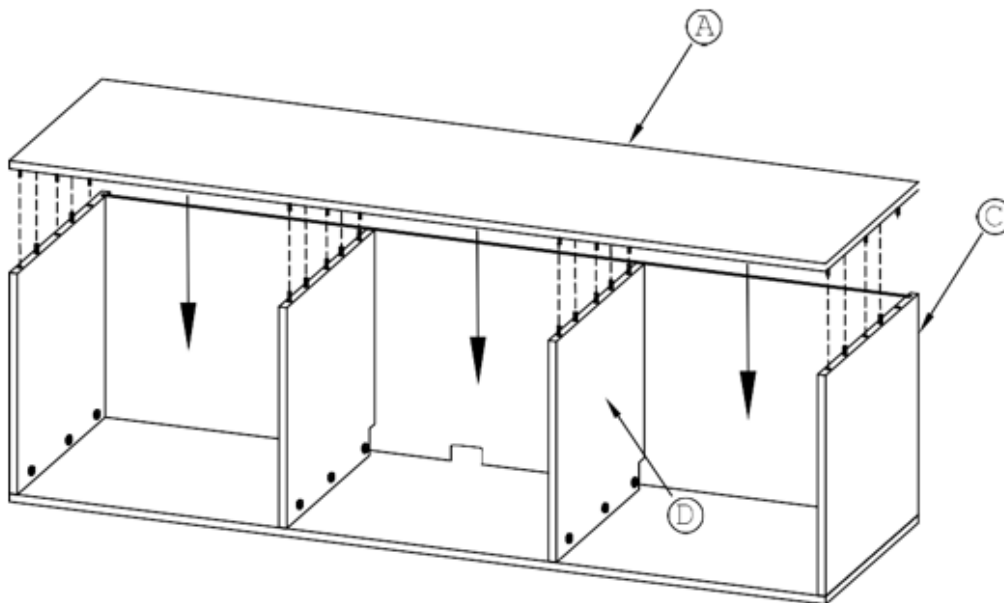


# Clara Media Console

URBAN OUTFITTERS

## Assembly Instructions

### STEP 7

Insert the cam locks (L) into the sides (C) and partitions (D) as shown. Use a Phillips head screwdriver to secure the cam locks (L).

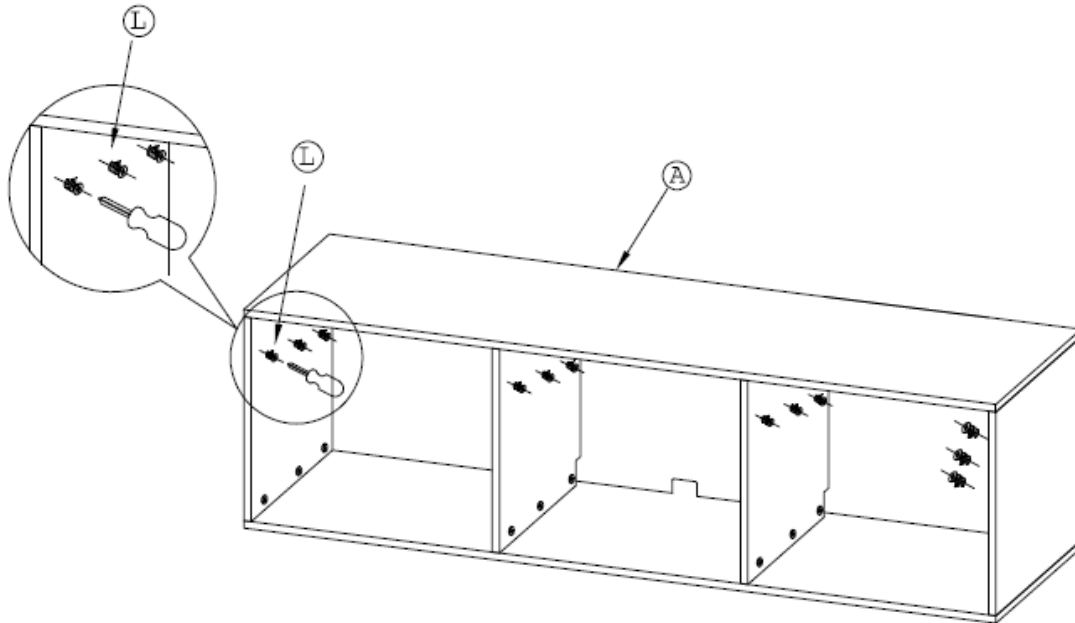

### STEP 8

With help, flip the cabinet onto its top. Align the legs (F) as shown then, insert allen bolts (G) and washers (H). Tighten with the supplied Allen key (I). With help, flip the cabinet back onto its legs to complete assembly.

