

	<p>The device is a square column with rounded corners. There is a button on the front of the device. The back of the device is the interface area. The nano-SIM card slot with the cover is located at the bottom of the device.</p>
	<p>The button on the front of the device is the WPS button. Press this button to activate the WPS function.</p>
	<p>The first port near the bottom on the back of the device is the power port. Connect to the power adapter.</p>
	<p>The second port is a LAN port. Connect to the PC.</p>
	<p>The third port is the WAN/LAN port. Connect to WAN.</p>
	<p>The fourth port is a PHONE port. Connect to a telephone.</p>
	<p>The nano-SIM card slot with the cover is on the bottom. Open the slot cover and you can insert the nano-SIM card or press and hold the RESET hole for about 3 seconds to restore your device to the factory settings.</p>