

Laminate Restoration Collection®

Professional Installation Guidelines

GENERAL INSTALLATION INSTRUCTIONS

NOTE: Mannington Laminate Flooring is intended to be installed as a floating floor system.

Do not secure flooring to underfloor.

Storage & Handling

- Thoroughly inspect laminate panels before installation. The warranty does not cover labor for repair or replacement when a panel with visual defects is installed.
- Always store flooring horizontally in the original, unopened package.
- The storage area must be climate controlled with a temperature range between 65°F and 90°F (18°C and 32°C) and a relative humidity not exceeding 65%. The minimum RH percent is 30%.
- Always handle cartons carefully. Do not puncture packaging. Cartons should not be opened until time of installation.

Jobsite Conditions

- Under normal conditions Mannington Laminate flooring does not need to be acclimated to the job site. If extreme temperature and humidity variations exist during storage or transportation, acclimating the laminate flooring to jobsite conditions is recommended.
- In all cases, jobsite temperature should be at least 65°F and no greater than 100°F and the relative humidity should not exceed 65%. The temperature and humidity must be controlled and maintained within the ranges described above for the life of the laminate flooring. The minimum RH percent is 30%.
- 12 mm product room should not exceed 3,000 square feet and no greater than 55 linear feet length or width.

Subfloor/Underfloor Recommendations & Preparation

- Subfloors must be structurally sound, clean, dry and smooth. Subfloor variations should not exceed 1/8" in 6' (3.18 mm in 1.8 m). All high spots must be sanded or ground. Fill low spots, cracks and depressions with high quality Portland based cement patch.
- You may install Mannington Laminate Flooring over existing vinyl floor coverings (does not apply to loose lay or multiple layers of vinyl flooring), wood flooring and ceramic tile (grout joints must be leveled).
- Appropriate laminate underlayment must be used when installing over all hard surfaces.
- Do not install Mannington Laminate Flooring on top of carpeting.
- Do not install Mannington Laminate Flooring in high-humidity areas where the floor is usually wet (steam rooms or saunas).

Radiant-Heated Subfloors

Mannington Laminate Flooring may be installed over hydronic radiant-heated subfloors, provided the surface temperature of the system does not exceed 85°F. Before installing Mannington Laminate Flooring over newly constructed radiant-heating systems, operate the system at maximum capacity to force any residual moisture from the cementitious topping of the radiant heating system. Then set the thermostat to a comfortable room temperature for the installation. Radiant Heating mats are acceptable if designed and warranted to be used with Laminate flooring by their manufacture.

GETTING STARTED

Assemble all required tools listed below before beginning the installation process.

Tools & Materials

- Appropriate underlayment
- Spacing wedges-5/16" (1 cm);
- Utility knife
- Universal tapping block
- Pencil
- Tape measure
- Carpenter's square
- Transition moldings
- Hand or power jamb saw
- Circular or miter saw
- Drill
- Chalk line
- Safety glasses*

* Always wear safety glasses when using a hammer or power equipment. Follow safety instructions and SDS Data Sheets.

Don't forget to order moldings that match or blend with the flooring. Before installing the first panel, select an adequate amount of planks that closely blend with the molding.

1. Remove existing wall base, trim, and transition moldings. Measure out the entire work area. Undercut all doorcasings so the new flooring will fit underneath. Use a scrap piece of the new laminate flooring as a guide. Make the cut using a hand or power jamb saw. Be certain to allow enough room under the casing for an expansion gap.
2. Inspect each plank before installing it. Remove any manufacturing residues from the tongue and groove before installing.
3. Determine in which direction the panels will be laid. As a general rule, the long dimension of the panels should be laid parallel to the longest wall. When possible lay out panels parallel to the light coming in from windows.
4. A minimum 5/16" expansion gap must be provided at all walls and fixed vertical surfaces.
5. When installing in a bathroom the expansion gap must be filled using 100% silicone caulking compound. Additionally, all exterior expansion gaps as well as the gap around the toilet flange must be filled.
- 6 Make sure the last row of panels to be laid in the work area will be more than 2" wide. If not, the first panel to be laid in the work area must be cut to compensate the difference on the last panel.
7. Cover entire installation area with the appropriate underlayment. Install one sheet net along the starting wall. Unroll only one sheet at a time during panel installation to prevent damaging the underlayment. Once the first sheet of underlayment is covered with laminate flooring, install the second sheet. Do not overlap sheets. Butt the two edges of the sheet together and seal with sealing tape or duct tape. Always use appropriate underlayment; never install laminate flooring directly over exposed substrates.

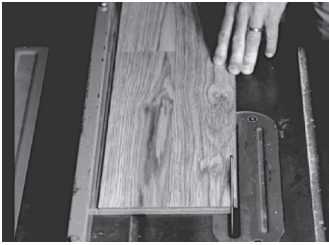


Photo 1



Photo 2



Photo 3



Photo 4



Photo 5

INSTALLATION PROCEDURE


- Carefully measure the room to determine squareness of the area and to provide for a "balanced" layout. If the width of the last row of planks will be less than one half of the panel width, adjust the width of the first row of planks by rip cutting the panels.
- If the wall along the first row of planks is irregular, scribe the planks to fit the wall and cut.
- Always lay planks from left to right, with the tongue side against the starting wall. Remove the tongue on the first row of the planks to provide for a solid edge at the wall juncture. Provide a 5/16" expansion gap at all fixed vertical surfaces.
- Just as the work area was laid out to provide for a balanced width it should also be "balanced" to avoid having any short planks at either the beginning or end of a row. Plan the plank layout to have the first plank and the last plank in a row to be at least 12" (300 mm) long.
- Begin the installation by laying the first plank on the floor with the tongue side to the wall, cut off the tongue profile. (Refer to photo #1) With a slight angle, position the end tongue of the second plank in the first row into the end groove of the first plank and lock into position (refer to photo #2).
- Begin second row with at least 12" stagger of end joints, assemble the first panel in the second row to the adjacent panel in the first row by slightly angling tongue into groove until plank locks into position. Insert the tongue at about a 20° angle and lock the planks together. (Use blue tape to secure the panel across the assembled joint to hold it in place.)
- With standard laminate, position the end tongue of the second plank over the first plank in the second row, approximately 1/8" to 1/4" away from the side groove. Lock the end seam together (refer to photo #3). Always lock the end ("head") seams together before connecting side seams (refer to photo #4). If necessary lightly tap plank as installed using a Mannington universal tapping block.
- Continue laying the floor from left to right, plank after plank, row after row. Maintain a 5/16" expansion gap at all fixed vertical surfaces. Work from several different cartons to minimize "clustering" of patterns. Maintain a random stagger of end seams. Unroll additional widths of the appropriate Laminate underlayment as required.
- The last row of panels will more than likely need to be cut to fit. If not, it is still necessary to cut off the groove profile to provide a full plank thickness at the wall. If nothing prevents angling this last row of planks into position, proceed as normal to complete the installation.

10. If there are obstacles (door casing, toe kicks, radiators) that prevent the last row of panels from being angled into position it may be necessary to lightly plane or sand off a bit of the locking profile of the groove and tongue:

Position the panel onto the already installed rows; slide the panel under the obstruction. It's a good practice to pre-fit the panel to make certain it will slide into place before applying Mega Glue adhesive.

Separate the panel to completely expose the groove. Apply a light coat of Mega Glue adhesive onto the groove; slide the last row panel back into position (refer to photo #5). If necessary use a last board puller to position the panel and lightly tap panel to close any gaps. Wipe off excess glue.

11. Remove spacers and install appropriate trims and moldings.

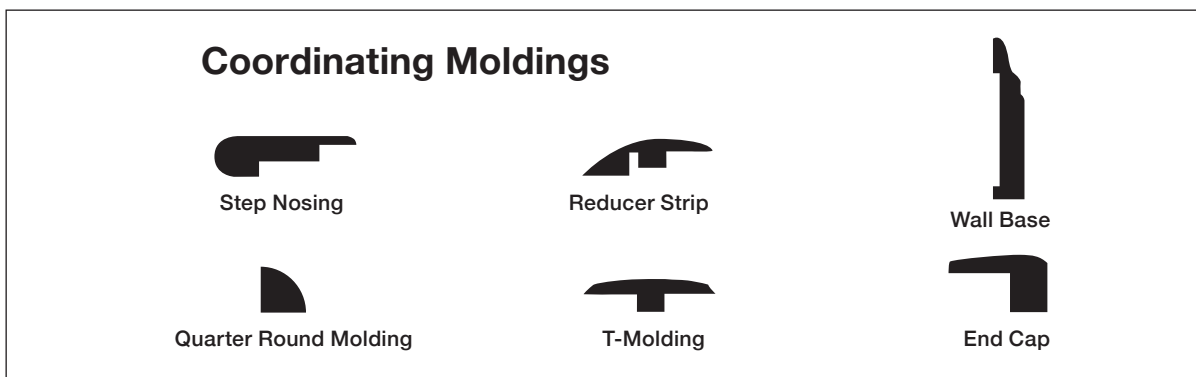

REPAIRS

Always inspect panels before installation; however, if damage occurs after installation the following repair procedures may be used:

- If a panel is slightly damaged or chipped, fill the void with a Color Matched Filler. Several products are now available to fill small chips; such as Robert's Universal Flooring and Furniture Repair Kit.
- If a panel is severely damaged and must be replaced the flooring will need to be disassembled back to the damaged planks. Determine the shortest distance from a sidewall and remove the molding. Lift up and out on the panels and remove the entire row back to the damaged area. Replace the damaged plank and reassemble the flooring.

For future repairs, wrap remaining panels in original shrink wrapping and store in a normal, dry interior storage area.

MAINTENANCE

Mannington Laminate Flooring is very easy to maintain and is extremely resistant to wear and stains.

- Spot clean your floor as needed and completely clean when needed with Mannington's Ultra Clean System.
- Occasionally vacuum or sweep to eliminate loose dust and debris.
- Wipe soiled spots with a cloth dampened with clean water or Mannington Ultra Clean. Make sure the cloth is thoroughly wrung out. Never flood the floor with water or cleaner.
- After damp cleaning, dry the floor thoroughly with a clean cloth.
- Remove tough, stubborn stains such as paint, adhesive, asphalt, oil, etc. with alcohol, acetone or nail polish remover.
- Place rugs or floor mats on heavy traffic areas to avoid excess wear and tear.

- Place doormats in front of outside entrances.
- Never wax, polish or use soap. Doing so may damage the wearsurface, causing it to be slippery or to have unattractive smudges.
- Steam mop approved
- Never use scouring powder products, steel wool or abrasives.
- Do not treat or seal Mannington Laminate Flooring panels after they have been installed.

IF YOU HAVE A WARRANTY CLAIM:

Contact your retailer and describe the problem. In many instances, the retailer can provide you with a solution to correct the situation.

If you need additional assistance, or wish to file a claim, simply call Mannington Customer Care at 1-800-FLOOR-US (1-800-356-6787) or visit us at www.mannington.com. We do reserve the right to request a hard copy of the proof of purchase, (store receipt) if needed.

Our representatives will provide you with helpful information to address your concern, or walk you through the easy steps to file a claim. We will make every effort to ensure that your claim is processed quickly and fairly.

You may write to us at:
Mannington Mills, Inc.
Attn: Customer Care
75 Mannington Mills Road
Salem, NJ 08079
Email: service@mannington.com

For your reference, fill in the information and keep this sheet handy:

SKU number: _____

Purchase date: _____

Retailer where you purchased your Laminate Floor: _____

Store phone number: _____

**Be sure to register your new floor at
Mannington.com/Register for a chance to win
\$100 and for proper warranty coverage.**