

LPB CASCADE MODULE OCI345 INSTRUCTIONS

**ModuMax mk4
Varblok 2**

IMPORTANT NOTE

THESE INSTRUCTIONS MUST BE READ
AND UNDERSTOOD BEFORE INSTALLING,
COMMISSIONING, OPERATING OR
SERVICING EQUIPMENT



12/2025
249529 A01



Customer After Sales Services

Telephone: 03330 040395

E-mail: service@hamworthy-heating.com

Technical Enquiries

To supplement the detailed technical brochures, technical advice on the application and use of products in the Hamworthy Heating range is available from our technical team and our accredited agents.

Site Assembly

Hamworthy offer a service of site assembly for many of our products where plant room access is restricted. Using our trained staff we offer a higher quality of build and assurance of a boiler built and tested by the manufacturer.

Commissioning

Commissioning of equipment by our own engineers, accredited agents or specialist sub-contractors will make sure the equipment is operating safely and efficiently.

Service Contracts

Regular routine servicing of equipment by Hamworthy service engineers inspects the safety and integrity of the plant, reducing the risk of failure and improving performance and efficiency. Service contracts enable you to plan and budget more efficiently.

Breakdown service, repair, replacement

Hamworthy provide a rapid response breakdown, repair or replacement service through head office at Poole and accredited agents throughout the UK.

Spare Parts

We offer a comprehensive range of spare parts, providing replacement parts for both current and discontinued products. Delivery options are available to suit you. Please refer to our website for more details.

ModuMax mk4 & Varblok 2

- **Condensing, Fully Modulating, Pre-Mix, Gas Fired, Modular Boilers for Heating and Domestic Hot Water Installations**
- **Natural Gas I2H**
- **LPG Propane I3P**
- **The ModuMax boiler is intended for use as a commercial appliance.**
- **This boiler is for use on Group H natural gas (2nd family) I2H and LPG propane (3rd family) I3P. Please make sure the relevant information within this document for each specific gas requirement is adhered to prior to firing the boiler.**
- **Country of destination : United Kingdom & Republic of Ireland.**
- **This boiler complies with all relevant European Directives.**

LITERATURE SYMBOLS

 **WARNING: Risk of injury or death.**

 **CAUTION: Risk of damage to objects.**

 **IMPORTANT: Notes to make you aware.**

CONTENTS

1.0	INTRODUCTION	4
2.0	KIT CONTENTS	4
3.0	FITTING THE OCI345	5
4.0	CONNECTING THE RIBBON CABLE HARNESS.....	5
5.0	CONNECTION BETWEEN CASCADED BOILERS.....	6

FIGURES

Fig 1.	Kit Contents.....	4
Fig 2.	OCI345 Module Installation Position.....	5
Fig 3.	OCI345 Module Electrical Connection	5
Fig 4.	Electrical Connection Multiple Boilers.....	6

1.0 INTRODUCTION

The following document provides instructions on how to install a cascade module kit, which allows individual appliances to be connected into a single common heat generator system.

This also allows the entire cascade of appliances to be controlled from a single input to the master appliance. The master appliance then serves as the manager of all the connected slave appliances within the cascade.

2.0 KIT CONTENTS

The kit consists of the following parts:

- OCI345 Module (Ribbon Cable) - (A)
- Module fixings – (B)

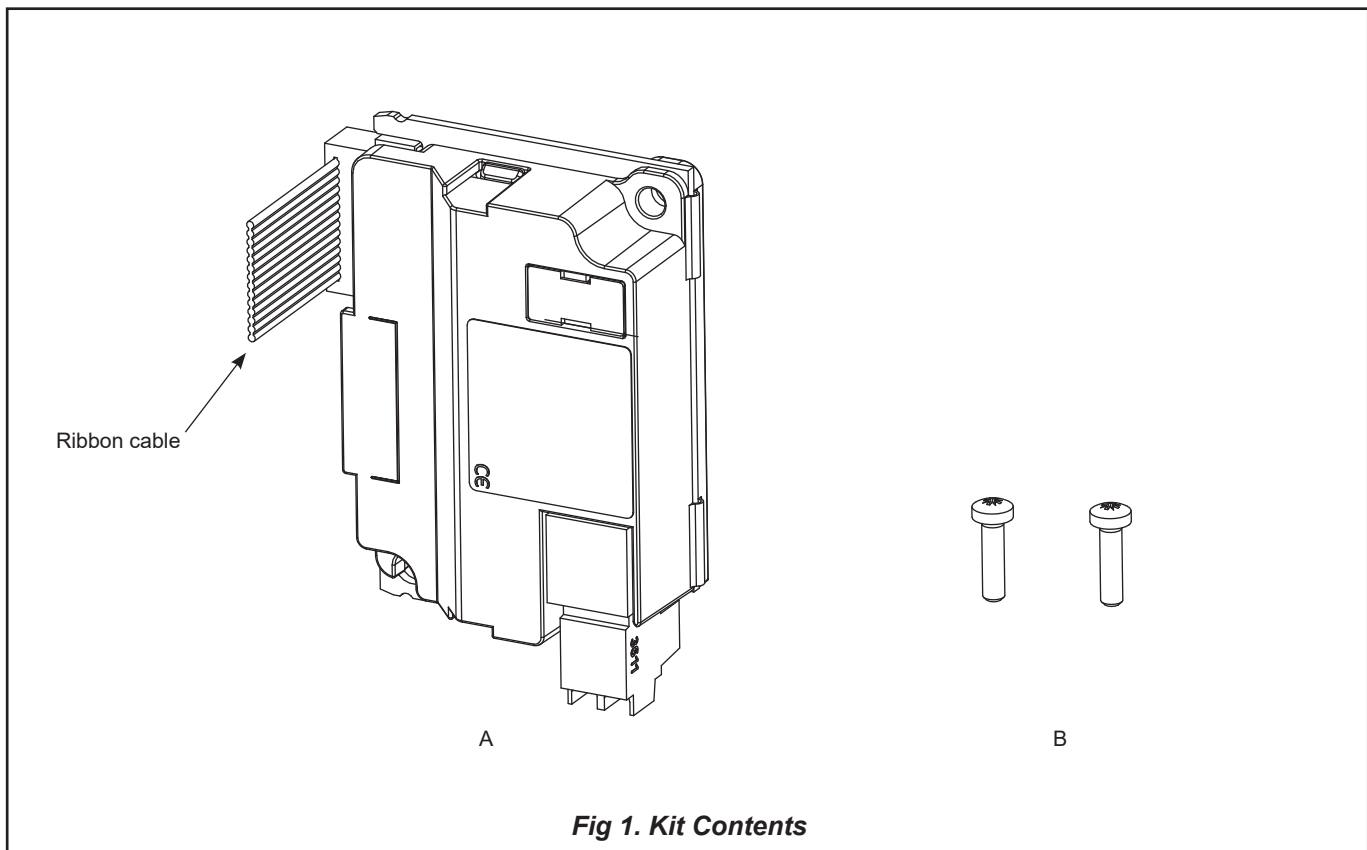


Fig 1. Kit Contents

The electrical wiring needs to be provided by the installer. The electrical wiring should be 2 core PVC insulated cable NOT LESS than 0.5mm², with a maximum length of 20m.


NOTE. Wiring external to the appliance **MUST** be in accordance with the current I.E.T. (BS7671) wiring regulations and any local regulations which apply. For Ireland reference should be made to the current ETCI rules for electrical installations.

3.0 FITTING THE OC1345 MODULE

Switch off and isolate the electricity supply to the boiler and any external controls.


Refer to the boiler installation instructions for how to access the boiler electrical connections.

Fit the OC1345 Module utilising the standoffs of the LMS and module fixings as shown in Figure 2.

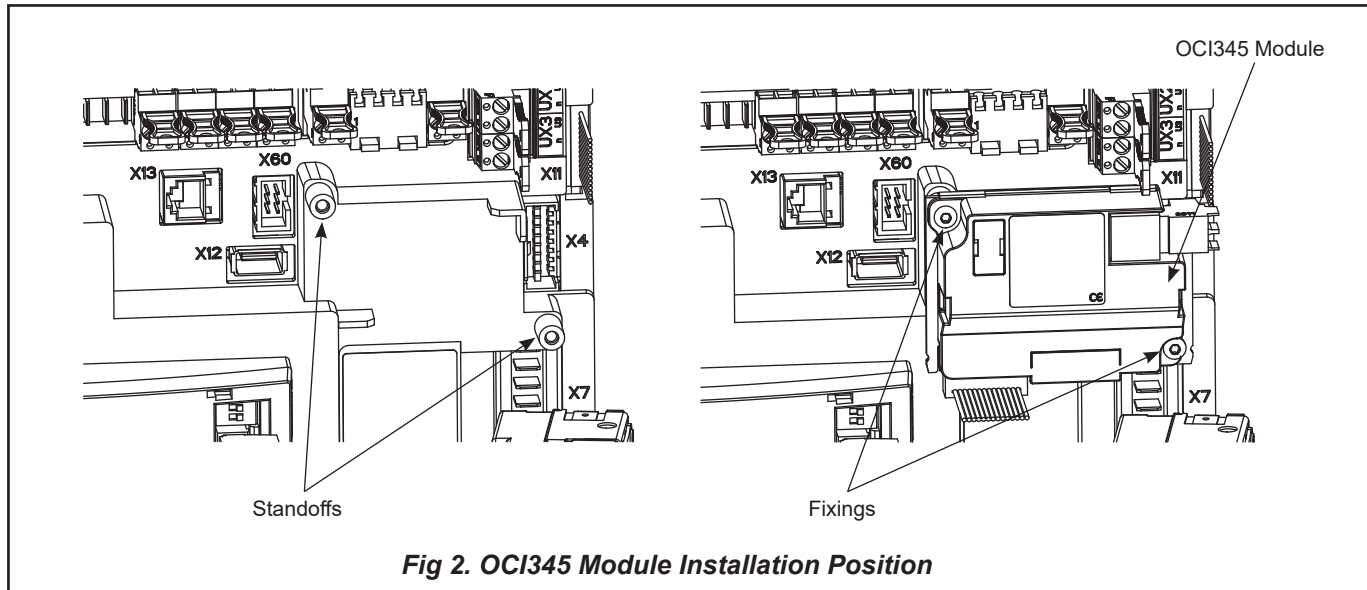


4.0 CONNECTING THE RIBBON CABLE HARNESS

Fit the ribbon cable of the OC1345 Module to Connector X11 of the LMS, as shown in Figure 3.

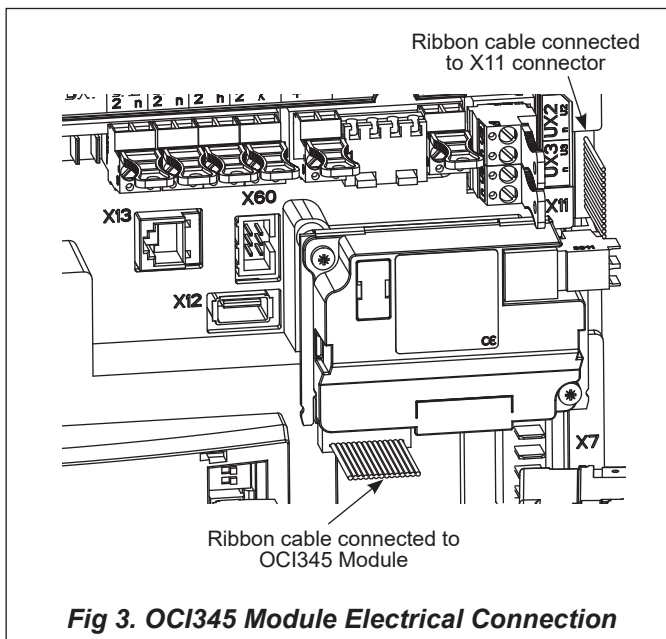

5.0 CONNECTION BETWEEN CASCADED BOILERS

The connection between the boilers is made using the connector on the OCI345 module. Connect wires from DB & M to the corresponding connections on any OCI345 modules in the other appliances within the cascade, as shown in Figure 4.

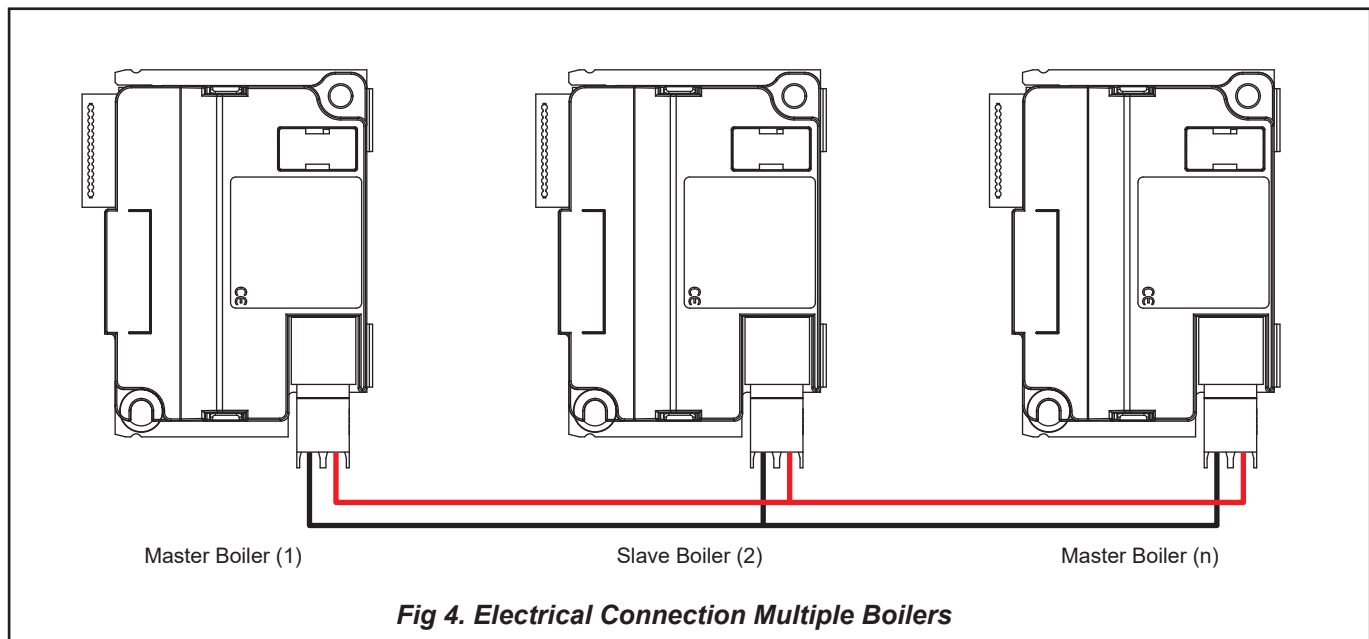

Refer to the boiler installation instructions for how to reattach the front cover and switch on the electricity supply to the boiler.

Refer to the full controls guide for instructions on how to commission the cascade functionality on the boiler.

NOTE. A maximum of 16 boilers can be connected in a single cascade.

NOTES

Hamworthy Heating Accredited Agents

Southern Ireland (Sales & Service)
HEVAC Limited, Naas Road, Dublin 12 Ireland
T: 00 353 141 91919
E: info@hevac.ie

Scotland (Sales & Service)
McDowall Modular Services
2 Penson Road, Queenslie Industrial Estate, Glasgow, G33 4AG
T: 0141 336 8795
E: MMS@hamworthy-heating.com

Hamworthy Heating Customer Service Centre

Sales
T: 01202 662552 | E: sales@hamworthy-heating.com

Technical Enquiries
T: 01202 662552 | E: technical@hamworthy-heating.com

Servicing
T: 03330 040395 | E: service@hamworthy-heating.com

Spares
T: 01482 498665 | E: spares@hamworthy-heating.com



Hamworthy Heating
PO Box 103
National Avenue
Kingston Upon Hull
HU5 4JN

hamworthy-heating.com

Hamworthy reserves the right to make changes and improvements which may necessitate alteration to the specification without prior notice.