

# ENGINEERING BULLETIN

**Subject:** Instinct/Prestige Vent Terminations

**Date:** 7/27/2021 EB0065

The Instinct Vent Guide and Prestige Vent Guide shows multiple installations where the combustion air termination comes out of the sidewall and terminates in the horizontal position (shown in Figs. 8, 12, 13). This should be shown with the combustion air termination with an additional 90° elbow pointing down toward the ground.

The Combustion Air Termination in the horizontal orientation may lead to rainwater getting into the piping under specific weather conditions.

Instinct and Prestige venting termination configurations in figs 8, 12, and 13 are no longer allowed. All affected installations should be adjusted so that the combustion air piping terminates with 180° bend with the intake opening facing the ground using two 90° elbows. The termination must be located 12" [30.5 cm] (18" [45.7 cm] in Canada) above the highest anticipated snow level.

**The following terminations configurations are no longer allowed**

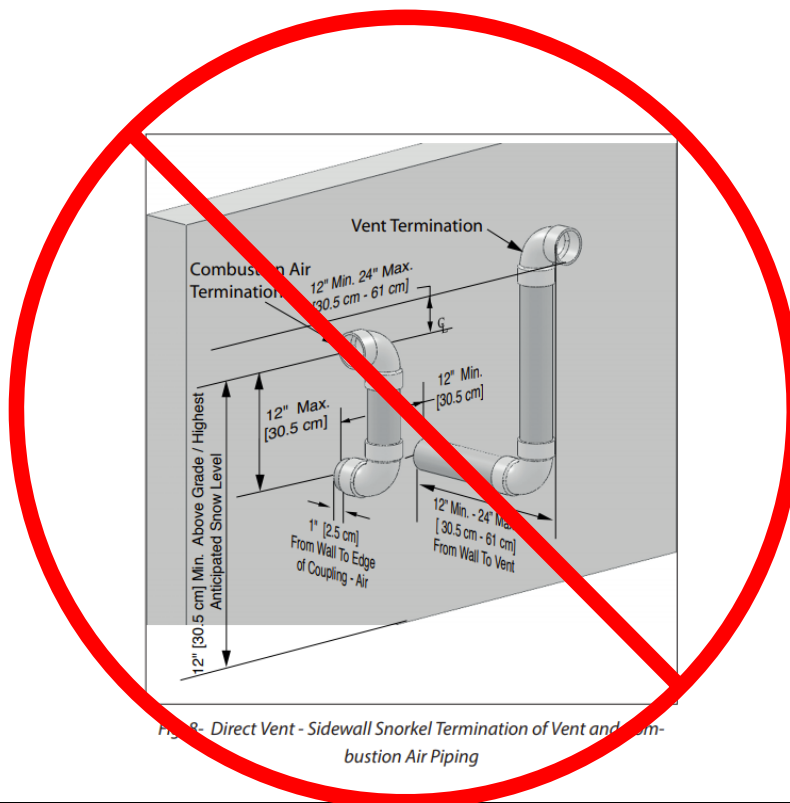


Fig. 8 - Direct Vent - Sidewall Snorkel Termination of Vent and Combustion Air Piping

Triangle Tube - 1240 Forest Parkway, Suite 100 - West Deptford, NJ 08066  
Tel: (856) 228-8881 - Fax: (856) 228-3584 - e-mail: [info@triangletube.com](mailto:info@triangletube.com)

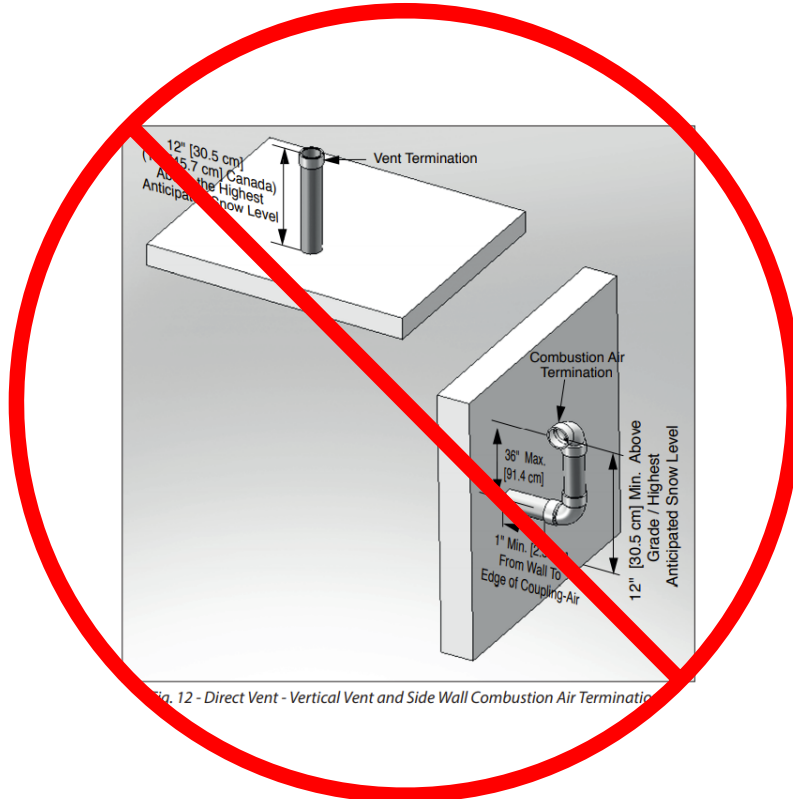


Fig. 12 - Direct Vent - Vertical Vent and Side Wall Combustion Air Termination

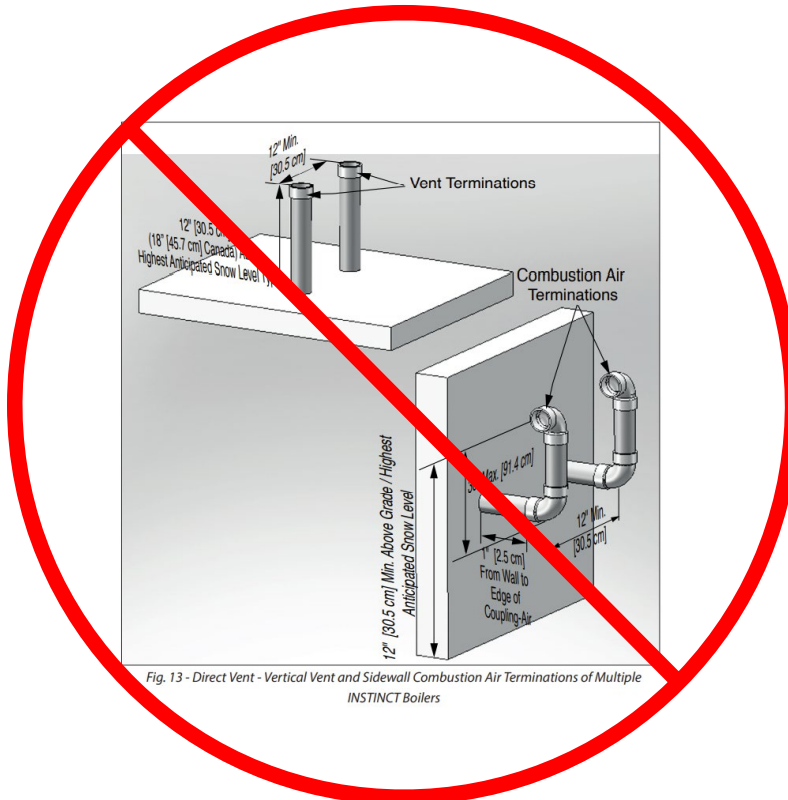


Fig. 13 - Direct Vent - Vertical Vent and Sidewall Combustion Air Terminations of Multiple INSTINCT Boilers

These images are to be replaced with the following images:

Triangle Tube - 1240 Forest Parkway, Suite 100 - West Deptford, NJ 08066  
 Tel: (856) 228-8881 - Fax: (856) 228-3584 - e-mail: [info@triangletube.com](mailto:info@triangletube.com)

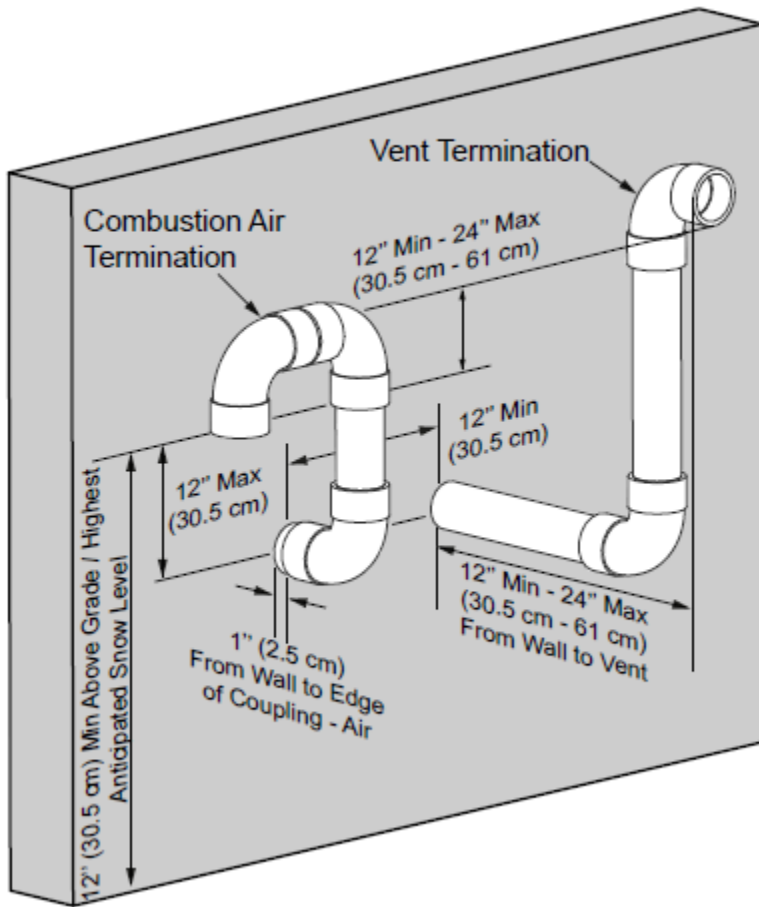


Fig. 8

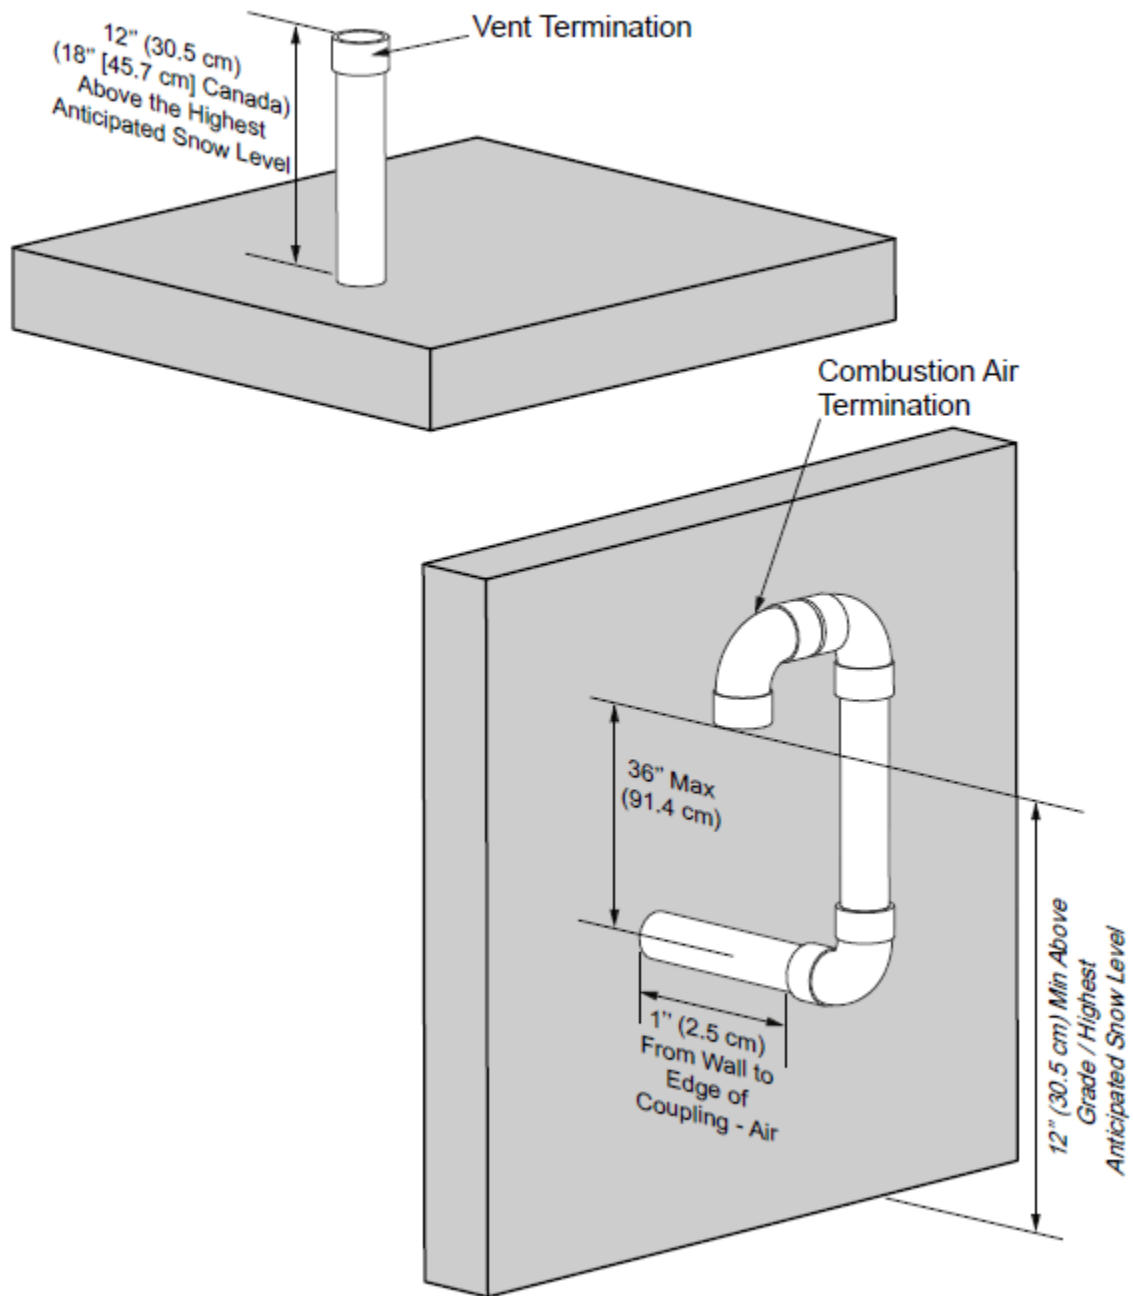


Fig. 12

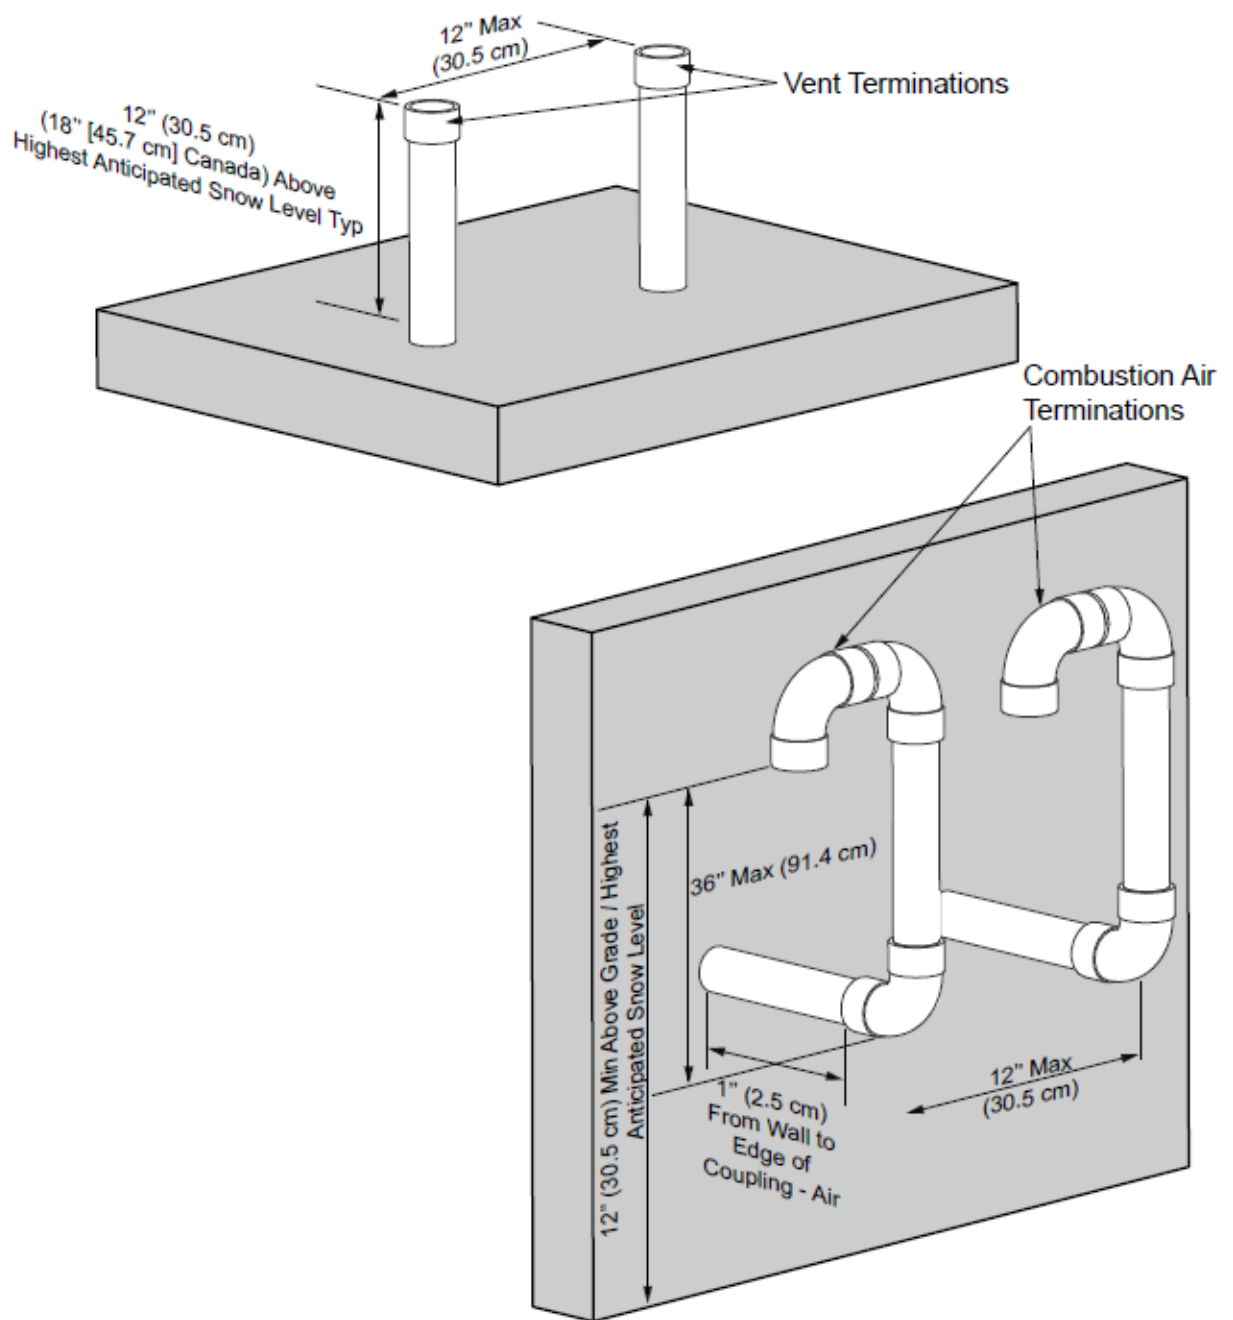


Fig. 13

Please contact technical support at [techsupport@triangletube.com](mailto:techsupport@triangletube.com) (856) 228-8881 x575 with any questions.