




## Hygroscopic Air Vent Instructions

Parts List: P3AVT01

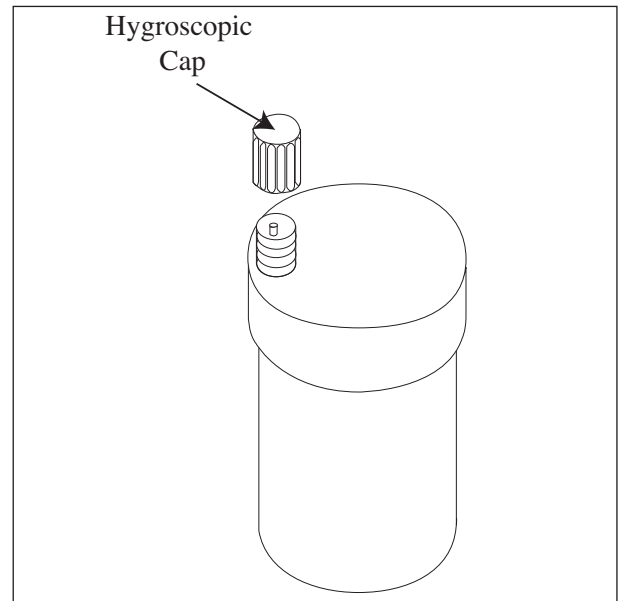

### **NOTICE**

Indicates special instructions on installation, operation or maintenance, which are important to equipment but not related to personal injury hazards.

### **NOTICE**

This PARTNER tank is supplied with a special automatic air vent that will provide reliable operation in purging air from the tank. The hygroscopic cap supplied with the automatic air vent **MUST** remain tight at all times on the air vent body. The hygroscopic cap has a membrane which expands upon contact with water and seals the air vent until the membrane dries up due to new air forming in the air vent.

### **Installation Guidelines.**

1. Make sure to fully tighten the cap on the air vent on initial installation.
2. Never loosen the hygroscopic cap to allow air to escape the air vent. Air will exit with the cap fully tightened in place.
3. If the hygroscopic cap is not fully tightened, water may leak from the cap. Simply tighten the cap securely.