
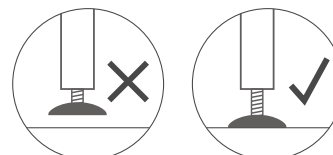


Care and Maintenance:

Door Adjustment

LEVEL ADJUSTMENT

Before placing items inside or on top of your cabinet, be sure that each level foot has been adjusted so that it makes contact with the floor. With the cabinet in place, turn the level foot counter-clockwise until it rests on the floor firmly. This will help to keep the unit level and prevent door mis-alignment.

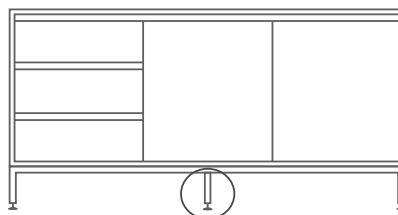


DOOR ADJUSTMENTS



VERTICAL

To adjust one of the doors up or down, loosen all four of the vertical alignment screws (two per hinge). Gently slide the door up or down to the desired position and tighten the screws.

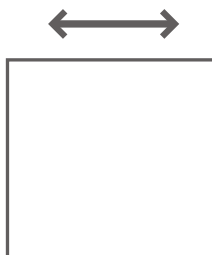


HORIZONTAL

To adjust one of the doors side-to-side, turn both of the horizontal alignment screws (one per hinge) in the same direction. Adjustment left or right will vary depending on which door you are adjusting.




ROTATIONAL

To rotate a door, turn the horizontal alignment screw in one direction for the top hinge, and in the opposite direction for the bottom hinge. Adjustment clockwise or counter-clockwise will vary depending on which door you are adjusting.

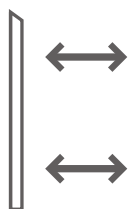

DEPTH

To adjust a door in and out from the cabinet, loosen the depth alignment screws, then move the door to the desired position and tighten the screws.

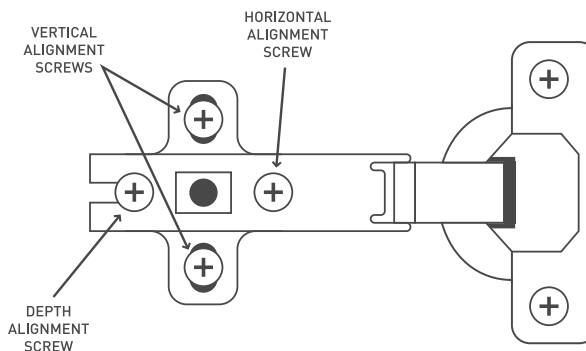

Please Note: The care instructions provided are here to assist you in the care, maintenance, and enjoyment of your Stylegarage products. Under no circumstances are we responsible for any results of the use, proper or improper, of these methods.