# INSTRUCTIONS FOR INSTALLATION OF ENTRANCE LOCKS IN NEW DOORS OR THE REPLACEMENT OF EXISTING LOCKS

## FOR USE ON DOORS 1-3/8" TO 1-3/4" (35mm~45mm) THICK

TOOLS REQUIRED FOR NEW INSTALLATION
1 phillips head screwdriver
1 2-1/8" (54mm) hole saw
1 1" (25.4mm) drill bit
1 chisel


FOLLOW ALL STEPS FOR REMODELING OR NEW CONSTRUCTION.

FOLLOW STEPS 3C,4C,5,6,7,8,9 and 10 FOR DO-IT-YOURSELF REPLACEMENT AFTER REMOVAL OF EXISTING LOCK.


REPLACING EXISTING LOCKS:
Before beginning, measure from center of lock to door edge in order to check length of backset on existing lock. The backset length of new lock is stated clearly on front of package.
If backset size is the same, you'll have to replace lock with proper size backset.


TOOLS REQUIRED FOR REPLACEMENT INSTALLATION:

1 phillips head screwdriver

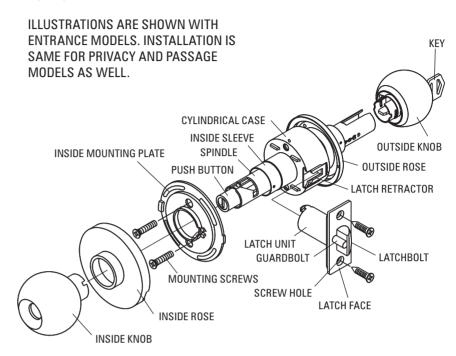

#### INSTALLATION INSTRUCTIONS

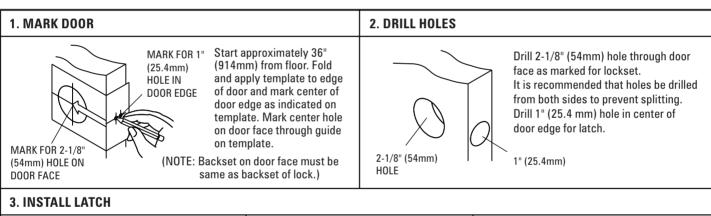

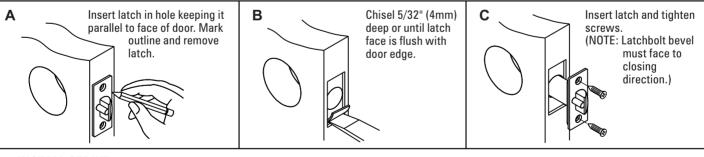

#### 4. INSTALL STRIKE



Close door until latchbolt touches jamb to locate strike in jamb and center line of strike. Open door and extend line from mark to door stop. Measure one half of door thickness from door stop and vertically mark drill point center for strike.

Drill 1" (25.4mm)
hole 1/2" (12.7mm)
deep in door jamb
on drill point for
strike.

CAUTION: To ensure proper lockset function. Hole in jamb must be drilled a full 1/2" (12.7mm) deep. Cut out jamb 1/16" (1.5mm) deep for strike. Tighten screws.





Guardbolt stops against strike, as illustrated, preventing forcing when door is closed. Adjustable tang on strike permits bending in or out to

eliminate too loose fit between door and door stop.

EA1 FA1

#### **5. REMOVE INSIDE TRIM**

Use nail end of wrench provided to depress



inside knob catch in hole of inside sleeve collar and slide knob or in side lever off spindle.

Depress spring attached to inside rose. Insert nail end of wrench into slot to remove inside rose plate.




Remove inside rose and mounting plate.

#### 6. ADJUST OUTSIDE ROSE


Adjust lock to fit door thickness by rotating outside rose.

Lock will fit all doors 1-3/8" to 1-3/4" (35mm~45mm) thick.

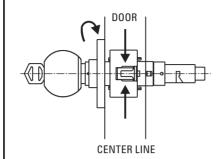

#### 7. INSTALL LOCK

Latch unit must be in place before installing lock. Be sure lock housing engages with latch prongs and retractor interlocks with latch tail.

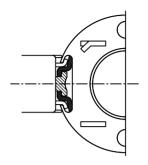

#### 8. INSTALL INSIDE ROSE

#### A. FOR WOODEN DOOR


Tighten machine screws securely to install mounting plate.

Press rose onto mounting plate.

Be sure to fit rose in recess of mounting plate.

#### **B. FOR METAL DOOR**

MOTE: Make sure that mounting plate fit horizontally into slots notched in door.

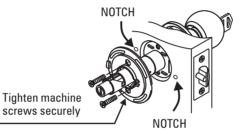



#### IMPORTANT-

Align lug on knob with narrow slot on side of spindle and push knob all the way in until knob catch clicks into slot on knob.

9. INSTALLATION OF INSIDE KNOB

 Otherwise knob will jamb on shaft.

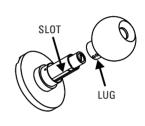



Tighten machine screws securely

#### **10. RIGHT KEY HOLE POSITION**

Upon installation of the lock, it may happen that key hole faces upward or downward as shown in the following drawing. It is advisable to correct all key hole to be facing downward.



DOWNWARD CORRECT



#### 11. IN ORDER TO ADJUST THE ABNORMAL STATE OF THE KEY HOLE FACING UPWARD. THE KNOB MUST BE PULLED OUT AND INSTALLED AGAIN. THE METHOD OF INSTALLATION IS DESCRIBED AS BELOW D.

a First turn the knob clockwise until the knob catch appears in the small hole.



With the other hand. turn the key counterclockwise within the limit of 30° ∼90°



Using a small nail to press the knob catch and pull the knob out.

 


Install again according to the correct direction.



### **TEMPLATE**

Fit here on door edge



Mark 1" (25.4mm) hole at center of door edge.

### 54mm (2-1/8") **BACKSET 70mm (2-3/4") BACKSET 60mm (2-3/8")** 5.5mm (7/32") x2 HOLE 8mm (5/16") DEEP 64mm (2-33/64") FOR METAL DOOR ONLY

EA1 Rev. 10/21/2008