


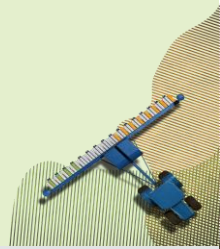

Intro to: SmartBox+ Operation



This document introduces SmartBox+ field operation, for additional details visit: SIMPAS.com/resources

Before starting the system:

The system will not run without the following inputs, verify the following:

1. Speed
2. A valid target rate
3. The Implement switch/Lift switch must be in the planting position
4. The Master switch must be 'On'

Starting the system

1. To start the system, touch the Master switch icon

What to watch when running

While the system is running observe the following items to ensure the system is functioning correctly:

1. As-applied rate
 - The As-applied rate indicates the average applied rate for all rows in the system, if this is below the target there could be an issue
2. Blockage indicators
 - The blockage indicators provide flow information for each row:
 - Green – product is flowing
 - Red – Product is blocked
 - Red/Yellow stripe – Product is not flowing (possibly due to an empty SmartBox+ product container)

