


WANDERBLISS™ PORTABLE DIFFUSER

User Manual

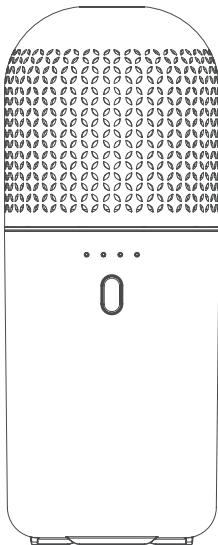

Language

English

3

Overview



The WanderBliss™ Portable Diffuser is your stylish sidekick for any winter wonderland or holiday adventure.

Exclusively designed for Young Living, this little diffuser runs for up to 3 hours unplugged or up to 5.5 hours non-stop and 12 hours intermittently when plugged in. Simply add water and your favorite Young Living® essential oils to fill any space with the delightful scents of the season.


Contents

- WanderBliss Portable Diffuser
- USB charger cable (type C)
- User manual


Diagram

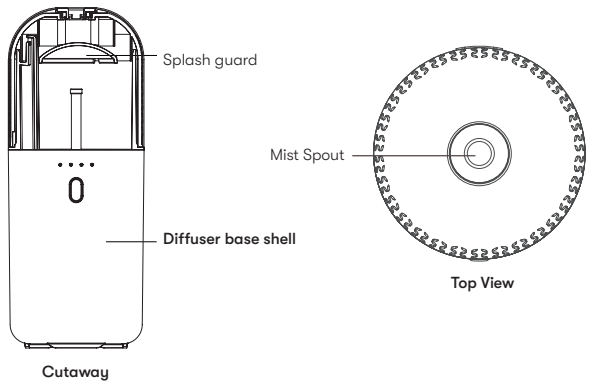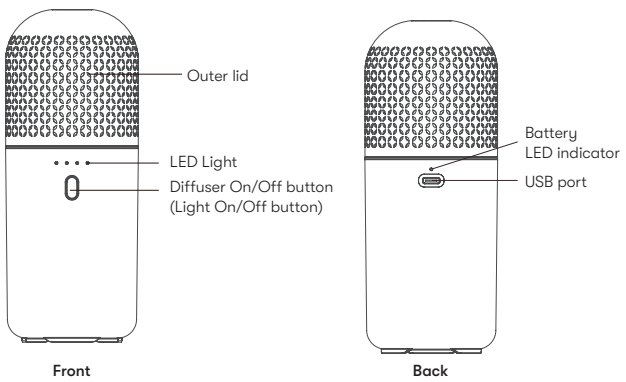


Diagram

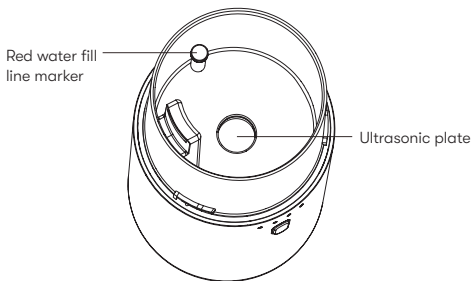

Diffuser Base

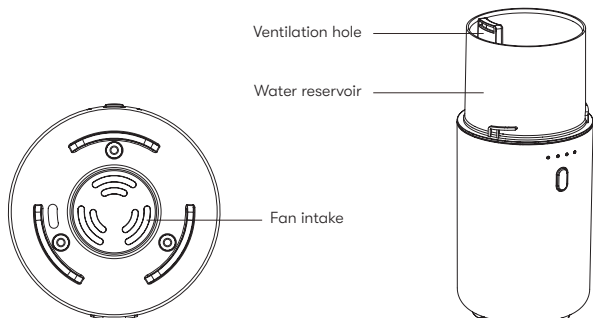


Bottom

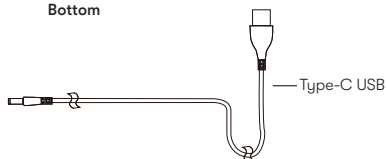


Operating Instructions



 
1



2

 


3

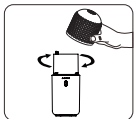


4


1. Twist and then remove outer cover.
2. Add water until level reaches, but does not exceed, the red water fill line marker
3. Add 3-4 drops of essential oil.
4. Replace outer cover and rotate until it locks into place.

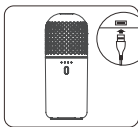

5

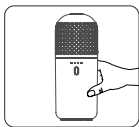


6

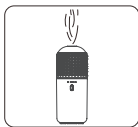

7

5. Plug the USB cable into a power outlet
(If you haven't charge the diffuser before)
6. Press the On/Off button to switch on.
7. The unit should produce mist, and the LED light should be on.

Functionality

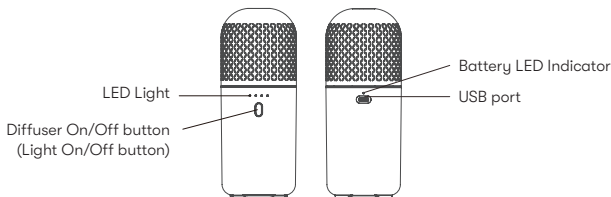

Charging function

- To maintain the battery's health, please charge the device before first use.
- The charging time is about 4.5 hours from 1 to 100 percent charge.
- The battery can power the diffuser for up to 3 hours continuously.
- When plugged into USB power, the diffuser can operate continuously until the reservoir is empty.

On/Off button settings

- Press once to turn on the diffuser. The default white light will be on, and the diffuser will run until the reservoir is empty.
- Press twice to set the diffuser to run for 30 minutes and then shut off automatically.
- Press three times to set the diffuser to run for 5-minutes on/5-minutes off intervals until the reservoir is empty.
- Press four times to set the diffuser to run for 30-seconds on/30-seconds off intervals until the reservoir is empty.
- Press five times to turn off the diffuser.

LED light settings

- When the default light is on, hold the button for two seconds to turn off the LED light.
- Hold the button for another two seconds to turn on the LED light.
- The LED red light will flash three times if the water level is low.

Battery LED indicator

- Charging (candlelight)
- Full battery (white light)
- Low battery (flashing candlelight three times)

Note

- A slight difference in mist amount produced by different units is expected.
- Factors affecting the mist amount include water, humidity, temperature, and airflow.
- The diffuser will shut off automatically when the water reservoir is empty or when it is tipped over.


Safety and Care Instructions

Please read and follow these safety guidelines closely to ensure safe operation of the diffuser.


- Unplug the diffuser immediately and discontinue use in the event of smoke or a burning smell.
- Use room-temperature tap, spring, or distilled water.
- Never wrap the adapter with cloth, paper, etc. Such actions may result in damage to the diffuser or fire.
- Never touch the adapter with wet hands; electric shock or injury may occur.
- Do not disassemble or attempt to repair the diffuser; this will void the warranty.
- Do not remove or place objects in the water reservoir during operation.
- Do not place your fingers in the water during operation; this may result in injury.
- Do not place acidic or alkaline chemicals in the reservoir.
- Use only the included USB power cable provided in the packaging or by Young Living.
- Any damage caused by the user does not qualify for replacement by Young Living.
- Do not use metal objects to clean the ultrasonic plate; use only a cotton swab or cloth dipped in rubbing alcohol, vinegar, or Thieves® Household Cleaner.
- Never use the diffuser for purposes other than those listed in this manual.
- If the diffuser will not be used for an extended period or needs to be relocated, unplug the power adapter, empty the water reservoir, and wipe the unit clean before storage.

- Clean the diffuser before switching to different essential oils.
- Use only authentic essential oils. Artificial, synthetic, or impure oils and fragrances can damage the diffuser.
- The water reservoir level should not exceed the water fill line.
- When unplugging the power adapter, pull from the adapter plug instead of pulling the wire.
- Avoid placing the product under direct sunlight, close to a refrigerator or fan, or in a hot environment. Do not leave in a hot vehicle for a long period of time.

Cleaning and Maintenance

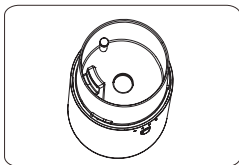

Notice:
When emptying
the water reservoir,
pour water from the
opposite side of the
base ventilation hole

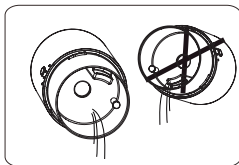

Notice: When emptying the water reservoir, pour water from the opposite side of the base ventilation hole.

- Always turn off and unplug the diffuser prior to cleaning.
- To ensure proper performance, clean the ultrasonic plate and lid after each use.
- If essential oil begins to build up on the ultrasonic plate, gently wipe it off using a cotton swab dipped in rubbing alcohol, vinegar, or Thieves® Household Cleaner.
- If essential oil begins to build up on the lid, gently wipe it off using mild soap and water only. Never use a corrosive detergent to clean the ultrasonic plate or damage will occur.
- Periodically check under the diffuser to keep the fan intake free of debris. Debris can be removed by blowing on the fan intake opening or wiping with a clean, dry cloth. Do not use aerosol sprays, solvents, or abrasives to clean the plastic housing.
- When the diffuser is not in use, clean it and let it dry before storing.

Troubleshooting

When switched on, the diffuser does not operate. (Potential issues: low battery, water above water fill line marker.)

- Charge the diffuser for up to 4.5 hours. Check that the adapter is securely plugged into the wall socket and the rear of the diffuser.
- Check that water is in the reservoir and it is not above the red water fill line marker. If there is too much water, unplug the unit and carefully pour out the excess water from the opposite side of the base ventilation hole. When you restart the diffuser, the light should come on and the diffuser should mist.

There is no mist or less mist than usual. (Potential issues: water above fill line, oil buildup on the ultrasonic plate, ultrasonic plate has stopped working, fan vents or mist spouts are obstructed, fan is not working.)

Unplug the diffuser before performing the following procedures:

- Check the water level. If the water is above the water fill line, carefully pour out the excess water from the opposite side of the base ventilation hole.
- With the outer lid in place, verify that the mist spout holes, on the outer lid, are clear and free from any debris.
- Check for essential oil buildup on the ultrasonic plate. If oil buildup is present, follow the cleaning instructions. The ultrasonic plate must be free of residual oil buildup for the diffuser to operate properly.
- Check that the fan intake under the diffuser is free of any obstruction or debris that may restrict airflow. (After the diffuser is on, you should hear the fan.)
- Refill the water reservoir to the water fill line marker and restart.

The light does not work. (Potential issue: power connection.)

- Press the On/Off button to verify that the light is functioning. If the light does not work, call Member Services for further instructions.

Water is leaking from the unit. (Potential issue: outer lid is not locked in place.)

- Verify that the outer lid is in place. If the external air temperature is very low or there is a high level of humidity in the air, the diffuser mist may condense into water droplets.

When switched on, the light flashes once and then shuts off. (Potential issue: no water in the diffuser.)

- Check that water is in the reservoir and it is not above the red water fill line marker. If there is too much water, unplug the unit and carefully pour out the excess water from the opposite side of the base ventilation hole, then restart the diffuser.

Specifications

Product Name:	WanderBliss™ Portable Diffuser
Item No.:	44301
Dimensions:	172 mm height × 70 mm diameter
Material:	Polypropylene (PP) + Metal
Weight:	10.3 oz. (291g)
Power Source:	DC5V 5W
Atomized Particle Diameter:	5µm
Water Type:	Room-temperature tap or spring water
Container Capacity:	80 ml
Coverage Area:	Up to 20 sq. m.
Diffusion run time:	Up to 5.5 hours (up to 12 hours intermittent mode)
Ultrasonic Frequency:	2.4 million waves per second
Environment:	Indoor

Young Living Diffuser Warranty

Young Living Essential Oils (YLEO), 1538 W. Sandalwood Dr., Lehi, UT 84043, subject to the exclusions contained below, warrants its diffuser to be free from defects in materials and workmanship under normal consumer usage for 12 calendar months from the date of original purchase.

This warranty does not cover:

1. Defects or damage resulting from using the diffuser in a way that it's not intended to be used
2. Defects or damage from misuse, accident, or neglect
3. Defects or damage from using oils other than those supplied or sold by Young Living Essential Oils or an authorized distributor
4. Defects or damage from using materials other than essential oils
5. Defects or damage from improper testing, operation, maintenance, installation, adjustment, or any alteration or modification of any kind

6. Breakage or damage caused by use of other than the specified voltage
7. Products disassembled or repaired by anyone other than a Young Living Essential Oils-authorized agent so as to adversely affect performance or prevent adequate inspection, verification, and testing to verify any warranty claim. If there are any signs the diffuser has been opened, the warranty will be void.
8. Products with labels removed or illegible serial numbers
9. Marring, such as scratches, on any plastic surfaces and externally exposed parts resulting from normal use
10. Damage resulting from normal wear and tear
11. Damage resulting from the use of metal tools to clean the unit

This limited warranty is the buyer's exclusive remedy, applies to new diffusers purchased from Young Living Essential Oils, and is non-transferable. Please retain your original purchase receipt. In the event of a warranty claim or return for repair, a copy of the purchase receipt should accompany the diffuser when shipped to YLEO.

To make a warranty claim or to purchase spare parts, please contact Young Living Member Services at 1.800.371.3515 (6 a.m.–8 p.m., MT, Monday–Friday and 7 a.m.–5 p.m., MT, Saturday). If it is determined by Member Services that the diffuser is to be shipped back to YLEO, the buyer will need to send the product back in its original box (if available) with the power adapter, a copy of the original purchase receipt, and the YLEO Return Merchandise Authorization (RMA#) displayed clearly on the receipt, which will be provided by Member Services.

U.S. Shipping:

Young Living Essential Oils Returns/RMA# _____

142 E. 3450 N.

Spanish Fork, UT 84660

Canada Shipping:

Young Living Essential Oils/RMA# _____

Suite 142 701 64 Ave S.E

Calgary, AB T2H 2C3



This device can be used by children ages 8 years and above and people with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they are supervised or instructed on safe usage and understand the hazards involved. Children should not play with the device, and cleaning or maintenance by children should always be supervised.



1538 W. Sandalwood Drive
Lehi, UT 84043
YoungLiving.com

Designed for
Young Living Essential Oils

Manufactured in China