

bella^{PRO}

MultiBrew Coffee Maker

Instruction Manual



Scan to register
bellakitchenware.com



TABLE OF CONTENTS

IMPORTANT SAFEGUARDS..... 3-4

ADDITIONAL IMPORTANT SAFEGUARDS.....5

NOTES ON THE PLUG..... 6

NOTES ON THE CORD..... 6

ELECTRIC POWER..... 6

COFFEE YIELD 7

REUSABLE FILTER BASKET 7

GETTING TO KNOW YOUR MULTIBREW COFFEE MAKER8

TOUCH-ACTIVATED DISPLAY CONTROL PANEL.....9-10

BEFORE BREWING DRIP COFFEE FOR THE FIRST TIME..... 11

DRIP COFFEE BREWING OPERATION..... 11

PAUSE & SERVE..... 11

BREW LATER.....11-12

BEAUTIFUL HINTS FOR GREAT TASTING COFFEE 12

BEFORE BREWING SINGLE SERVE FOR THE FIRST TIME..... 12

SINGLE SERVE BREWING OPERATION.....12-13

SINGLE SERVE HOT WATER 13

USER MAINTENANCE INSTRUCTIONS 14

CARE & CLEANING INSTRUCTIONS..... 14

CLEAN 14

STORING INSTRUCTIONS 14

WARRANTY 15



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surface. Use handles or knobs only.
3. This Coffee Maker is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Close supervision is necessary when any appliance is used by or near children.
5. In order to minimize the risk of property damage, never place the Coffee Maker under cabinets. Make sure the area several feet above the Coffee Maker is clear from all furniture or cabinetry.
6. Do not open any lid while coffee is brewing. Scalding may occur if any of the lids are lifted during any coffee brewing cycle.
7. Do not use outdoors.
8. Unplug Coffee Maker from the electrical outlet and allow to cool before cleaning, putting on or taking off parts.

CAUTION: There are 2 sharp needles that puncture the capsules. One is located inside the capsule adaptor.

and the other is located on the top underside of the adaptor compartment. To avoid risk of injury do not place fingers inside either parts. Exercise caution when cleaning single serve capsule brewing parts.

9. To protect against fire or electrical shock, do not immerse cord, plugs, or appliance in water or other liquids.
10. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service.

NOTE: do not attempt to repair the unit yourself. This will void the warranty.

11. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
12. Never move the appliance by pulling the cord. Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
13. Stand the appliance on a table or flat surface.
14. Do not use a cracked glass carafe or a carafe having a loose or weakened handle.
15. Only use the glass carafe with this appliance. Handle with care as the glass may become hot.
16. Snap lid securely onto glass carafe before serving coffee.
17. Never use your Coffee Maker without water in the water reservoir.
18. Do not place appliance on or near a hot gas or electric burner or in a heated oven.
19. The carafe is designed for use with this appliance. It must never be used on a range top.

20. Do NOT place carafe into a microwave oven
21. Do NOT set hot glass carafe on a wet or cold surface.
22. Do NOT clean glass carafe with cleaners, steel wool pads, or other abrasive material.
23. Before unplugging, make sure that the Coffee Maker is not in brewing mode. Press the BREW CARAFE/OFF button to turn the Coffee Maker off. Press the PROGRAM button if the PROGRAM indicator light is illuminated. Press any active BREW CARAFE/OFF or BREW SINGLE or OVER ICE button if either indicator light is illuminated. To disconnect, immediately remove plug from wall outlet.
24. To interrupt the brewing cycle at any time, press BREW CARAFE/OFF. Unless the Coffee Maker is malfunctioning, do not remove plug from wall outlet. Unplug the power cord from the electrical outlet when the appliance is not in use, left unattended, or when the carafe is empty.
25. Be certain all 3 lids are down, and securely in place before operating.
26. Do not use this appliance for other than its intended use.
27. To reduce the risk of fire, do not place unit over or near any portion of a heating or cooking appliance.
28. To reduce the risk of electric shock, do not mount over a sink.
29. To reduce the risk of fire, do not store anything directly on top of the appliance surface when the appliance is in operation.
30. Only use capsules intended for this appliance.
If the capsule does not fit, do not force the capsule into the appliance.
31. **WARNING:** To avoid the risk of injury, do not open the brew chamber during the brewing process.
32. The use of an accessory not evaluated for use with this appliance may cause injuries.
33. Do not use and extension cord.
34. Do not place in a cabinet when in use.
35. Cleaning and user maintenance shall not be performed by children without supervision.
36. **WARNING:** The water tank lids, and coffee compartments should not be opened during use.
37. **WARNING:** Do not spill on the warming plate.
38. **WARNING:** Do not touch hot surfaces, the warming plate is subject to residual heat after use.
39. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified.
40. It is recommended to use a heat-resistant trivet or cutting board underneath this appliance to avoid possible heat damage to the countertop.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING: This Coffee Maker generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

1. All users of this Coffee Maker must read and understand this instruction manual before operating or cleaning this Coffee Maker.
2. The cord to this Coffee Maker should be plugged into a 120V AC electrical outlet electrical outlet only.
3. Use water only in this Coffee Maker! Do not put any other liquids or food products in this Coffee Maker. Do not mix or add anything to the water placed in this Coffee Maker, except as instructed in the CLEAN section of this instruction manual to descale the Coffee Maker.
4. DO NOT attempt to move a Coffee Maker containing hot liquids. Allow Coffee Maker to cool completely before moving.
5. Keep Coffee Maker at least 4 inches away from walls or other objects during operation. Do not place any objects on top of Coffee Maker while it is operating. Place the Coffee Maker on a surface that is resistant to heat.
6. If this appliance begins to malfunction while brewing drip coffee, press the BREW CARAFE/OFF button. Then immediately unplug the cord. If this appliance begins to malfunction while brewing single serve, press the active BREW SINGLE button; then immediately unplug the cord. Do not use or attempt to repair the malfunctioning appliance. Call Consumer Service.
7. If this Coffee Maker falls or accidentally becomes immersed in water or any other liquid, unplug it immediately. Do not reach into the water! Do not use this Coffee Maker after it has fallen into or has become immersed in water.

CAUTION: Allow 15 minutes for the Coffee Maker to cool sufficiently before adding water to the water reservoir.

8. Always use fresh, cool water in your Coffee Maker. Warm water or other liquids, except as listed in cleaning section, may cause damage to the Coffee Maker.
9. DO NOT put carafe into a microwave oven.
10. DO NOT leave empty carafe on warming plate when the Coffee Maker is turned ON, as the carafe may crack or become otherwise damaged. Press BREW CARAFE/OFF to turn Coffee Maker off.
11. This Coffee Maker is equipped with Pause & Serve. The flow valve is located on the bottom of the removable filter basket and is activated when the carafe is removed. This design makes it possible for you to remove the carafe and pour a cup of coffee before the entire carafe is brewed.

CAUTION: To prevent injury when utilizing the Pause & Serve feature, replace carafe within 30 seconds of removing during brewing process.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

NOTES ON THE CORD

- A. A short power-supply cord (or detachable power-supply cord) is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
 1. The marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance;
 2. If the appliance is of the grounded type, the extension cord should be a grounding- type 3-wire cord;
 3. The longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.



COFFEE YIELD

Coffee Maker: 12 (5-oz.) cups

NOTE: A 5-oz. cup is the American industry standard and is used by most Coffee Maker manufacturers. To fill your favorite over-sized mug, fill Coffee Maker reservoir with enough water for 3 to 4 cups (15 to 20 ounces).

NOTE: The amount of brewed coffee will always be less than the amount of water placed into the water reservoir; as much as 10% may be absorbed by coffee grounds and filter.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE THE BOTTOM COVER. NO USER-SERVICEABLE PARTS INSIDE. REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY.

REUSABLE FILTER BASKET

1. Eco-friendly, the reusable filter basket eliminates the need for disposable papers filters.
2. The flat-bottomed reusable filter basket sits easily on any flat, clean surface for easy, mess-free filling.
3. After brewing, lift to open the Coffee Maker lid. Unfold the reusable filter basket handle to lift it up and out of the removable filter basket holder; discard used coffee grounds, rinse and replace.
4. Fold handle down and close the Coffee Maker lid.



GETTING TO KNOW YOUR MULTIBREW COFFEE MAKER

Product may vary slightly from illustration.

1. Touch-Activated Display Control Panel
2. Carafe Lid
3. Carafe Handle
4. Carafe
5. Coffee Scoop
6. Reusable Filter Basket with Handle
7. Removable Filter Basket Holder
8. Warming Plate
9. Shower Head
10. Water Reservoir
11. Pause & Serve Flow Valve
12. Removable Single Serve Water Tank
13. Locking Adaptor Compartment Lid
14. Top Capsule Punch
15. Adaptor Compartment
16. Single Serve Coffee Spout
17. Single Serve Drip Tray Cover
18. Capsule Adaptor
19. Reusable Ground Coffee Basket
20. Adjustable Height Drip Tray
21. 2-prong 120V AC plug



TOUCH-ACTIVATED DISPLAY CONTROL PANEL

A screen that only shows up when you need it.

1. 24-hour LED Digital Clock with AM/PM indicator.
2. SOUND OFF
3. STRENGTH
4. KEEP WARM
5. 1 - 4 CUPS
6. CLOCK
7. CLEAN
8. PROGRAM
9. SELECT
10. Brew Strength – 3 options
11. HOUR and MINUTE
12. BREW CARAFE/OFF
14. Cup size indicator (shows cup size in oz)
15. BREW SINGLE (to brew a cup)
16. OVER ICE – to brew a cup over ice
17. SIZE – to select a cup size in oz



BREW
CARAFE/
OFF

- Press the BREW CARAFE/OFF button to activate the Drip Coffee unit and coffee will begin to brew.
- When the BREW CARAFE/OFF button is pressed while brewing, the unit will stop working and return to standby mode.

PROGRAM

- Press and hold the PROGRAM button for 1.5 seconds to set FUTURE BREW TIME.
- Use the HOUR and MINUTE buttons to adjust the time until the desired FUTURE BREW TIME has been selected.
- Press the PROGRAM button to confirm the FUTURE BREW TIME has been set or wait 5 seconds to confirm the time.
- The PROGRAM button will stay illuminated indicating that the coffee maker is now programmed for future brew.

HOUR

MINUTE

- Press HOUR to adjust the HOUR.
- Press MINUTE to adjust the MINUTES.
- Press and hold HOUR or MINUTE to fast reverse or fast advance time.

SIZE

- Press the SIZE button to select the single serve brew size in oz. Press again until you reach the desired size. Brews a 6oz, 8oz, 10oz, 12oz and 14oz cup. The default size is 8oz.

BREW
SINGLE

- Press the BREW SINGLE button to activate the Single Serve unit and coffee will begin to brew.

OVER ICE

- Place ice in a cup, mug or travel mug to brew over ice. Press the OVER ICE button to activate the single serve unit and coffee will begin to brew.

STRENGTH

- Press STRENGTH until STRENGTH illuminates.
- Press STRENGTH to choose from 4 brew STRENGTHS: | Regular, || Gourmet, ||| Bold or 1-4 cups.
- The active brew strength is displayed on the control panel.
NOTE: For your convenience, the last chosen brew STRENGTH will be the default for the next carafe of brewed coffee.

1-4

IMPORTANT: The 1-4 CUPS option must be programmed immediately before brewing.

- Press STRENGTH until 1-4 CUPS illuminates.
- When brewing 1 to 4 cups of coffee, the 1-4 CUPS option automatically adjusts the brewing process for maximum flavor.
- Press the BREW CARAFE/OFF button to begin brewing.

NOTE: The Coffee Maker will not measure water quantity. When using the 1 - 4 Cup Mode, the entire water reservoir will brew. Always ensure to fill the water reservoir with 4 CUPS of water if you plan to use the 1-4 CUPS option.

KEEP
WARM

- KEEP WARM time defaults to 2:00 hours but can be adjusted from 00:00 minutes to 4:00 hours.
- Press and hold KEEP WARM until KEEP WARM time flashes.
- Press HOUR or MINUTE to adjust KEEP WARM time.

Clean

- If descaling is necessary, press and hold HOUR and MINUTE at the same time until CLEAN illuminates.
- Please follow detailed instructions in the CLEAN section of this instruction manual for optimal results.
- After every 150 brews, CLEAN will automatically flash.

Clock

- Press and hold HOUR or MINUTE button until CLOCK flashes.
- Press HOUR or MINUTE to set the time.



- To turn the sound off, press and hold MINUTE and PROGRAM buttons at the same time until icon illuminates. The icon will display next to the clock on the control panel.
- To turn the sound back on, press and hold MINUTE and PROGRAM buttons at the same time. The icon will disappear with 1 audible tone.

BEFORE BREWING DRIP COFFEE FOR THE FIRST TIME

1. Remove all packing material and labels from the inside and outside of the Coffee Maker. Place the unit on a flat, clean surface.
2. Before preparing coffee, thoroughly clean the glass carafe, carafe lid, removable filter basket, reusable filter basket and coffee scoop in hot, sudsy water. Rinse and dry. Replace disassembled parts.
NOTE: The carafe, carafe lid, removable filter basket holder and reusable filter basket are all top-rack dishwasher safe. The coffee scoop should be placed in the dishwasher alongside the cutlery.
3. Clean the inside of the Coffee Maker by brewing 2 full carafes of tap water (see Brewing Coffee Instructions). Do not add the reusable filter basket or ground coffee for this initial cleaning

DRIP COFFEE BREWING OPERATION

1. Fill carafe with cold tap or distilled water and carefully pour into water reservoir. (Figure. 1)
CAUTION: Never operate the Coffee Maker when the water reservoir is empty.
IMPORTANT: Before brewing, always make sure water level is past the 4 cup step and add water if needed.
CAUTION: Never add water to exceed the 12-cup step.
2. Drop the removable filter basket into the housing and place the coffee-filled reusable filter basket into the removable filter. (Figure. 2)
3. Close the lid & press BREW CARAFE/OFF button. By default, Regular brew will illuminate. To adjust the brew strength, see page 10.
4. Press the BREW CARAFE/OFF button to start brewing.
5. When brewing is complete, 3 audible tones will sound. The Coffee Maker will display 0:00, as it advances to KEEP WARM. The time will begin to count up to 2:00 hours.
IMPORTANT! Press BREW CARAFE/OFF button at any time to turn the Coffee Maker off.
6. At the end of KEEP WARM, 2 audible tones will sound as the Coffee Maker turns itself off within 5 minutes if no further operation.
CAUTION: Always make sure the lid is aligned with the spout before pouring hot coffee.

Figure 1



Figure 2



PAUSE & SERVE

Pause & Serve allows you to pour a cup of coffee before the entire carafe is brewed. Return the carafe to the warming plate; dripping will resume.

CAUTION: Replace carafe under the filter basket within 30 seconds to prevent overflow.

BREW LATER

1. The Coffee Maker can be programmed to begin brewing up to 24 hours in the future.
WARNING: Make sure the Coffee Maker is set up to brew coffee. Fill the water reservoir, add fresh ground coffee to the reusable filter basket, close the lid. Place the empty carafe with lid in the center of the warming plate.
2. Press and hold the PROGRAM button for 1.5 seconds. The last programmed FUTURE BREW TIME will begin to flash.
3. Press HOUR to adjust the HOUR.
4. Press MINUTE to adjust the MINUTES.
NOTE: Pay attention to AM and PM setting. Press the PROGRAM button or wait 5 seconds to confirm the time. Only the PROGRAM, BREW SINGLE, OVER ICE, SIZE and STRENGTH buttons will illuminate.
5. When the pre-programmed time is reached, brewing will begin.

- At the end of the brew cycle, 3 audible tones will signal completion and the Coffee Maker will advance to KEEP WARM.
- To start brew time at the same time the next day, simply press the PROGRAM button, the PROGRAM, BREW SINGLE, OVER ICE, SIZE and STRENGTH buttons will illuminate.

BEAUTIFUL HINTS FOR GREAT TASTING COFFEE

- A clean Coffee Maker is essential for brewing great tasting coffee. Regular cleaning, as described in the CLEAN section of this instruction manual, is highly recommended.
- Always use fresh, cold water in your Coffee Maker.
- Finer grinds, such as drip and ADC coffee, promote fuller extraction and provide rich, full-bodied coffee.
- For optimum taste, program your Coffee Maker to brew coffee to your preferred STRENGTH. Choose from Regular, Gourmet, or Bold.
- For optimum brewed coffee flavor, buy whole beans and grind just before brewing.
- Do not re-use coffee grounds since this will greatly impair coffee flavor.
- Reheating coffee is not recommended. Coffee is at its peak flavor immediately after brewing.
- Small oil droplets on the surface of brewed, black coffee is due to the extraction of oil from the coffee grounds. Oiliness may occur more frequently if heavily roasted coffees are used. Overextraction may also cause oiliness, indicating a need to clean your Coffee Maker.

Figure 3



BEFORE BREWING SINGLE SERVE FOR THE FIRST TIME

- To pre-clean and prime the pump, fill a tall mug/cup with up to 15 oz. cold water and add to the single serve water tank. (See Figure 3.) Center the empty mug/cup on the single serve base, directly under the coffee spout.
- Press the BREW CARAFE/OFF button, then press BREW SINGLE button, the unit will start brewing.
- The pump will activate, and water will begin to stream through the spout. Upon completion, all indicators lights will illuminate.
- The pump is now primed, and the MultiBrew single cup coffee brewing system is ready for use.

SINGLE SERVE BREWING OPERATION

The capsule brewing system gives you the option to brew any pre-packaged coffee pods or to use your own favorite coffee blends using the reusable ground coffee basket.

- Add cold filtered water to the single serve water tank. The water tank has MIN and MAX lines. Do not overfill the MAX fill line.

WARNING: Before heating, it is recommended the water tank be filled at least to the MIN line. To avoid damage to your Coffee Maker, never operate when the water tank is empty.

- Center tall travel mugs/tumblers (up to 15 oz.) on the single serve base, directly under the coffee spout. Center cup/mug on the drip tray plate, directly under the coffee spout. (See Figure 4.)
- Use the front tab to unlock and open the MultiBrew adaptor compartment lid.

Figure 4



4. Insert the capsule adaptor into the adaptor compartment.

IMPORTANT: To avoid loose coffee grounds, you must line up the front tube with the spout in the front of the housing. Turn the adaptor so that it fits flush into the housing.

CAUTION: There are two sharp needles that puncture the capsules. One is located inside the capsule adaptor and the other is located on the top underside of the adaptor compartment. To avoid risk of injury, do not place fingers inside either parts. Also exercise caution when cleaning the parts.

5. K-Cup Capsules: Add the capsule of your choice into the capsule adaptor. (See Figure 5.)

NOTE: Both the top and bottom of the capsule will be punctured.

6. Reusable Ground Coffee Basket: Add the filled reusable ground coffee basket to the adaptor compartment. (See Figure 6.)

Figure 5



Figure 6



NOTE: For best results, when filling the reusable ground coffee basket, please use medium grind.

7. Press the adaptor compartment's lid down firmly. An audible click can be heard as the lid is locked.

8. Press the SIZE button to select the desired cup size in oz, then press the BREW SINGLE button for hot single serve coffee, or press the OVER ICE button to brew over ice.

NOTE: Upon completion of the single serve brew cycle, the BREW SINGLE or OVER ICE button will be illuminated, while the other buttons will be off during brewing.

NOTE: To interrupt the brewing cycle at any time, press the active BREW SINGLE or OVER ICE button and all the buttons will illuminate, the unit will go back to the standby mode.

NOTE: Iced coffee volume is half of the size setting EX: 6oz size, will only brew 3 oz of coffee.

NOTE: To brew Iced coffee, ice cubes need to be added to the mug, or cup before brewing.

NOTE: To select the size, press the SIZE button. The display will show the 8oz default setting. To change the size press the SIZE button again, until the desired size is reached. The other size options are: 10oz, 12oz, 14oz, and 6oz. Press the BREW SINGLE or OVER ICE button to brew coffee. Unit will remember the size last used, unless it is unplugged.

9. During pod brewing, if the water from the tank runs out the BREW SINGLE/OVER ICE/SIZE button will all flash to indicate that user needs to add water. If water is added within 3 minutes press any button to continue the rest of the brew cycle. If over 3 minutes has passed the unit will return to the standby mode. Press the BREW CARAFE/OFF button to enter the standby mode at anytime the buttons are flashing.

SINGLE SERVE HOT WATER

Use your MultiBrew Coffee Maker to quickly and easily dispense hot water to prepare single cups of bagged teas, instant soups, quick cooking oats, packaged hot chocolate, hot apple cider or any food that requires boiling water.

WARNING: Before heating, it is recommended the water tank be filled at least to the MIN fill line. DO NOT EXCEED the MAX fill line. To avoid damage to your Coffee Maker, never operate your MultiBrew Coffee Maker when the water tank is empty.

IMPORTANT: To prevent tainted or "off" flavors when changing hot beverages, while the unit is OFF (cool), use a damp paper towel to completely remove any residue from the adaptor compartment.

1. Follow step 1 & 2 from Single Serve Brewing Operation (p.12)
2. Insert the capsule adaptor (without coffee or capsule) into the adaptor compartment and follow step 7 & 8 from Single Serve Brewing Operation (p.13)
3. After water has been heated and dispensed, indicator light will illuminate. Stir ingredients well before serving.

USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user-serviceable parts. Any servicing requiring disassembly other than cleaning must be performed by a qualified appliance repair technician.

CARE & CLEANING INSTRUCTIONS

1. Always make sure Coffee Maker is unplugged and warming plate is cool before attempting to clean.
2. After every use, remove the reusable filter basket, discard used coffee grounds, and rinse thoroughly.
3. Wash the reusable filter basket and glass carafe in hot, sudsy water. Pull the carafe lid out of the carafe and scrub with a soaped kitchen brush. The carafe, carafe lid, removable filter basket holder and the reusable filter basket are all top-rack dishwasher safe. The coffee scoop should be placed in the dishwasher alongside the cutlery.
WARNING: To avoid breakage, handle carafe with care. Avoid impact. Glass will break as a result of impact. Use care when filling with water to avoid hitting faucet.
4. Wipe the Coffee Maker exterior with a damp cloth to remove superficial stains. For stubborn stains, use a nylon or plastic pad with a nonabrasive cleanser. Do not use metal scouring pads or abrasive cleansers.
5. Dry and replace disassembled parts. Make sure the removable filter basket holder drops down and is properly seated into the housing.
6. Close the lid.

CLEAN

To assure optimal flavor and performance of your MultiBrew Coffee Maker, when used regularly, and under normal conditions, it is recommended that the CLEAN cycle be run every 150 uses. The CLEAN will automatically flash on the display to alert you that CLEAN is necessary.

NOTE: The entire cleaning cycle will take 30 to 40 minutes to complete.

NOTE: The MultiBrew Coffee Maker has dual water tanks that must be descaled separately and as needed.

Drip Coffee System

1. Combine 6 cups of white vinegar and 4 cups of cold water in the carafe and pour vinegar solution into the water reservoir.
2. Place the empty carafe onto the warming plate.
3. Close the lid and press and hold HOUR and MINUTE at the same time until CLEAN illuminates. Press the BREW CARAFE/OFF button. An audible tone will sound as the CLEAN cycle begins. CLEAN and BREW CARAFE/OFF buttons will be illuminated on the display. Part of the mixture will pass through the brew cycle in a slow 3 minute sequence. During the CLEAN cycle, the remaining mixture will be held in the Coffee Maker and then dispensed periodically for 30 minutes.
IMPORTANT! Press the BREW CARAFE/OFF button at any time to exit CLEAN function or press BREW CARAFE/OFF button at any time to turn the Coffee Maker off. At the end of CLEAN cycle, 3 audible tones will sound, CLEAN will disappear from the display and Coffee Maker will turn itself off automatically.
4. Discard water in the carafe. Wash carafe, removable filter basket and reusable filter basket in hot sudsy water.
5. Brew 2 or 3 carafes of fresh water through the Coffee Maker brewing coffee again.
6. Dry parts thoroughly.
7. Replace the removable filter basket in the housing, then drop the clean reusable filter basket into place.

SINGLE SERVE BREWING SYSTEM

1. Fill with 4 oz. white vinegar and 10 oz. cold water and pour vinegar solution into the single serve water tank.
2. Center a 15 oz. cup or container under the single serve coffee spout.
3. Press the BREW SINGLE button. The indicator light will flash as the cleaning solution streams through the coffee spout.
4. After cleaning, refill the single serve water tank with fresh, cold water. Rinse thoroughly by brewing another 2 to 3 (15 oz.) cups of clean, cold water.
5. Allow the MultiBrew Coffee Maker to cool for 15 minutes before next use.

STORING INSTRUCTIONS

1. Never store Coffee Maker while it is still plugged in.
2. Unplug Coffee Maker and allow it to cool.
3. Store Coffee Maker fully assembled, the reusable filter basket and removable filter basket holder in position. Place the carafe on the warming tray. Close the lid.
4. Store Coffee Maker in its box or in a cool, dry place.



LIMITED TWO-YEAR WARRANTY

SENSIO Inc. dba Made by Gather™ hereby warrants that for a period of **TWO YEARS** from the date of delivery, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. dba Made by Gather™ will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of the initial delivery and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation, which commences on the date of delivery. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

EXCLUSIONS:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. dba Made by Gather™ personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. dba Made by Gather™ shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

HOW TO OBTAIN WARRANTY SERVICE:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. dba Made by Gather™. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc. dba Made by Gather™'s address. SENSIO Inc. dba Made by Gather™ shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc. dba Made by Gather™ Customer Service Center.



For customer service questions or comments
1-866-832-4843 / help@bellahousewares.com



Sensio Inc.
dba Made by Gather™
New York, NY 10016/USA

90228, 90283, 90284 R2