

# bella<sup>PRO</sup><sup>TM</sup>

## Blaze Pizza Oven+

Instruction Manual

---



Scan to register  
[bellakitchenware.com](https://bellakitchenware.com)





## TABLE OF CONTENTS

IMPORTANT SAFEGUARDS.....	2
ADDITIONAL IMPORTANT SAFEGUARDS.....	3
NOTES ON THE PLUG.....	4
NOTES ON THE CORD.....	4
PLASTICIZER WARNING.....	4
ELECTRIC POWER.....	4
GETTING TO KNOW YOUR BLAZE PIZZA OVEN.....	5
BEFORE USING FOR THE FIRST TIME.....	6
HELPFUL HINTS ABOUT YOUR BLAZE PIZZA OVEN.....	6
HOW TO USE.....	6
USDA COOKING GUIDELINES.....	7
USER MAINTENANCE INSTRUCTIONS.....	7
CARE AND CLEANING INSTRUCTIONS.....	7
STORING INSTRUCTIONS.....	7
WARRRANTY.....	8



# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs or base unit in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Unplug from outlet when not in use and before cleaning. Allow the Pizza Oven to cool before putting on or taking off parts.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. Contact Consumer Service.

**NOTE: DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF. THIS WILL VOID THE WARRANTY.**

8. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
13. To disconnect, unplug the oven.
14. Remove the plug from the wall outlet.
15. Do not use appliance for other than intended use.
16. Oversize foods or metal utensils must not be inserted in the Pizza Oven as they may create a fire or risk of electric shock.
17. Fire may occur if the Pizza Oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
18. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
19. Extreme caution should be exercised when using containers constructed of other than metal or glass.
20. Do not store any materials, other than manufacturer's recommended accessories, in this Pizza Oven when not in use.
21. Do not place any of the following materials in the Pizza Oven: paper, cardboard, plastic, and the like.
22. Do not cover any part of the Pizza Oven with metal foil. This will cause



overheating of the Pizza Oven.

23. Use extreme caution when disposing of hot grease.
24. Do not cover the Pizza Oven with anything that would prevent steam from escaping. This may cause warping, discoloration, malfunction or even fire.

## FOR HOUSEHOLD USE ONLY

# SAVE THESE INSTRUCTIONS

## ADDITIONAL IMPORTANT SAFEGUARDS

**CAUTION HOT SURFACES:** This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.

1. A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this instruction manual before operating or cleaning this appliance.
2. If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
3. When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dish towels or other flammable materials.
4. To reduce the risk of fire, do not leave this appliance unattended during use.
5. If this appliance begins to malfunction during use. Remove the plug from the wall outlet. Do not use or attempt to repair a malfunctioning appliance! Contact Consumer Service
6. The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
7. Do not use this appliance in an unstable position.
8. To reduce the risk of burns or other injuries, do not touch hot surfaces. Use of protective oven mitts or gloves as well as long-handled utensils is recommended.
9. To reduce the risk of injury to persons or property, unplug this appliance before inserting food. Always keep the appliance unplugged from the wall outlet when not in use.

**CAUTION:** Never leave the Pizza Oven unattended while in use.

## NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

## NOTES ON THE CORD

- A. A short power-supply cord (or detached power-supply cord) is provided to reduce the risk resulting from becoming entangled in or tripping over a long cord.
- B. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- C. If a long detachable power-supply cord or extension cord is used:
  1. The marked electrical rating of the cord set, or extension cord should be at least as great as the electrical rating of the appliance.
  2. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.
  3. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

## PLASTICIZER WARNING

**CAUTION:** To prevent plasticizers from migrating to the finish of the countertop or tabletop or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the countertop or tabletop. Failure to do so may cause the finish to darken, permanent blemishes may occur, or stains can appear.


## ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

## GETTING TO KNOW YOUR BLAZE PIZZA OVEN

Product may vary slightly from illustration.

1. Door Handle
2. Temperature Control
3. Timer Knob
4. LED Screen (Timer Display)
5. Power Cord (not shown)
6. Pizza Stone
7. Pizza Peel

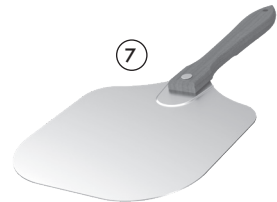

## BEFORE USING FOR THE FIRST TIME

1. Read all instruction included in this manual.
2. Make sure the oven is unplugged.
3. Wash all accessories in hot, soapy water.
4. Thoroughly dry all accessories and re-assemble them in the oven. Plug the oven into outlet.
5. After re-assembling your oven, run it at 750°F for approximately 15 minutes to eliminate any packing residue what may remain after shipping. This will also remove all traces of odor initially present.

**Please note:** Initial start-up operation may result in smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements.

- Temperature Control: choose the desired temperature up to 750°F for cooking.
- Timer: Turn clockwise to activate a timer. 5 beeps will sound at the end of set time.
- LED Screen: Countdown the time selected using the timer.

**WARNING:** TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. SUGGEST USING GLOVES.

**CAUTION:** Always be extremely careful when removing any hot containers from a hot oven.

## WEIGHT/SIZE RESTRICTIONS

- Pizza cooked on the pizza stone must be no wider than 12 inches and must fit comfortably in the Pizza Oven without touching either the lower or the upper heating elements.
- We suggest that you periodically check the cooking progress with a meat thermometer.

## HELPFUL HINTS ABOUT YOUR BLAZE PIZZA OVEN

- When the oven is turned on, the unit will automatically enter preheat mode and Pre Heat will be displayed on the screen.
- When selecting cook time for a particular product or recipe, the LED display will count down the time remaining.
- This oven has a 30 minute timer.
- Metal, ovenproof glass and ceramic bake ware without lids can be used in the oven. If foods require covering, use aluminum foil. Pay attention to cookware temperature limits since this oven is up to 750°F.
- Be sure the top of the container or food being baked or broiled is at least 1½ inches away from the upper heating elements.
- Remove plug from electrical outlet.
- To obtain the best performance from this Pizza Oven:  
Do not overfill the oven.  
To avoid heat loss do not open the door too frequently  
When using foil to cover a food, tuck the edges of the foil against the sides of the baking dish or pan.
- This oven cook more than a pizza. Avoid food that will spatter oil when cooking.

Good for cooking in pizza oven	Avoid cooking in pizza oven
Pita	Chicken
Naan	Steak
Pie	Bacon
Cookies	Veal
Crackers	Lamb
Bagels	Pork
Quesadillas	Turkey
Calzones	Focaccia
Stromboli	Anything that splatters oil
Roasted Vegetables	Anything with buttery dough

- Highest temperature allowed is 450°F when cooking greasy food.
- Always keep the pizza stone in the oven. Do not put cookware directly onto the lower heater.
- Avoid putting greasy based food directly on the pizza stone, use a pan or cookware that can withstand the oven temperature.
- Unplug and clean the oven after every use.





## HOW TO USE

**IMPORTANT:** The pizza oven gets hot when in use. Always use oven mitts or pot holders when touching the outer or inner surface of the pizza oven.

1. Plug in the unit. An audible tone will sound and the LED screen will light up and then turn off entering standby mode.
2. Place the Pizza Stone in the oven.  
**IMPORTANT:** Do not put any containers directly onto the lower heating elements.  
**IMPORTANT:** Never use glass, ceramic pans or containers with lids.  
**WARNING:** The pizza stone is a necessary accessory and should always be used when using the unit.
3. Press the TEMPERATURE knob and the screen will illuminate.
4. Turn the temperature knob clockwise to set the temperature. The temperature range is between 300°F to 750°F. The temperature will increase in 5°F increments.
5. Push the temperature knob to begin preheating the unit, "Pre Heat" will be displayed on the screen. The temperature can be adjusted during the preheat stage. 3 beeps will sound once the unit is done preheating.  
**NOTE:** Preheat time varies but can take up to 20 minutes for the unit to fully preheat.
6. Place your pizza on the pizza stone using the pizza peel and carefully close the oven door. Select the desired cooking time but rotating the timer knob clockwise. Press the timer knob to start the countdown. If the timer knob is not pressed then it will begin counting down after 5 seconds.  
**NOTE:** The timer range is 1 minute to 30 minutes and will increase/decrease in 1 minute increments.  
**NOTE:** The timer cannot be set during preheat stage  
**NOTE:** The temperature cannot be adjusted during the cooking process.  
**NOTE:** The unit will automatically turn off if a time is not set after 10 minutes.
7. Once the timer reaches 0:00, a 5 audible tones will sound and "End" will be displayed.
8. If the food is finished cooking before the timer has signaled, push the timer knob to cancel the remaining time.  
**NOTE:** Heat does NOT turn off when the timer ends. It will need to be turned off manually.
9. If you want to turn off the unit, push the temperature knob or unplug the unit.  
**IMPORTANT:** You must set and push the timer knob for the pizza oven to function.
10. Open the oven door. Using the pizza peel, remove the cooked food.
11. Unplug when not in use and allow the unit to cool completely before cleaning.  
**NOTE:** Be sure food does not extend past the edges of the packing pan to prevent liquids from dripping onto the heating elements.  
**NOTE:** To toggle between Fahrenheit and Celsius press and hold the temperature knob for 5 seconds.

## USDA COOKING GUIDELINES

A meat thermometer should always be used to gauge internal temperature. The thermometer should be inserted into thickest portion of roast away from bones or fatty areas. The United States Department of Agriculture recommends that meat and poultry be cooked to the following internal temperatures to be sure any harmful bacteria has been killed. Ground turkey and chicken should be cooked to an internal temperature of 165°F and ground beef, veal, lamb and pork be cooked to an internal temperature of 160°F. Chicken and turkey should be cooked to an internal temperature of 170°F for white meat and 180°F for dark meat. Goose and duck should be cooked to an internal temperature of 180°F. Fresh beef, veal and lamb, etc. should be cooked to an internal temperature of at least 145°F. Fresh pork should be cooked to an internal temperature of at least 160°F. When re-heating meat and poultry products, they should also be cooked to an internal temperature of 165°F.

## USER MAINTENANCE INSTRUCTIONS

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.



## CARE AND CLEANING INSTRUCTIONS

1. Allow the Pizza Oven and all accessories to cool completely before cleaning.
2. Clean the outside of the Pizza Oven with a damp cloth and dry thoroughly. A nonabrasive liquid cleaner may be used for stubborn stains. Rinse and dry thoroughly. Do not use metal scouring pads or abrasive cleaners that will scratch the surface.
3. Clean interior with a mild or non-abrasive cleaner and plastic scouring pad after each use to avoid build-up. Do not rub too hard as surface can be scratched.
4. To remove baked-on food, pour a small amount of cooking oil onto the food and allow to stand for 5 to 10 minutes. Remove the softened food with a soft cloth. Do not use steel wool, scouring pads or abrasive cleaners.
5. Rinse and dry thoroughly before closing the glass door. Clean the glass door with a cloth or sponge dampened with warm, sudsy water. Dry thoroughly.
6. Wash Pizza Peel and Pizza Stone in soapy water and dry thoroughly.
7. DO NOT use abrasive cleaners or metal scouring pads to clean the pizza peel or pizza stone. For stubborn stains, clean with a nylon or polyester mesh pad and a mild, non-abrasive cleaner. Rinse and dry thoroughly.

**CAUTION:** DO NOT use spray-on or other oven cleaners. Using these types of cleaners may cause cosmetic and/or electrical damage to the Pizza Oven.

## STORING INSTRUCTIONS

1. Unplug unit, allow to cool, and clean before storing.
2. Place the Pizza Stone back in the unit
3. Store the Pizza Oven in its box in a clean, dry place.
4. Never store appliance while it is hot or still plugged in.
5. Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.





## LIMITED TWO-YEAR WARRANTY

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

### EXCLUSIONS:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

### HOW TO OBTAIN WARRANTY SERVICE:

You must contact Customer Service at our toll-free number: 1-866-832-4843.

A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem. Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center.



For customer service questions or comments  
1-866-832-4843 / [help@bellahousewares.com](mailto:help@bellahousewares.com)



Sensio Inc.  
dba Made by Gather™  
New York, NY 10016/USA

90221\_90247 R1