


eurotech

CK-BLK-BLK/GRY/BLU
CK-WH-GRY/BLU/COR
OPERATING INSTRUCTIONS

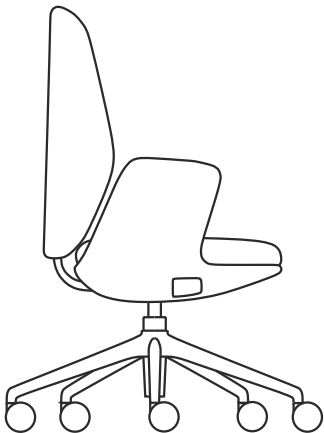

CUSTOMER SERVICE: parts@raynorgroup.com
CUSTOMER SERVICE: 1-800-637-0005
www.eurotechseating.com









ASSEMBLY INSTRUCTIONS

CK-BLK-BLK/GRY/BLU

CK-WH-GRY/BLU/COR

Remove all items from the carton. Verify all pieces before assembly.

PARTS LIST


Key	Description	Part	Qty.
A	Backrest		1
B	Seat Cushion		1
C	J-bar cover		1
D	Gaslift		1
E	Base		1
F	Caster		5
G	Backrest Screws		3
H	Allen Wrench		1

ASSEMBLY INSTRUCTIONS

CK-BLK-BLK/GRY/BLU CK-WH-GRY/BLU/COR


STEP 1

Press the casters (F) into the holes at the end of each leg of the Base (E). Insert the bottom end of the Gaslift (D) into the center hole of the Base (E).

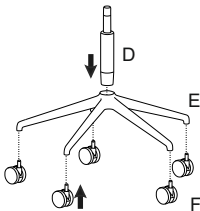

STEP 2

Place seat cushion (B) on flat surface. Insert back post attached to bottom of Backrest (A) into Seat Cushion (see diagram) and secure using the 3 Backrest Screws (G). Tighten securely using the enclosed Allen Wrench (H).

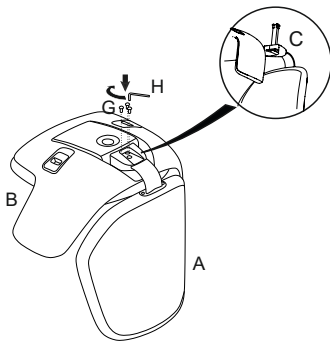

ASSEMBLY INSTRUCTIONS

CK-BLK-BLK/GRY/BLU

CK-WH-GRY/BLU/COR


STEP 3

Now turn the assembled seat upright and locate the center hole of the bottom of the Seat Cushion. Push down firmly until the connection is secure.

Before using your chair, ensure that all the screws are tightened fully for safety. You can now enjoy the comfort of your new chair!

Note:

Please keep the enclosed Allen Wrench and check all screws every six months to ensure they are tightly fastened.

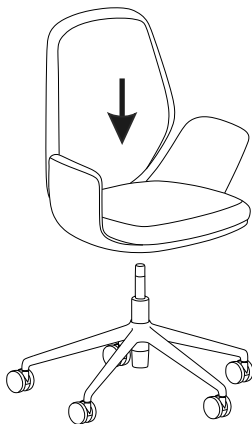

OPERATING INSTRUCTIONS


CK-BLK-BLK/GRY/BLU

CK-WH-GRY/BLU/COR

A. SEAT HEIGHT ADJUSTMENT

While seated, pull the recessed lever on the right side of the bottom of the seat forward and hold it while raising or lowering the seat to change the seat height.

The seat height adjustment range is approximately 5".

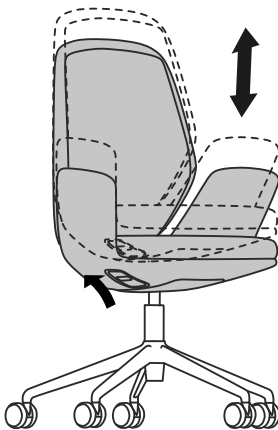


OPERATING INSTRUCTIONS

CK-BLK-BLK/GRY/BLU

CK-WH-GRY/BLU/COR

B. BACK HEIGHT ADJUSTMENT

To raise your backrest, slowly lift the backrest up until you hear a series of 4 to 5 clicks. Each click represents a position where the backrest will lock into place. To lower the backrest, raise the backrest all the way up until the tension is released. The backrest will now return to the lowest position without stopping. Now repeat the previous steps to raise your backrest to your desired position. The Back Height Adjustment range is approximately 3".

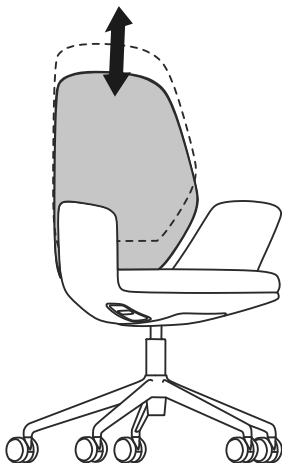

OPERATING INSTRUCTIONS

CK-BLK-BLK/GRY/BLU CK-WH-GRY/BLU/COR

C. BACK ANGLE ADJUSTMENT

The recessed lever on the left side of the bottom of the seat will allow you to control your back tilt position.


When pulled up, you are in free float and can rock back and forth.

When pushed down, the back is locked in position.

To find a preferred locked position, lean back to the preferred back position and then lock the lever so that you will remain in that position.

To go back to free float or change the locked position, pull the lever up and then push back softly to disengage.

The Back Angle Adjustment range of motion is approximately 0° - 20° and the back can be locked in 3 preset positions.

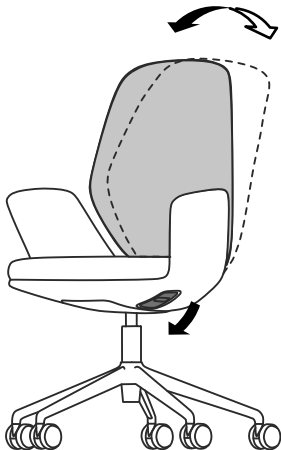

OUR PROMISE.

They say with age comes wisdom. And while we've learned a lot since we sold our first office chair in 1979, even then we knew that superior craftsmanship and design are essential ingredients in delivering real value for our customers. All these years later, those three simple pillars still stand behind our promise of exceptional seating with every chair we sell.

DESIGN CRAFTSMANSHIP VALUE

Eurotech. Sit Smarter.

THE EUROTECH WARRANTY

- For all products except for 24/7 chairs (see below), Eurotech warrants to the original purchaser all components for the life of the product with the exception of upholstery and foam, which will be warranted for five years.
- For 24/7 chairs, Eurotech warrants to the original purchaser of all 24/7 and Big & Tall chairs all components for 5 years with the exception of upholstery and foam which will be warranted for 2 years.
- Eurotech warrants to the original purchaser that all parts will be free from material defects. Eurotech will repair or replace, at its option, any unaltered components.
- Eurotech does not warrant any aftermarket hardware that is installed on the product.
- Eurotech's warranty is limited to the normal use of the product in a forty hour work week and a 275lb. weight limit unless otherwise noted.
- Eurotech shall NOT be liable for consequential or incidental damage arising from any product defect.
- Eurotech's warranty is limited to replacement or repair and does not cover cost of transportation and labor. There are no other warranties expressed or implied other than those specifically described.
- Eurotech does not warrant customer's own material.
- Eurotech warrants to the original purchaser with proof of purchase along with a copy of the receipt.
- Arm Pads are warranted for 2 years under normal wear and tear.
- Cylinder is warranted for 5 years.

This warranty is made as of 9/15/16. Please see <http://www.eurotechseating.com/warranty-information> for any updates and/or revisions to this warranty.