



ELIZABETH SUTTON
COLLECTION
raynor group
COMPANIES

WYNWOOD

ASSEMBLY INSTRUCTIONS
OPERATING INSTRUCTIONS
WARRANTY







CUSTOMER SERVICE Parts@raynorgroup.com
CUSTOMER SERVICE 1-800-637-0005
WWW.RAYNORGROUP.COM

ASSEMBLY INSTRUCTIONS

WYNWOOD

Remove all items from the carton. Verify all components before assembly.

Part List

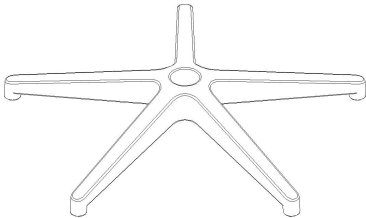Key	Description	Part	Qty	Spare
A	Backrest+Armrest Seat+Mechanism		1	
B	Seat Post(Cylinder)		1	
C	Star Base		1	
D	Caster		5	


• Please tighten your chairs hardware every six months.

ASSEMBLY INSTRUCTIONS

WYNWOOD


Remove all items from the carton. Verify all components before assembly.

STEP 1

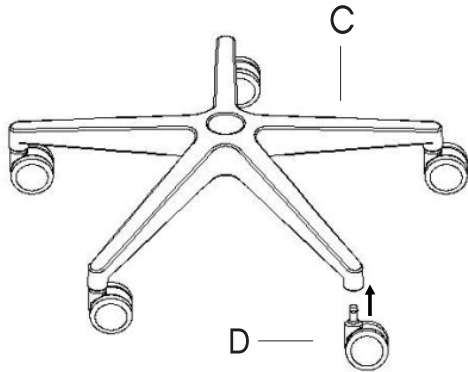


Please press the Casters (D) into the holes at the end of each leg of the Base (C).

STEP 2

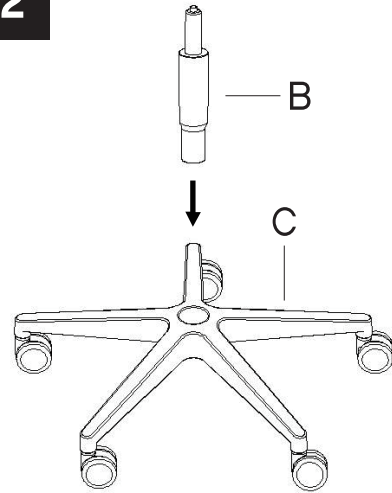

Please insert the Seat Post (B) into the center hole of the Base (C).

STEP 3

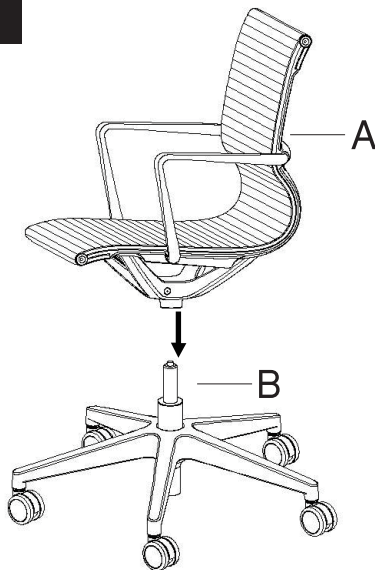

Now turn the assembled seat upright and locate the center hole of the mechanism over the Seat Post (B). Push down firmly until the connection is secure.

STEP 4



You can now enjoy the comfort of your chair.
Note: Please check all screws every six months to ensure they remain tightly fastened.


PREVENTIVE MAINTENANCE AND WARNING!

- USE THIS PRODUCT ONLY FOR SEATING ONE PERSON AT A TIME.
- DO NOT USE THIS CHAIR AS A STEP STOOL / LADDER.
- DO NOT SIT ON ANY PART OF THE CHAIR EXCEPT THE SEAT.
- DO NOT USE CHAIR ON UNEVEN FLOOR SURFACES.
- DO NOT USE CHAIR UNLESS ALL BOLTS, SCREWS AND KNOBS ARE TIGHTENED.
- **EVERY SIX MONTHS, PLEASE MAKE SURE ALL BOLTS, SCREWS AND KNOBS ARE FULLY TIGHTENED TO ENSURE STABILITY.**
- IF ANY PARTS ARE MISSING, BROKEN, DAMAGED OR WORN, STOP USE OF THE PRODUCT UNTIL REPAIRS ARE MADE USING FACTORY AUTHORIZED PARTS.
- DISPOSE OF PACKAGING PROPERLY. PLASTIC BAG IS NOT A TOY. DO NOT USE PLASTIC BAG AS HEAD COVERING - IT MAY CAUSE SUFFOCATION.
- FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.
- NOTE: SOME SCREWS MAY BE PREASSEMBLED. IF PREASSEMBLED, IGNORE ASSEMBLY INSTRUCTIONS.

OPERATING INSTRUCTIONS

WYNWOOD


A SEAT HEIGHT ADJUSTMENT

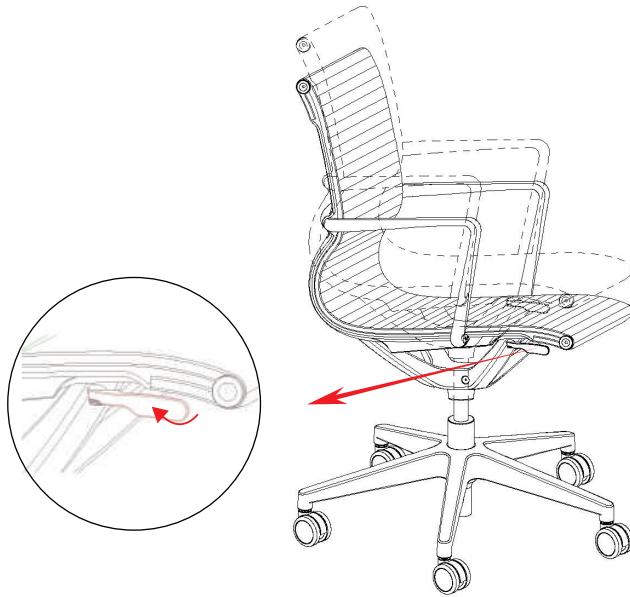

A SEAT HEIGHT ADJUSTMENT

While seated, pull the lever on the right side of the seat out and hold while raising or lowering the seat to change the seat height. When the lever is released, the seat height is locked. The seat height adjustment range is approximately 3.9”.

B BACKREST TILTING ADJUSTMENT

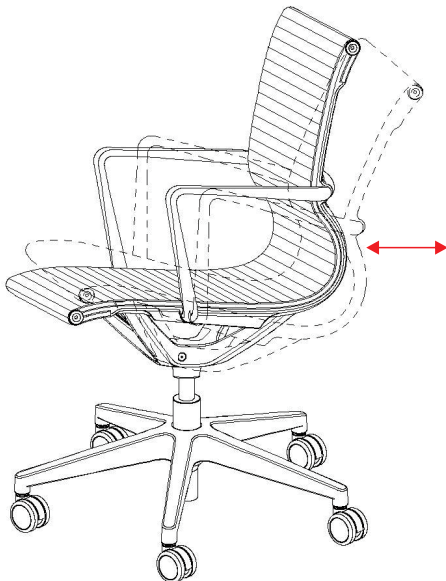

B TILT ADJUSTMENT

While seated, lean against the back to tilt the seat backwards. The range of motion is approximately 12.5°.

WARRANTY

- The Raynor Group warrants to the original purchaser all components for 10 years with the exception of the upholstery and foam, which will be warranted for five years.
- The Raynor Group warrants to the original purchaser that all parts will be free from material defects. The Raynor Group will repair or replace, at its option, any unaltered components.
- The Raynor Group does not warrant any aftermarket hardware that is installed on the product.
- The Raynor Group's warranty is limited to the normal use of the product in a forty hour work week and a 275 lb. weight limit unless otherwise noted.
- The Raynor Group shall NOT be liable for consequential or incidental damage arising from any product defect.
- The Raynor Group's warranty is limited to replacement or repair and does not cover cost of transportation and labor. There are no other warranties expressed or implied other than those specifically described.
- The Raynor Group does not warrant customer's own material.
- The Raynor Group warrants to the original purchaser with proof of purchase along with a copy of the receipt.
- Arm Pads are warranted for 2 years under normal wear and tear.
- Cylinder is warranted for 5 years.