 
 





欧乐-B iO电动牙刷

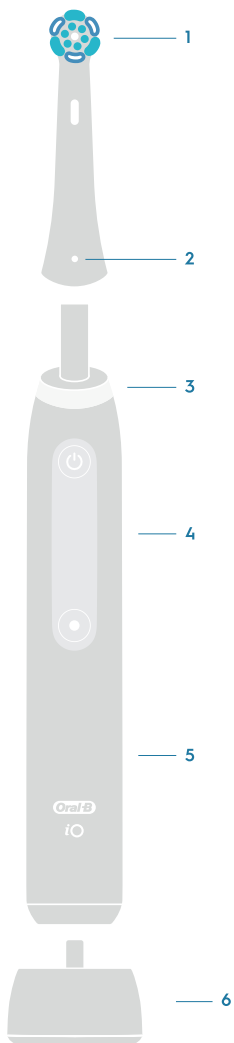




— 7

 — 8




— 9

 
— 10

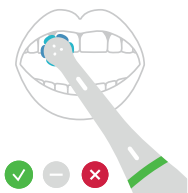


a

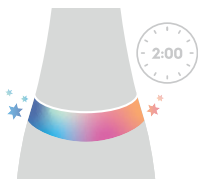 


b

 

c

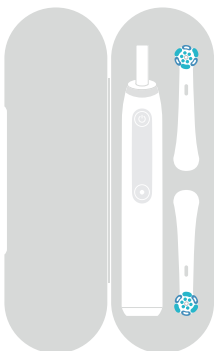 

d

 

e



f



g



h

# 描述

- 1 刷头
- 2 刷头识别符号
- 3 智能压力传感器/光环
- 4 控制面板
- 5 刷柄
- 6 充电底座
- 7 开/关按钮
- 8 模式切换按钮
- 9 低电量提示
- 10 更换刷头提醒

## 配件和功能(取决于型号)

- a 智能压力感应提醒
- b 刷牙满两分钟的互动彩虹灯环
- c 刷头保护盖
- d 旅行盒
- e 刷头支架
- f 卓越深洁型刷头
- g 轻柔臻护型刷头
- h 美白至臻型刷头

**注意:内容可能会根据购买的型号而有所不同**

欢迎您使用欧乐-B电动牙刷!

使用前仔细阅读产品说明书,并妥善保管。

## 重要注意事项

- 定期检查整个产品、电源线、配件是否损坏。已损坏或发生故障的产品不可继

续使用。如果产品、电源线、配件有损坏，请送至欧乐-B博朗服务中心。电源软线不能更换，如果软线损坏，此器具应废弃。不要改装或自行维修本产品。这些行为可能会导致火灾、触电或造成其他伤害。

- 不要将任何物品放入产品任何开口处。
- 此牙刷不适合3岁以下儿童。儿童和任何身体、感官或精神能力障碍人士，或缺乏使用本产品相关经验和知识的人群，需要在有适当的监督或足够的指导下安全使用本产品，并了解可能存在的危险。
- 切勿让无人监护下的儿童清洁和维护本产品。
- 不要让儿童玩耍本产品。
- 本产品只能用于本手册说明用途。不要使用厂商没有推荐使用的零配件。
- 本产品仅用于刷牙。请勿咀嚼或咬住牙刷。勿作玩具使用，请在成人指导下使用。
- 只能使用本产品配备的充电器。

## 警告

- 切勿将充电器置于水或液体中，或是存放于容易跌落浴缸或洗漱台的地方。不要接触已经掉入水中的充电器，而要立即拔下电源插头。
- 避免充电线剧烈弯曲、卡住或挤压。
- 本产品包含不可更换的电池。此产品并无消费者可使用零件。除非拆除电池，请勿拆解本产品。请根据本手册的指引去处理电池及设备。

- 拔出插头时请注意握住插头而不是电源线。切勿湿手触碰插头，以免触电。
- 如果您正在接受口腔治疗，请在使用前咨询您的口腔专家。
- 本牙刷为个人护理用品，不应在牙科诊所或医疗机构处用于多位使用者的护理。出于卫生原因，我们建议每个家庭成员使用单独的刷柄和刷头。
- 小零件可能会脱落，请放在儿童接触不到的地方。

为了避免由于刷头破损产生的小部件导致窒息的危险或损伤牙齿：

- 每次使用之前，请确保刷头匹配并准确安装。如果刷头不再匹配，请停止使用牙刷。切勿在没有刷头的情况下使用。
- 如果产品摔落，即使没有看见破损也要在下次使用前更换牙刷头。
- 口腔专业护理建议至少每三个月更换一支刷头，如发现刷头磨损，可提早(或更早)更换。
- 每次使用后请妥善清洁刷头(请参阅“清洁建议”一节)。正确的清洁确保了牙刷的安全使用和使用寿命。

## 重要信息

- 该牙刷和收纳包(附件)含有钕铁硼磁铁，可产生磁场。如果您正在使用医疗器械或有植入式医疗器械，请向医疗器械制造商或专业人士咨询关于欧乐-B iO电动牙刷的使用安全问题。

## 规格参数

电压规格请参考充电器底座信息。

# 牙刷使用方法

## 充电和操作

- 充电时，将牙刷置于插入式充电器上(6)。
- 充电过程中，开/关按钮呈白色闪烁。充满电后，指示灯熄灭。充满电量大约需要16小时。
- 当电量不足时，低电量指示灯(9)以红色闪烁。一旦电池耗尽，电机将停止运作。请将刷柄放置到充电器上进行充电。
- 您可以将刷柄一直放在充电器上以保持充足电量。电池不会出现过度充电的情况。然而，出于环保目的，建议仅在充电期间将充电器接入电源插座中。
- 超过外部工作极限和/或标准电池电流时，牙刷关闭。将牙刷放置充电器上可以启动牙刷。

**警告：**此牙刷含有锂离子电池。切勿将牙刷暴露在50°C/122°F以上的高温环境中。

**注意：**为确保最佳的电池性能，牙刷需在室温下存放。

## 开始刷牙

将刷头(1)安装在刷柄(5)上。刷柄和刷头之间会有小间隙。

打湿刷头挤上牙膏，您可以使用任何种类的牙膏。为避免牙膏飞溅，请在启动电动牙刷前先将刷头放置于口腔内(7)。

引导刷头按顺序缓慢移动使其在每颗牙齿表面停留。请从牙齿外侧开始刷起，然后刷牙齿内侧，最后到咀嚼面。均匀地清洗您口腔内四个刷牙区间。您也可向您的口腔专家或者牙科保健师咨询正确的刷牙技巧。

使用电动牙刷的前几天时，您的牙龈可能会有轻微的出血现象。通常，几天后此现象应会消失。如果此现象持续2周，请咨询口腔专家或牙科保健师。如果您有敏感的牙齿和/或牙龈，欧乐-B建议使用“敏感柔护”或“超柔呵护”模式（可选搭配欧乐-B“轻柔臻护型”刷头（g））。模式可能因购买的型号而异，以实物为准。

## 计时器

计时器每隔30秒有短暂马达震动变化，提醒你移动到口腔的下一个区域。连续多次马达震动变化意味着牙科专家建议的2分钟刷牙时间结束。即使在刷牙过程中刷柄短暂关闭，定时器也能记住刷牙时长。如果暂停时间超过30秒或将刷柄放在插入式充电器上，计时器将重置。

## 刷牙奖励灯

完成2分钟的刷牙活动将获得互动彩虹灯环。（b）

## 智能压力传感器/光环(3)

你的牙刷装有一个智能压力传感器(3)，通过不同颜色的光来显示不同的功能（a）：

白色（默认）=工作指示灯/刷牙力度过低指示

绿色=合适压力提示

红色=刷牙力度过高提示

当您对牙齿施力适当时，绿色指示灯将会亮起，提醒您现在的刷牙力度是恰当合适的；当您对牙齿施力过大时，红色指示灯将会亮起，提醒你减少压力。如果智能压力传感器显示白色（或您预先选择的颜色），提醒您适当施力。

在«日常清洁»、«深层清洁»和«敏感柔护»模式下，施力过大时，刷头的振动将减缓。在使用过程中，可通过适度按压刷头，定期检查智能压力传感器的工作情况。

## 刷牙模式(根据型号而定)

您的牙刷提供多种刷牙模式：

《日常清洁》-日常口腔清洁的标准模式

《深度清洁》-更高强度的清洁 (工作频率更高)

《敏感柔护》-轻柔彻底清洁敏感区域

《超柔呵护》-对特别敏感的区域进行更温和的清洁

《美白抛光》-可偶尔或每日使用的美白抛光模式

《舌苔清洁》-清洁舌头, 可偶尔或每日使用

《牙龈按摩》-对牙龈进行轻柔地按摩

**注：刷牙模式的顺序和可用性可能因产品型号而异。**

当运行“舌苔清洁”模式时，我们建议使用轻柔臻护型刷头 (g)。您可以选择使用或不使用牙膏，轻柔而又全面地清洁整个舌头区域。建议清洁时间为30秒，30秒后电机将停止工作。

## 模式设置

首次使用时，电动牙刷会按照您所购买型号外包装展示的第一顺序模式启动。要切换到其他模式，请依次按下模式按钮 (8)。您也可以在刷牙期间更改模式。

再次启动时，您的牙刷会自动以上次选择的模式下启动。

## 刷头

欧乐-B为您提供多种不同的欧乐-B iO牙刷头 (f/g/h)，仅适合您的欧乐-B iO刷柄。这些独特的刷头是受口腔专家启发，让您的口腔感觉干净和清新。

## 何时更换刷头

大部分欧乐-B电动牙刷头都配有指示性®刷毛帮助您检查是否需要更换刷头。随着每天刷牙两次，

每次两分钟的彻底口腔清洁，刷毛会在大约3个月内褪色，提醒您需要更换刷头。若在褪色前刷毛外张，这也许是您过度用力清洗牙齿和牙龈所致。通常，我们建议至少每3个月更换一次刷头。

## 刷头更换提示

刷柄配有“刷头更换提醒”，当按照每天使用2次、每次2分钟的频率刷牙时，大约3个月后模式切换按钮(10)将点亮黄色\*灯，并伴有震动信号提醒需要更换刷头。

 
要重置“刷头更换提醒”，按住模式按钮2秒钟。震动和照明信号确认复位。如果未采取任何措施，几天后将自动重置。

\*可能会出现橙色

## 清洁建议

刷牙完成后，启动牙刷，用流动的水冲洗刷头。拆下刷头，分别清洗刷柄和刷头。确保水彻底冲洗刷柄顶部内侧和刷头内侧。将所有部件擦干，风干后再重新组装牙刷。

在清洗前拔掉充电器。定期用湿布清洁充电器。请在“配件”一栏中查看每个配件的清洗说明。

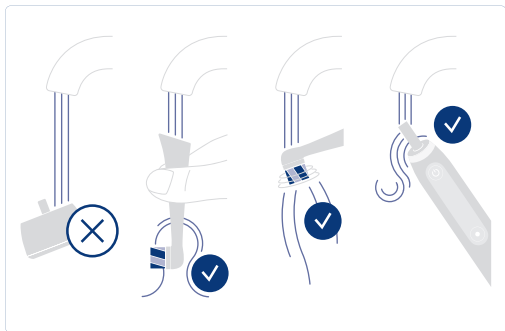

## 配件

(根据牙刷型号而定)

### 旅行盒(d)

将清洁及干燥的牙刷/刷头储存在旅行盒内(d)。

外壳和内壳只能用湿布清洁。

**注意:如果旅行盒上有污渍,请立即擦拭干净。请将旅行盒存放在清洁干燥的地方。**

### 刷头支架(e) /刷头保护盖(c)

你可以将清洁过的刷头储存在刷头支架上。确保刷头已经干燥,然后再将刷头放入支架和/或盖上盖子。刷头支架和盖子适用于洗碗机清洁。

### 拉链式收纳包/磁吸式收纳包

可将清洁干燥的牙刷/刷头储存在拉链式收纳包中。拉链式收纳包的外侧和内侧均可在流动水下清洗。可将清洁干燥的牙刷连同刷头保护盖(c)一起放入磁吸式收纳包中。确保刷头已干燥,然后将刷头放入刷头支架和/或盖上盖子。磁吸式收纳包的外侧和内侧均可在流动水下清洗。请将收纳包储存在干净干燥的地方。

**注意: 如果收纳包上有污渍,请立即擦拭干净。请将收纳包存放在清洁干燥的地方。**

如有更改,无需另外通知。

 
## 环保提示

本产品包含电池和/或可回收的电子废弃物。为了保护环境,请勿将本产品当作生活垃圾处理,请带到当地电子垃圾收集点进行回收利用。



# 在产品使用寿命结束时请移除电池

除了处理丢弃电池外，请勿拆解产品。在取出电池前将电池电量耗尽。在取出电池时，器具必须要断电。取出电池时请穿戴保护装置(手套、护目镜等)，避免皮肤接触到电池漏液。请勿将电池正负极相连以免电池短路。请隔离电池正负极(用胶带等)，并放进塑料袋里面丢弃。

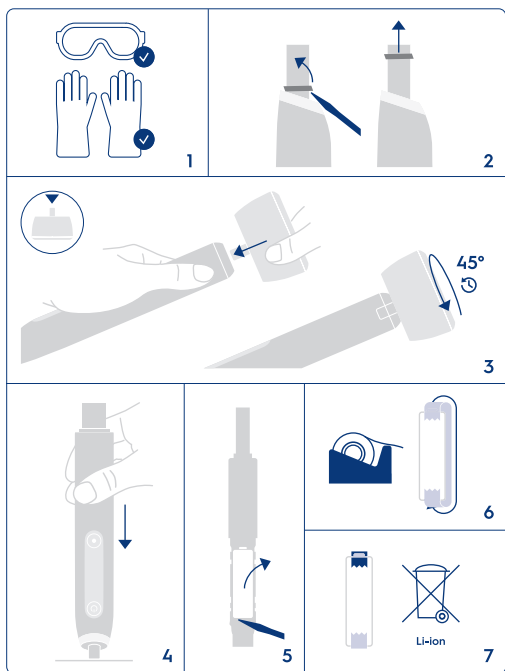

## 锂电池

请按图示打开刷柄，移除电池并根据当地环保规定丢弃。

请注意，打开刷柄会损坏本产品并导致质保失效。

| 部件名称 | 有害物质  |       |       |             |           |             |
|------|-------|-------|-------|-------------|-----------|-------------|
|      | 铅(Pb) | 汞(Hg) | 镉(Cd) | 六价铬(Cr(VI)) | 多溴联苯(PBB) | 多溴二苯醚(PBDE) |
| 充电器  | X     | 0     | 0     | 0           | 0         | 0           |

本表格依据SJ/T 11364的规定编制。  
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出了GB/T 26572规定的限量要求。

## 保修

我们为产品提供2年的有限保修，保修期从购买之日起开始计算。

在保修期内对于材料或者生产工艺所引起的各种瑕疵，我们会视情况更换零件或整个产品。视乎备件的库存情况，替代品有可能是不同颜色或者相等的型号。

本保修适用于全球范围内所有宝洁公司/博朗公司及其指定供应商出售的欧乐-B博朗产品。上述保修不包括以下情况：由于使用不当造成的产品损坏；电动牙刷刷柄防水膜破裂；正常使用引起的产品老化、磨损（如刷头等），以及对产品的价值或者使用功能不产生影响的一些瑕疵。

如果产品经过未经授权的人员处置、修理，或者产品使用了非本公司（宝洁公司/博朗公司）的零件，欧乐-B的保修立即终止。

若在保修期内需要维修，请在保修期内将本产品  
和销售单据一同交给授权的欧乐-B博朗客户服  
务中心。

不论是在保修期内还是在保修期之外，可更换或  
维修的产品、元件、零件以宝洁公司/博朗公司可  
提供的为准。

## 更换刷头保修

如果充电牙刷刷柄损坏是由于使用了非欧乐-B品  
牌刷头，欧乐-B的保修终止。

欧乐-B不推荐使用非欧乐-B品牌刷头。

- 欧乐-B无法控制非欧乐-B品牌刷头的质量，  
我们无法保证非欧乐-B品牌 刷头的清洁效果，  
也无法确保刷头与充电刷柄之间通信和最初购  
买时完全一致。使用非欧乐-B品牌刷头可能会  
损伤您的牙齿或口腔。
- 欧乐-B不能确保非欧乐-B品牌刷头与欧乐-B  
电动牙刷的适配性。
- 欧乐-B不能预测非欧乐-B品牌刷头对牙刷刷  
柄磨损的长期影响。使用非欧乐-B品牌刷头可  
能会对您的欧乐-B电动牙刷造成损害。

所有欧乐-B牙刷刷头都带有欧乐-B品牌标识，符  
合欧乐-B的高质量标准。欧乐-B没有使用其他品  
牌名称销售牙刷刷头或刷柄部件。

刷柄/刷头原产国：德国

充电器产地：中国

充电器标准：GB 4706.1, GB 4706.59

充电器型号3757/3757C(以充电器打印型号为准)

刷柄型号3769

# Description

- 1** Brush head
- 2** Brush head identification symbol
- 3** Smart Pressure Sensor / Light Ring
- 4** Interface
- 5** Handle
- 6** Charger
- 7** On/off button
- 8** Mode switch button
- 9** Low charge indicator
- 10** Brush Replacement Reminder

## Features & Accessories (depending on model):

- a** Smart Pressure Sensor
- b** 2-minutes brushing reward illumination
- c** Brush head holder with cap
- d** Travel case
- e** Brush head holder stand
- f** Brush head «Ultimate Clean»
- g** Brush head «Gentle Care»
- h** Brush head «Radiant White»

**Note:** Content may vary based on model purchased.

# English

## Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

### IMPORTANT

- Periodically check the entire product/cord/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/cord/accessory is damaged, take it to an Oral-B Service Centre. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Never insert any object into any opening of the appliance.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance.
- For tooth brushing only. Do not chew or bite on brush. Do not use as a toy or without adult supervision.

- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- Only use the charger provided with your appliance.

## **WARNING**

- Do not place the charger in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- Avoid sharp bending, jamming or squeezing of the cord.
- This appliance contains batteries that are non-replaceable. The appliance has no user serviceable parts. Do not open and disassemble device except when disposing of the battery. Follow handling and disposal instructions of the battery/device described in this manual.
- When unplugging, always pull the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution. For hygienic reasons we recommend the use of individual brush handles and brush heads for each family member.
- Small parts may come off, keep out of reach of children.

To avoid brush head breakage which may generate a small parts choking hazard or damage teeth:

- Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly. Never use without a brush head.
- If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Replace brush head every 3 months or sooner if brush head becomes worn.
- Clean brush head properly after each use (see «Cleaning Guidelines» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.

## **Important Information**

- This toothbrush and pouch (accessory) contains NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your Oral-B iO toothbrush.

## Specifications

For voltage specifications refer to the bottom of the charging unit.

Noise level: 64 dB (A)

## Using your toothbrush

### Charging and Operating

- To charge the battery place the toothbrush on the plugged-in charger (6).
- During charging the on/off button is blinking white. Once it is fully charged the indicator light turns off. A full charge typically takes 16 hours.
- If the battery is running low the low charge indicator (9) blinks in red. Once the battery is empty, the motor stops. To charge the battery please put the brush on the charger.
- The toothbrush can be stored on the plugged-in charger to maintain it at full charge; a battery overcharge is prevented by the device. However, for environmental purposes we recommend to keep charger in the power socket during charging only.
- The toothbrush switches off when exceeding the outside operating limits and/or standard battery current. To enable operation the toothbrush needs to be put on the charger.

**Caution:** This toothbrush contains a Li-Ion battery. Do not expose toothbrush to temperatures higher than 50°C / 122°F.

Note: Store the toothbrush at room temperature for optimal battery maintenance.

### Start Brushing

Place the brush head (1) on the handle (5). A small gap should remain between handle and brush head.

Wet brush head and apply toothpaste. To avoid splashing, put the brush head into your mouth before switching the toothbrush on by pressing the on/off button (7).

Guide the brush head from tooth to tooth. Brush the outsides, the insides and the chewing surfaces. Brush all four quadrants of your mouth equally. You may also consult your dentist or dental hygienist about the right technique for you.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» or «Super Sensitive» modes (optional in combination with an Oral-B «Gentle Care» brush head (g)). Availability of modes may vary depending on model purchased.

## Timer

The timer signals with a short stuttering sound in 30-seconds intervals to move to the next quadrant of your mouth. A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time.

The timer memorizes the elapsed brushing time, even when the toothbrush is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds or placing the toothbrush on the plugged-in charger.

## Brushing reward illumination

The completion of a 2-minutes brushing event will be rewarded with a colourful light ring illumination. (b)

### **Smart Pressure Sensor/ Light Ring (a)**

Your toothbrush is equipped with a Smart Pressure Sensor (3) that has various functionalities indicated via different colours of light (a):

White = Low pressure indicator / default setting.

Green = optimal pressure indicator

Red = high pressure indicator

Brushing with the recommended pressure is indicated via a green light. If too much pressure is applied, a red light reminds you to reduce pressure. If the Smart Pressure Sensor illuminates in white, we recommend applying more pressure.

When high pressure is applied the brush head movement will be reduced (in «Daily Clean», «Intense» and «Sensitive» modes). Periodically check the operation of the Smart Pressure Sensor by pressing moderately on the brush head during use.

### **Brushing modes (depending on model)**

Your toothbrush offers different brushing modes:

«**Daily Clean**» – Standard mode for daily cleaning

«**Intense**» – For an extraordinary clean feeling (operated with a higher speed)

«**Sensitive**» – Gentle, yet thorough cleaning for sensitive areas

«**Super Sensitive**» – Super gentle cleaning for extra sensitive areas

«**Whiten**» – Polishing for occasional or everyday use

«**Tongue Clean**» – Tongue cleaning for occasional or everyday use

«**Gum Care**» – Gentle massage of gums

Note: The sequence and availability of brushing modes may vary depending on model purchased.

### Mode setting:

For first use the toothbrush starts with the first mode illustrated on the package of your purchased model. To switch to other modes, successively press the mode button (8). You may change the modes during the brushing event. The toothbrush automatically starts in the mode selected last.

When operating the «Tongue Clean» mode, we recommend using a «Gentle Care» brush head (g). You can brush your tongue either with or without toothpaste. Brush the whole area of your tongue systematically in gentle movements. The recommended brushing time is 30 seconds; the motor stops after 30 seconds.

## Brush heads

Oral-B offers you a variety of different Oral-B iO brush heads (f/g/h) that only fit your Oral-B iO toothbrush handle. These unique brush heads are dentist-inspired to leave your mouth feeling clean and refreshed.

### **When to exchange brush head**

Some iO Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the bristle colour will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the colour recedes, you may exert too much pressure on teeth and gums. In general, we recommend replacing the brush head every 3 months.

### Brush Replacement Reminder

The toothbrush is equipped with a «Brush Replacement Reminder» indicating the need to exchange the brush head approximately after 3 months when used twice per day.

A yellow\* light - accompanied by a vibration signal - will illuminate in the mode button (10).

To reset the «Brush Replacement Reminder» hold the mode button pressed for 2 seconds. A vibration and illumination signal confirms the reset. If no action is taken, an automatic reset will happen after several days.

 
\*may appear orange

## Cleaning Guidelines

After each brushing, rinse your brush head under running water with the handle switched on. Remove the brush head and clean the handle and brush head separately. Make sure water runs inside the top of the handle while the handle is switched on, as well as inside the brush head. Wipe all parts dry and let them air-dry before reassembling your toothbrush again.

Unplug the charger before cleaning. Clean the charger regularly with a damp cloth.

Please check individual cleaning instructions for each accessory in its «Accessories» paragraph.

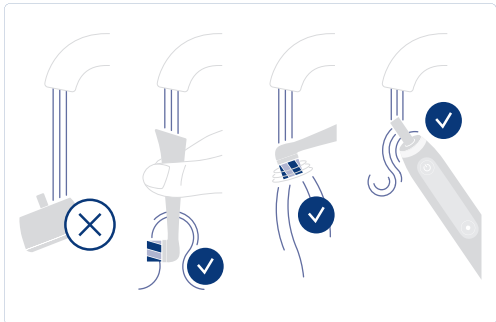

## Accessories

(depending on model)

### Travel Case (d)

Store the clean and dry toothbrush/brush heads in the travel case (d).

The outer and inner case should be cleaned with a damp cloth only.

Note: Clean stains on travel case surface immediately. Store travel case in a clean and dry place.

### Brush head holder stand (e) / Brush head holder with cap (c)

You may store your cleaned brush heads on the pins of the brush head holders. Make sure brush heads are dried before placing them in the holder and/or closing the cap. Brush head holders and cap are dishwasher-safe.

### Zipper Case / Magnetic Pouch

Store the clean and dry toothbrush/brush heads in the Zipper Case / Magnetic pouch.

The outer and inner parts can be cleaned under running water. Store the clean and dry toothbrush along with the brush head holder (c) in the magnetic pouch. Make sure brush heads are dried before placing them into the holder and/or closing the cap. The outer and inner surfaces can be cleaned under running water. Store pouches in a clean and dry place.

Note: Clean stains on pouch surfaces immediately.

Subject to change without notice.

 
## Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



### Battery removal at the end of the product's useful life

Do not disassemble the product except when disposing of the battery. Run down battery before removing. When taking out the battery for disposal, use protective clothing (gloves, safety glasses, etc.) to omit skin contact whilst leaking batteries. Use caution not to short the positive (+) and negative (–) terminals. Insulate terminals (e.g. with tape) and put the battery in a plastic bag for disposal.

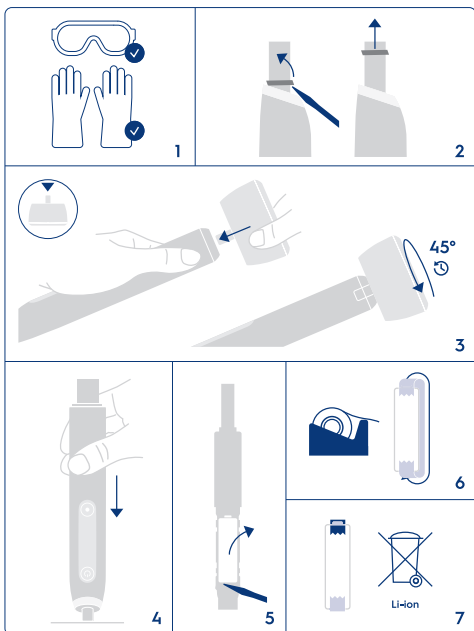

Open the handle as shown, remove the battery and dispose of it according to local environmental regulations.

**Caution! Opening the handle will destroy the appliance and invalidate the warranty.**

## Guarantee

We grant 2 years guarantee on the product commencing on the date of purchase.

Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. Depending on availability replacement of a unit might result in a different colour or an equivalent model.

This guarantee extends to every country where this appliance is supplied by Braun/ Oral-B or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun/Oral-B parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Oral-B/ Braun Customer Service Centre.

### Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable toothbrush damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable toothbrush at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

|         |    |
|---------|----|
| 中文      | 5  |
| English | 16 |

**Internet:**

[www.oralb.com](http://www.oralb.com)

[www.service.oralb.com](http://www.service.oralb.com)

Braun GmbH  
Frankfurter Str. 145  
61476 Kronberg/Germany

**Charger Type 3757**  
**Handle Type 3769**

90238803/XII-23  
CN/EN





[www.oralb.com.cn](http://www.oralb.com.cn)

热线: 4008307880/微信: pgcrcare

所有图片仅供参考, 具体以实物为准

进口商/责任者: 广州宝洁有限公司  
广州市经济技术开发区滨河路一号

限期使用日期(年月日)见包装

