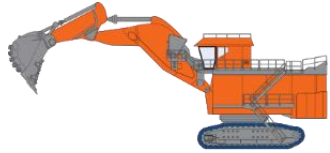


**Bradken Cast Lip GET Assembly options**

<b>EX5600 BH</b> 537 Tonnes									
MACHINE TYPE	APPROX. BUCKET CAPACITY (m³)	BRADKEN REF. NUMBER AND DESCRIPTION	BRADKEN DRAWING	INSIDE LIP WIDTH (mm)	QTY OF NOSE POSITIONS	LIP PROFILE	GET TYPE	LIP ASSY APPROX. MASS (kg)*	LIP SHROUD WIDTH (mm)
EX5600 BH	31.0 - 34.0	PCLP30-414 ECLIPSE CAST LIP ASSEMBLY	BKG502-3	4140	5	FULL SPADE	MID-ADAPTER & POINT	9721^ 10000^^	599
			BKG502-4				SOLID		
		PCLP30-430 ECLIPSE CAST LIP ASSEMBLY	BKG487-7	4300	6	FULL SPADE	MID-ADAPTER & POINT	10336^ 10669^^	439
			BKG487-6				SOLID POINT		

\*Lower wing shroud mass included in lip assembly mass calculation. Upper wing shroud mass NOT included in lip assembly mass calculation.

^Cast lip assembly uses Eclipse P2P12 series points

^^Cast lip assembly uses Eclipse P2P22 series points

^^^ Refer to document R00036 for Eclipse cast lip assembly installation, removal and maintenance procedures.

**Eclipse® Cast Lip Assembly options**



**Eclipse® Mid-Adapter and Point GET**



**Solid Point GET**

Contact your local Bradken representative or visit [bradken.com](http://bradken.com) for further information.

