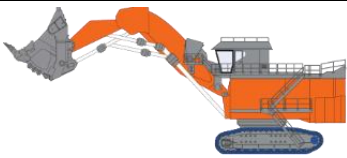


Bradken Cast Lip GET Assembly options

EX5600 LD 537 Tonnes									
MACHINE TYPE	APPROX. BUCKET CAPACITY (m³)	BRADKEN REF. NUMBER AND DESCRIPTION	BRADKEN DRAWING	INSIDE LIP WIDTH (mm)	QTY OF NOSE POSITIONS	LIP PROFILE	GET TYPE	LIP ASSY APPROX. MASS (kg)*	LIP SHROUD WIDTH (mm)
EX5600 LD	34.0	PCLP30-430 ECLIPSE CAST LIP ASSEMBLY	BKG487-7	4300	6	FULL SPADE	MID-ADAPTER & POINT	10336^ 10669^^	439
			BKG487-6				SOLID POINT	10195	

*Lower wing shroud mass included in lip assembly mass calculation. Upper wing shroud mass NOT included in lip assembly mass calculation.

^Cast lip assembly uses Eclipse P2P12 series points (shown in image below)

^^Cast lip assembly uses Eclipse P2P22 series points,

^^^ Refer to document R00036 for Eclipse cast lip assembly installation, removal and maintenance procedures.

Eclipse® Cast Lip Assembly options



Eclipse® Mid-Adapter and Point GET



Solid Point GET

Contact your local Bradken representative or visit bradken.com for further information.

