bella™ 3.5qt Hand & Stand Mixer

Quick Start Guide

USING YOUR UNIT AS A STAND MIXER:

1. Assemble hand mixer with the desired attachment: dough hooks or beaters.

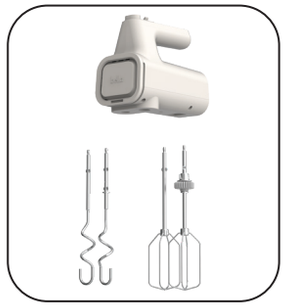

2. Place ingredients into the inner mixing bowl. Place inner mixing bowl into the outer bowl.

3. Place cover on top and turn it clockwise to lock. Insert hand mixer into the bowl cover until it clicks.

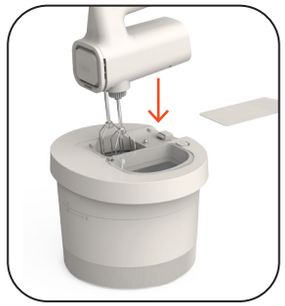

4. Turn the speed switch to desired speed setting.

5. More ingredients can be added while mixing by opening the clear feeding cover.

6. When mixing is complete, turn the speed switch to (0) OFF.

USING YOUR UNIT AS A HAND MIXER:

1. Assemble hand mixer with the desired attachment: dough hooks or beaters.

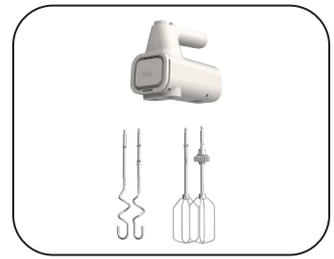

2. Place ingredients into the inner or outer mixing bowls. Plug unit into power source.

3. Turn the speed switch to desired speed setting.
Start at a low speed & gradually increase speed as needed.

4. When mixing is complete, turn the speed switch to (0) OFF.
Unplug Hand & Stand Mixer.

Please read detailed instructions provided in the instruction manual.

bella™ Batidora vertical y de mano de 3.5 cuartos

Guía de inicio rápido

USO DE LA UNIDAD COMO BATIDORA VERTICAL

1. Ensamble la batidora de mano con el accesorio deseado: ganchos para masa o batidores.

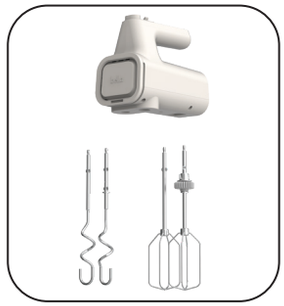

2. Coloque los ingredientes en el recipiente interior de mezcla. Coloque el recipiente interior de mezcla en el recipiente exterior.

3. Coloque la cubierta encima y gírela en sentido horario para bloquearla. Inserte la batidora de mano en la cubierta del recipiente hasta que haga clic.

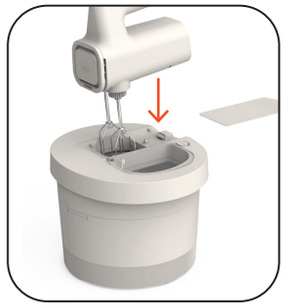

4. Lleve el interruptor de velocidad al ajuste de velocidad deseado.

5. Se pueden agregar más ingredientes mientras mezcla abriendo la cubierta trasparente de alimentación.

6. Cuando termine de batir, lleve el interruptor de velocidad a (0) apagado.

USO DE LA UNIDAD COMO BATIDORA DE MANO

1. Ensamble la batidora de mano con el accesorio deseado: ganchos para masa o batidores.

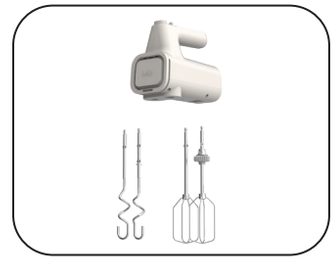

2. Coloque los ingredientes en el recipiente interior o exterior de mezcla. Enchufe la unidad a la fuente de alimentación.

3. Lleve el interruptor de velocidad al ajuste de velocidad deseado. Comience desde una velocidad baja y aumente la velocidad gradualmente según sea necesario.

4. Cuando termine de batir, lleve el interruptor de velocidad a (0) apagado. Desenchufe la batidora vertical y de mano.

Lea las instrucciones detalladas presentes en este manual de instrucciones.

35196_35211_35212_35213_35214 R1