BRAUN

Series 3

3系

91848918/XI-20



电动剃须刀

Type 5416, 5414

产品型号：5416, 5414

www.braun.com

3080s
3045s
3040s
3025s
3010s
3010BT

中文 6

한국어 16

English, AUS/NZ 23

博朗电器
德国克龙贝格61476
法兰克福大街145号

Braun GmbH
Frankfurter Straße 145
61476 Kronberg/Germany
www.braun.com
www.service.braun.com



CN/KR/AUS/NZ


3010BT + BT32





* 仅限部分销售型号

* not with all models

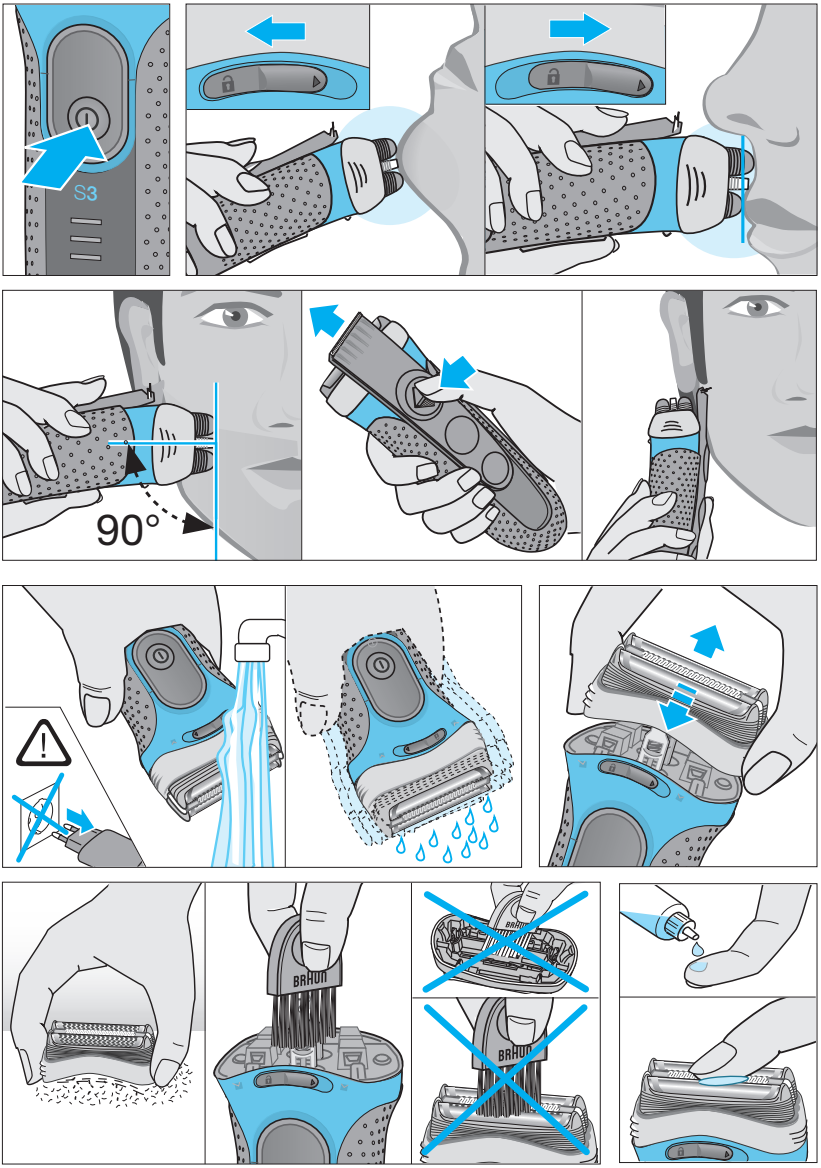
S3
90°
BRAUN
BRAUN

中文

使用产品前请仔细阅读使用说明书，说明书中含有安全使用信息。并请妥善保管，以备日后查阅。

警告



本产品可在洗澡或淋浴时使用。淋浴使用时，建议配合剃须泡沫或啫喱使用。

为了安全起见，本产品只能在断开电源线的情况下使用。**警告：将手持部分与电源适配器或电源软线分开后，才能在水中清洗手持部分。警告：保持电源适配器干燥。**

本剃须刀提供的专用电源带有特别的安全低电压转换器。**警告：请勿更改或改装电源适配器及电源线的任何部件，否则可能有触电危险。**仅可使用与剃须刀配套的专用电源线。

警告：如果产品标注 492 标志，则仅使用型号为492-xxxx的电源适配器。

警告：网膜刀头/修剪器/电源适配器/电源线损坏时请勿使用。

切勿打开剃须刀！只有在产品无法再使用时，按照电池拆除部分的说明，拆下充电电池并合理弃置。

年满8周岁或以上的儿童、以及行动不便、感官或心智障碍、缺乏经验和知识的人，应在监护人的看管下使用，或由监护人给予产品安全使用指导使其充分理解可能的伤害。请勿让儿童将本产品当作玩具。请勿让儿童清洁和维护本产品，除非他们有人看管。

为了您的个人卫生，请不要与他人共用本产品。
警告：如果有轻机油瓶，请放置在儿童不能触及的地方，切勿吞食，切勿使其接触到眼睛。请妥善处置空瓶。

组件说明

1 网膜刀头组
2 长须修剪器*
3 精准修剪开关*
4 启动/关闭开关
5 充电指示灯（绿色）
6 低电量指示灯（红色）
7 剃须刀部件更换指示灯
8 电源插孔
9 专用电源线（设计根据型号不同而有所不同）
10 充电座*
11 旅行盒*
12 网膜保护盖*
13 胡须修剪刀头，含5个梳子（BT32）*

* 仅限部分销售型号

充电

充电时理想环境温度为5℃到35℃。

温度过高或者过低可能会导致无法正确充电或者根本无法充电。剃须时理想环境温度为15℃到35℃。

请勿将剃须刀长时间置于超过50℃的环境中。

- 关闭剃须刀，用专用电源线（9）将剃须刀或者充电座（10）连接到电源插座。
- 首次充电或剃须刀数月未使用后应持续充电4小时。
- 充电完成后，应正常使用至电量耗尽。然后再次完全充电。
  之后每次充电约需1小时。
- 电源充满后不接电源可使用45分钟，使用时间视胡须浓密程度而定。需经过数次充电/放电循环后，电池方可达最大容量。
- 5分钟快速充电可用于完成一次有效剃须。

充电指示灯（5）

剃须刀正在充电或者接通电源：指示灯闪烁
剃须刀充满电且已与电源连接：指示灯常亮

低电量指示灯（6）

低电量：指示灯闪烁
您应尽快结束当次剃须过程。

剃须

按启动/关闭开关（4）操作剃须刀。
灵活网膜将根据您的面部轮廓自动调整。

长须修剪器（2）

向上滑动长须修剪器，可修剪鬓角、小胡子和胡须。

精准修剪开关 (3)

如需仔细修剪不易剃刮的部位（例如，鼻子下方），将精准修剪开关（3）滑至右侧。一片网膜将缩回固定。

理想干剃的秘诀
为确保理想剃须效果，博朗特推荐以下剃须三步骤:
1. 洗脸前剃须;
2. 剃须刀与肌肤垂直（呈90度）;
3. 拉伸脸部肌肤，逆着胡须生长方向剃须。

清洁

定期清洁可保证更好的剃须效果。

使用自来水清洗:

- 启动剃须刀（请先拔掉电源线），**使用热水冲洗剃须刀刀头和精准修剪开关，直至将须渣清洗干净**。使用不含研磨物质的液皂清洗。冲掉所有泡沫后让剃须刀继续运转几秒钟。
- 关闭剃须刀，按网膜松解按钮卸下网膜刀头组（1），将各零部件晾干。
- 若经常用自来水清洗剃须刀，应每周在长须修剪器（2）和网膜刀头组（1）上滴少许轻机油（非自带）。

应在每次同泡沫配合使用后，用自来水清洗剃须刀。

用毛刷清洁:

- 关闭剃须刀。拆除网膜刀头组，并在水平面上轻轻磕碰网膜。
- 使用毛刷清洁刀头内部区域，但切勿用刷子清洁网膜刀头组，以免损坏。

保持剃须刀理想状态

剃须刀部件更换/重置指示灯

为了保持理想剃须效果，在剃须刀部件更换指示灯（7）亮时（约18个月后）或零件发生磨损时，应当更换网膜刀头组（1）。
在剃须时更换指示灯会连续7次闪烁以提醒更换网膜刀头组，然后指示灯自动恢复原显示。
在更换网膜刀头组（1）后，按启动/关闭开关（4）至少5秒重置计数器。
操作时剃须刀部件更换指示灯闪烁，完成后指示灯熄灭，手动复位可随时进行。

电池保养

为了保持充电电池的理想效果，剃须刀应该每6个月完全放电一次（通过正常剃须放电），然后再次将电充满。

配件

网膜刀头组：32S/32B
3系剃须刀造型附件：BT32**

** 适用于所有使用网膜刀头组32S/32B的3系剃须刀（产品型号5416 / 5415 / 5414 / 5413 / 5412 / 5411）

环境保护


本产品包含可充电电池和/或可回收电子部件。

为了保护环境，弃置产品时请勿与生活垃圾一起丢弃。

当产品达到使用寿命后，弃置产品时请交至国家指定的回收站。

丢弃剃须刀时，请将电池取出。取出前请确认电池电量已完全耗尽。

请按图示步骤打开手柄，取出电池并依照本地环保规定进行处理。 如果您决定废弃剃须刀又不想自行分解机器取出电池，您也可以将剃须刀送到博朗服务中心，中心的员工会帮您取出电池并以环保的方式处理它。

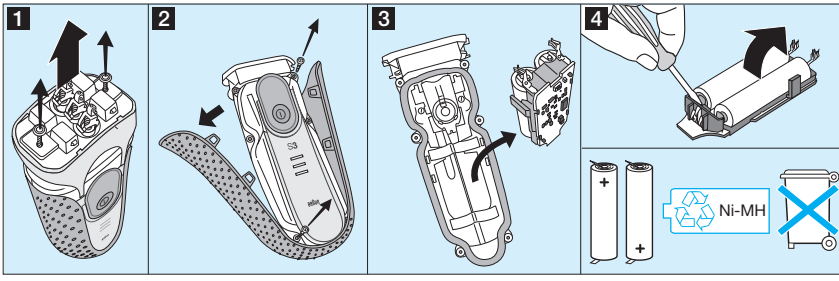

请勿分解取出的充电电池，可能引起火灾、触电及受伤。

注意！擅自打开手柄将会损坏剃须刀并导致保修失效。

声功率级噪声为68dB（A）

如有更改，恕不另行通知。

电气规格详见专用电源线标示。

www.braun.com
广州宝洁有限公司
广州市经济技术开发区滨河路一号
邮　编：510730
Braun是博朗有限两合公司(BRAUN GMBH)的注册商标。
热线：4008333010 / **微信：**pgcrcare

电动剃须刀
销售型号：3080s/3045s/3040s/3025s/3010s/3010BT
产品型号：5416/5414
执行标准：GB 4706.1，GB 4706.9
输入：3.5V ⎓，6W

充电座
型号：5784
输入：1.5V ⎓，1.3A

电源适配器
型号：492-xxxx（所有型号为492开头的电源适配器）
输入：100-240V~，7W

保修

本产品保修期为购买之日起两年。保修期内凡因生产过程导致的各种瑕疵本公司将视情况更换零件或整个产品。

根据现有库存，更换的产品可能颜色不同或者为其他同等机型。

本保修条款适用于所有博朗公司或其他授权经销商销售本产品的国家。

上述保修承诺不适用于下述情形：

－使用不当造成的产品损坏（包括但不限于使用错误的电流、电压，将产品插入不合适的插座及其他人为损坏）。

－网膜和刀头磨损。

－对正常使用影响不大的瑕疵。

－非家庭使用（如工业、商业用）引起的损坏。

一旦由未获授权人员修理、或换用非博朗原装零配件，本保修立即终止。

保修期内提供的服务不影响保修期的终止。保修期中替换的零件或整机的保修服务，与本产品的保修期同时终止。

本保修不影响法律明文规定的权利。

为了保证在保修期间获得服务，请携带或者寄送完整设备和相应销售凭证至博朗授权的售后服务部（地址信息可登陆www.service.braun.com在线查询）。

BRAUN 产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
刀身	×	○	○	○	○	○
清洁中心(如适用)	×	○	×	○	○	○
充电座(如适用)	×	○	○	○	○	○
充电器(如适用)	×	○	○	○	○	○

本表格依据SJ/T 11364的规定编制。
○:表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
×:表示该有害物质至少在该部件的某一均质材料中的含量超出了GB/T 26572规定的限量要求。

最新Braun售后服务部地址

邮编	城市	公司名称	地址	联系电话
北区				
200085	上海	上海开呈家电维修服务有限公司	上海市黄浦区瑞金南路345弄1号楼6801室	021-64384218/64688241
201100	上海	上海千捷家电有限公司	上海市闵行区雅致路31弄1号105室	021-64122533
100078	北京	北京盛侨家用电器维修服务中心	北京市丰台区方庄芳群园2区6号楼金芳公寓408室	010-67698025/67630617
300022	天津	天津市大东电器维修有限公司	天津市和平区河北路50号信德大厦908-2	022-27120168/27120170
110011	沈阳	沈阳市沈河区德朗电器维修中心	沈阳市沈河区承德路36-1	024-24870309
150020	哈尔滨	哈尔滨宪成晖家用电器有限公司	哈尔滨市道外区南勋街18号	0451-88940125
116021	大连	大连中服电子技术服务中心	辽宁省大连市沙河口区西南路800-2号	0411-86841988
130021	长春	长春圣爽电子产品有限公司	长春市朝阳区惠民路北胡同49号（惠民路北胡同与立信街交汇西30米）	0431-85676646
266071	青岛	市南区洪双嘉电子商行	青岛市南区银川西路3号政泰商务楼202室	0532-85977910
050000	石家庄	河北安森钟表维修有限公司	石家庄市中山西路108华润万象城1楼 名匠世家	0311-89891170
310016	杭州	杭州中侨家电维修服务有限公司	杭州市采荷路10号	0571-86047438
230001	合肥	合肥市包河区国升电器维修安装服务部	合肥市经开区青龙潭路长安花园安尔斯堡9栋107商铺	0551-63682143/68992143
450000	郑州	郑州百川电器技术有限公司	郑州市北下街79号	0371-66964036
210003	南京	南京博伊华电子电器经营部	南京市中山北路223号建达大厦	025-83420092
214031	无锡	无锡市松信环境科技有限公司	无锡市五爱北路27号	0510-82729805
400020	重庆	江北区中侨家电维修部	重庆市江北区建新南路18号城市领地A栋附2楼77号门市	15696126296；023-63527117
南区				
201112	上海	上海馨美电器有限公司	上海市闵行区浦锦路2049弄（万科VMO）39号301室	021-54475808；021-64606449；021-20916662
213001	常州	常州市金博家电经营部	常州市天宁区迎宾路江南佳园4-S-10	0519-88836628
226001	南通	崇川区明瑞电器维修服务中心	南通市南川园通明花苑6幢106店面	0513-96889688/85105088
315040	宁波	宁波市江东明楼甬城家电维修部	宁波市百丈东路892号万金大厦1306室	0574-87774444/87771344
325029	温州	温州市声像技术服务公司	温州市鹿城区宠带路14号-8	0577-88850706
510600	广州	广州市博健电器有限公司	广州市五羊新城明月二路春风路E-12栋首层	020-87386165(6)
518028	深圳	深圳市顺电连锁股份有限公司	广东省深圳市罗湖区深南东路2102号振华大厦2楼维修部	0755-83286255 或 83286261
650051	昆明	昆明松凯科技有限公司	昆明市环城北路233号城市之光A1301	0871-63645557
430015	武汉	武汉市江岸区兆利达家电维修中心	武汉市江汉区唐家墩路203号附26号门面	027-85730517/85790611
610017	成都	成都翎驰泰达电子产品有限公司	成都市大安东路57号1-3号	028-86944135 转 25
350001	福州	福州福春电器维修服务有限公司	福州市晋安区塔头路三角池63号嘉源欣苑1号楼17-18号店面	0591-87575455/87582122/87555110
361003	厦门	厦门市思明区新鹭声电子技术服务部	厦门后埭溪路248号之6、7、8号	0592-5170118
330003	南昌	南昌市西湖区海洋电器服务部	南昌市永叔路6号	0791-86215790/82175587
530001	南宁	南宁市南方家电维修中心	广西南宁市唐山路29号首层	0771-3118895/3907787

上海涵思贸易有限公司可办理零件及产品邮购　　电话：(021)64606449
E-mail: sp-order@hansi.sh.cn　　邮编：201100

注：如果当地无特约维修站，请与就近的维修站联系。
或登陆博朗售后网站 www.braun-service.com.cn 获得服务。

手机扫描二维码
进入博朗售后网站

BRAUN 广州宝洁有限公司
博　朗　地址：广州市经济技术开发区滨河路一号
售后服务日常联系地址：中国上海浦东三林路550号　邮编：200124

上述售后服务部地址确定于2020年9月，可能有不定期更新。如有疑问，请咨询客户服务热线。

한국어

본 제품은 당사의 엄격한 기준에 맞춰 만들어진 우수한 품질과 기능, 디자인을 갖춘 제품입니다. 새롭게 선보이는 브라운 면도기의 사용이 만족스럽길 바랍니다.

안전한 사용을 위해 설명서를 주의 깊게 읽어보시고 필요할 때 참고할 수 있도록 잘 보관해주시기 바랍니다.

주의사항



본 제품은 목욕 또는 샤워 시에도 사용할 수 있습니다. 샤워 시에는 면도 크림이나 젤을 사용할 것을 권장합니다. **안전한 사용을 위해 반드시 전원에서 제품을 분리하고 무선으로 사용해야 합니다.**

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드 세트가 들어있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다.

본 제품과 함께 제공된 전용 코드만 사용하시기 바랍니다.
본 제품에 492 마크가 표시되어 있다면, **492-XXXX** 코드가 표시된 브라운 전원 기기로 사용할 수 있습니다.

손상된 면도망과 트리머, 코드는 절대 사용하지 마십시오.

제품을 분해하지 마십시오! 제품의 유효 수명이 끝날 때 배터리를 폐기하는 경우에만 배터리 폐기 관련 지침에 따라 분해하십시오.

본 제품은 안전을 위하여 만 8세 이상부터 사용 가능하며, 심신박약자 또는, 사용 경험이나 지식이 부족한 사람의 경우 보호자의 관리 감독 하에 있거나 관련 위험을 이해한 경우에만 제품을 사용할 수 있습니다. 어린이가 가지고 놀지 않도록 지도가 필요합니다. 만 8세 이하 어린이나 보호자의 관리 감독이 없는 경우에는 세척 및 유지관리를 할 수 없습니다.

위생적인 사용을 위해, 면도기를 다른 사람과 함께 사용하지 마십시오.

각 부의 명칭

1 면도망 & 면도날 카세트
2 긴 수염 정리용 트리머*
3 정밀 면도 모드 스위치*
4 On/Off 스위치
5 녹색 충전 표시등
6 적색 저충전 표시등
7 부품 교체 표시등
8 면도기 전원 소켓
9 전용 코드 세트 (디자인은 다를 수 있음)
10 충전 거치대*
11 여행용 케이스*
12 보호 캡*
13 턱수염 트리머 헤드와 조절 빗 5개 (BT32)*

*특정 모델에만 해당

충전

충전을 위한 주변의 최적온도는 5℃에서 35℃입니다. 그 외의 환경에서는 충전이 안되거나 충전 효율이 떨어질 수 있습니다. 면도를 위한 최상의 온도는 15℃에서 35℃입니다. 면도기를 50℃ 이상 온도에 장시간 노출하지 마십시오.

- 전용 코드 세트(9)를 사용하여 모터를 끈 상태에서 면도기 또는 충전 거치대(10)를 전원에 연결합니다.
- 처음 충전하거나 면도기를 몇 달간 사용하지 않은 경우, 면도기를 연속 4시간 동안 충전합니다.
- 면도기가 완전히 충전되면 분리하여 사용합니다. 그 후 최대 용량까지 충전합니다. 최초 충전 이후의 충전은 약 1시간이 소요됩니다.

- 완전 충전된 후에는 코드 없이 최대 45분간 사용이 가능합니다. 사용 시간은 수염이 자라는 정도에 따라 달라집니다. 배터리의 용량은 몇 번의 충전과 방전을 거듭한 후에 최대화 됩니다.
- 5분 급속 충전으로 한 번의 면도가 가능합니다.

충전 표시등(5)

녹색 충전 표시등은 배터리 충전 상태를 나타냅니다. 면도기가 충전되고 있거나 켜져 있을 때 녹색 충전 표시등이 깜박입니다.
배터리가 완전히 충전된 상태일 때 전원이 연결되어 있을 경우, 녹색 충전 표시 등이 지속적으로 켜지게 됩니다.

저충전 표시등(6)

배터리가 얼마 남지 않은 경우 적색 저충전 표시등이 깜박입니다. 이때 하시던 면도는 충분히 끝낼 수 있습니다.

면도

On/Off 스위치(4)를 눌러 면도기를 작동시킵니다. 유연한 면도망이 얼굴 윤곽에 따라 자동으로 조정됩니다.

긴 수염 정리용 트리머(2)

구레나룻이나 콧수염, 턱수염 등을 정리하려면 긴 수염 정리용 트리머를 위로 밀어올립니다.

정밀 모드 스위치 🔒(3)

면도하기 까다로운 곳(예: 코 아래)을 정밀하게 면도하기 위해 스위치(3)를 올바른 위치로 밉니다. 면도망 하나의 높이가 낮아집니다.

완벽한 건식 면도를 위한 제안

최상의 결과를 얻기 위해 다음과 같은 3단계 과정에 따라 면도하십시오.

1. 항상 세안 전에 면도하십시오.
2. 면도기는 피부에 수직(90°)이 되도록 사용하십시오.
3. 피부를 곧게 편 상태에서 수염이 자란 반대 방향으로 면도하십시오.

청소

정기적인 청소는 면도 성능을 향상시킵니다.

흐르는 물로 세척:

- (코드 연결 없이) 면도기의 스위치를 켜고 **잔여물이 제거될 때까지 면도기 헤드를 흐르는 따뜻한 물에 헹구십시오.** 연마제가 첨가되지 않은 액상 비누를 사용할 수도 있습니다. 거품을 완전히 헹군 후에 면도기를 수 초 동안 작동시키십시오.
- 그런 다음, 면도기 스위치를 끄고 면도망&면도날 카세트(1)을 분리한 후 건조시켜 주십시오.
- 면도기를 흐르는 물에 정기적으로 세척하는 경우, 일주일에 한 번씩 윤활유(별도 구매)를 긴 수염 정리용 트리머(2)와 면도망&면도날 카세트(1) 위에 떨어뜨려 주십시오.

면도용 크림을 사용한 후에는 면도기를 반드시 세척해야 합니다.

세척용 솔로 세척:

- 면도기 스위치를 끄십시오. 면도망&면도기 카세트를 분리한 뒤 평평한 표면에 놓고 톡톡 쳐서 털어주십시오.
- 세척용 솔을 사용하여 면도기 헤드의 내부를 청소하십시오.
  단, 면도망&면도날 카세트는 손상될 수 있으니 솔로 청소하지 마십시오.

면도기를 최상의 상태로 유지하는 방법

면도기 부품 교체 표시등과 초기화

100% 면도 성능을 유지하기 위해, 약 18개월 후 면도기 부품 교체 표시등(7)에 불이 들어오거나 마모되면 면도망&면도날 카세트(1)를 교체합니다.

부품 교체 표시등은 면도망&면도날 카세트 교체 시기를 알려주기 위해 다음 7회 면도 시까지 켜집니다. 그 후에는 자동으로 초기화됩니다. 면도망&면도날 카세트(1)를 교체한 후에 볼펜을 이용해 On/Off 스위치(4)를 5초간 눌러 카운터를 재설정합니다. 조작하는 동안 교체 표시등이 깜빡거리다 재설정이 완료되면 불이 꺼집니다. 수동 리셋은 언제든지 하실 수 있습니다.

배터리 관리

충전식 배터리의 최적 용량을 유지하기 위해, 약 6개월마다 면도기가 완전히 방전될 때까지 사용합니다. 그 후 면도기를 최대 용량까지 충전합니다.

기타 부품들

면도망&면도날 카세트: 32S/32B
시리즈3 면도기*를 위한 스타일링 부속품*: BT32

*면도망&면도날 카세트 32S/32B를 사용하는 모든 시리즈3 면도기에 적합함. (면도기 타입 5416/5415/5414/5413/5412/5411)

환경 보호를 위한 주의사항

제품에는 배터리 등 재활용 가능한 전자제품 폐기물이 포함되어 있습니다. 환경 보호를 위해 일반 쓰레기와 함께 버리지 마시고, 재활용을 위해 국가에서 지정한 전자제품 폐기물 수거함을 이용하십시오.



본 설명서는 사전 예고 없이 변경될 수 있습니다.

전자 부품 명세는 전용 코드 세트에 표시된 사항을 참조하십시오.

이 기기는 가정용(B급) 전자파 적합 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

품질 보증

- 본 제품은 구입일로부터 1년간 품질을 보증합니다.
- 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무상수리 또는 교환해 드립니다. 상기 사항은 브라운이나 지정 대리점에 의해 공급된 모든 나라에 적용됩니다.
- 보증기간 중이라도 소비자의 과실로 인한 파손이나 정상적인 마모(예: 면도날&면도망 카세트) 또는, 사용에 지장이 없는 경미한 결함 등은 무상 수리나 교환을 받으실 수 없습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다. 보증기간 내에 서비스를 받으시려면 브라운 고객 서비스센터에서 구입 영수증을 확인받으셔야 합니다.

본 제품은 소비자분쟁해결기준에 따라 보상받을 수 있습니다.
A/S 문의: 1577-8027
가까운 피씨에스원코리아 서비스센터에서 A/S를 받으실 수 있습니다.

브라운 제품:
전국 유명 백화점, 할인점 및 전자상가에서 구입할 수 있습니다.
http://www.braun.com
http://www.braun.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명			모 델 명		
구 입 일			보증기간		구입일로부터 1년
고 객			판 매 점		

한국 피앤지 판매 (유)

서울시 영등포구 국제금융로 10, 37층
소비자 상담실 전화 : 080-920-6000(수신자부담)

English

Read these instructions completely, they contain safety information. Keep them for future reference.

WARNING


This appliance is suitable for use in a bathtub or shower. When using it in the shower, we recommend applying shaving foam or gel. For safety reasons this appliance can only be operated cordless.

This appliance is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock.

Only use the special cord set provided with your appliance.

If the appliance is marked 492, you can use it with any Braun power supply coded 492-XXXX.

Do not use the appliance with a damaged foil, trimmer or cord.

Do not open the appliance! Only at the end of the product's useful life, disassemble the rechargeable battery for disposal reasons if required as shown in the battery removal section.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance should not be made by children unless they are supervised.

For hygienic reasons, do not share this appliance with other persons.

Description

1 Foil & Cutter cassette
2 Long hair trimmer*
3 Precision mode switch*
4 On/off switch
5 Green charging light(s)
6 Red low-charge light
7 Replacement light for shaving parts
8 Shaver power socket
9 Special cord set (design may differ)
10 Charging stand*
11 Travel pouch*
12 Protection cap*
13 Beard trimmer head with 5 combs (BT32)*

* not with all models

Charging

Recommended ambient temperature for charging is 5 °C to 35 °C. The battery may not charge properly or at all under extreme low or high temperatures. Recommended ambient temperature for shaving is 15 °C to 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

- Using the special cord set (9), connect the shaver or the charging stand (10) to an electrical outlet with the motor switched off.
- When charging for the first time or when the shaver is not used for a few months, leave the shaver to charge continuously for 4 hours.
- Once the shaver is completely charged, discharge the shaver through normal use. Then recharge to full capacity. Subsequent charges will take about 1 hour.

- A full charge provides up to 45 minutes of cordless shaving time depending on your beard growth. However, the maximum battery capacity will only be reached after several charging/discharging cycles.
- 5-minute quick charge is sufficient for a shave.

Charging light(s) (5)
The shaver is being charged or switched on: Flashing light
The shaver is fully charged and connected to an electrical outlet: Permanent light

Low-charge light (6)
Low battery: Flashing light
You should be able to finish your shave.

Shaving

Press the on/off switch (4) to operate the shaver.
The flexible shaving foils automatically adjust to every contour of your face.

Long hair trimmer (2)
To trim sideburns, moustache or beard, slide the long hair trimmer upwards.

Precision mode switch (3)
For precise handling in hard to shave areas (e.g. under the nose) slide the switch (3) to the right position. One foil will be lowered.

Tips for a perfect dry shave
For best results, Braun recommends you follow 3 simple steps:
1. Always shave before washing your face.
2. At all times, hold the shaver at right angles (90˚) to your skin.
3. Stretch your skin and shave against the direction of your beard growth.

Cleaning

Regular cleaning ensures better shaving performance.

Cleaning under running water:

- Switch the shaver on (cordless). **Rinse the shaver head and the precision mode switch under hot running water until all residues have been removed.** You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, remove the Foil & Cutter cassette (1) and let it dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil (not included) onto the long hair trimmer (2) and Foil & Cutter cassette (1).

The shaver should be cleaned after each foam usage.

Cleaning with a brush:

- Switch off the shaver. Remove the Foil & Cutter cassette and tap it out on a flat surface.
- Using a brush, clean the inner area of the head. However, do not clean the shaver Foil & Cutter cassette with a brush as this may damage it.

Keeping your shaver in top shape

Replacement light for shaving parts / Reset

To maintain 100% shaving performance, replace the Foil & Cutter cassette (1), when the replacement light for shaving parts (7) comes on after about 18 months or when worn.

The replacement light will remind you during the next 7 shaves to replace the Foil & Cutter cassette. Then the shaver will automatically reset the display.
After you have replaced the Foil & Cutter cassette (1), press the on/off switch (4) for at least 5 seconds to reset the counter. While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Preserving the batteries

In order to maintain the optimum capacity of the rechargeable batteries, the shaver has to be fully discharged by shaving every 6 months approximately. Then recharge the shaver to full capacity.

Accessories

Foil & Cutter cassette: 32S/32B
Styling attachment for Series 3 shavers*: BT32

* Fits all Series 3 shavers with Foil & Cutter cassette 32S/32B (Types 5416/5415/5414/5413/5412/5411)

Environmental notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose of in household waste, but for recycling take to electric waste collection points provided in your country.



Subject to change without notice.

For electric specifications, see printing on the special cord set.

Guarantee

We grant a 2-year guarantee on the product commencing on the date of purchase. Within the guarantee period we will eliminate any defects in the appliance resulting from faults in materials or workmanship, free of charge either by repairing or replacing the complete appliance at our discretion.
Depending on availability replacement might result in a different color or an equivalent model.
This guarantee extends to every country where this appliance is supplied by Braun or its appointed distributor.
This guarantee does not cover: damage due to improper use, normal wear and tear (e.g. shaver foil or cutter block) as well as defects that have a negligible effect on the value or operation of the appliance. The guarantee becomes void if repairs are undertaken by unauthorised persons and if original Braun parts are not used.
To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorised Braun Customer Service Centre (address information available online at www.service.braun.com).

For UK only:

This guarantee in no way affects your rights under statutory law.

For Australia & New Zealand only:

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable

loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits given by this warranty are in addition to other rights and remedies of the consumer law.

For warranty claims please contact:
Procter & Gamble Australia Pty Ltd
Level 4, 1 Innovation Road
Macquarie Park, NSW 2113

Telephone (AU): 1 800 641 820
Telephone (NZ): 0 800 108 909
Email (AU and NZ): Visit link
https://pgconsumersupport.secure.force.com/ContactUs/emailus

Our Warranty
This appliance is also covered by a 24 Month Replacement Warranty commencing on the date of purchase **(Our Warranty)**.

Our Warranty applies in all States and Territories of Australia and in New Zealand and is in addition to any mandatory statutory obligations imposed on Procter & Gamble Australia Pty. Ltd., its distributors and its manufacturer. Our Warranty does not purport to exclude, restrict or modify any such mandatory statutory obligations.

Our Warranty only covers defects in the appliance resulting from faults in workmanship or materials. Therefore, if your appliance becomes faulty as a result of faults in workmanship or materials, it will be exchanged by your retailer, on presentation of proof of purchase.

Our Warranty only applies to domestic or household use of this appliance and the warranty will only apply if the correct operating

instructions included with this product have been followed. For any appliance replaced under this warranty, Our Warranty ends on the expiry of the warranty period that applied to the original appliance.

Our Warranty does not cover:

A. Damage arising from improper use or operation on incorrect voltages.
B. Breakages to shaver foils, glass jars, etc.
C. Normal wear due to moving parts.
D. Repairs undertaken by unauthorised service personnel or use of non genuine parts.
E. Appliances that are outside the warranty period or are not faulty.

This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

If the appliance is powered by a cord extension set or electrical portable outlet device these should be positioned so they are not subject to splashing or ingress of moisture.

To the extent permitted by the laws of the Commonwealth of Australia and New Zealand and applicable laws of a State or Territory of Australia, and without affecting any mandatory statutory obligations imposed by law, Our Warranty is given in exchange for any other rights you may have against Procter & Gamble Australia Pty. Ltd. or its distributors or manufacturer, whether at law, in tort (including negligence), in equity or under statute.


Please retain proof of purchase of this appliance. If you have any questions in relation to Our Warranty, please call our Consumer Service line (see below for numbers).

If you intend to make a claim please telephone our Customer Service line on the numbers set out below to obtain information about your claim and any costs associated with claiming under Our Warranty. You will bear the cost of returning your product to us.

Repairs and service
If you are sending your appliance for repair under Our Warranty, please pack the appliance adequately and send it to your nearest Service Agent, at your expense. Should your Braun product require service, please call (free call) for **Australia 1800 641 820** or **New Zealand 0800 108 909** to be referred to the Authorized Braun Service Center closest to you or visit www.service.braun.com.



BRAUN

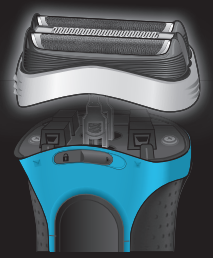


32S/32B Foil & Cutter cassette
32S/32B 网膜刀头组

__ / __ / ____

Please note down the suggested replacement date (in 18 months from now) below replacement part reference number.

请在更换部件时参考下方编号，记下建议的更换日期（自本日起18个月）。

교체 부품 넘버 아래 교체 일자(현재부터 18개월 후)를 적어 두십시오.

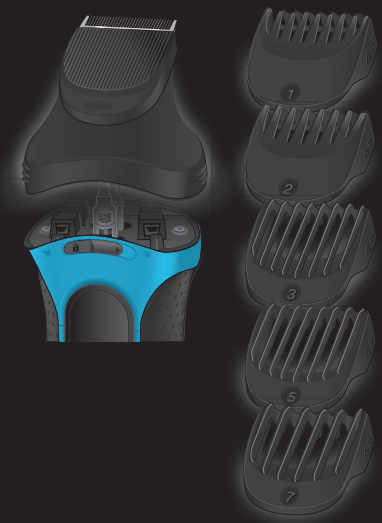

BT32 Styling Attachment
Beard trimmer head + 5 combs

BT32剃须刀造型附件
胡须修剪刀头含5个梳子

BT32 스타일링 부속품
턱수염 트리머 헤드 + 조절 빗 5개

