




iO





+1년

제품보증 무료 연장


—— 스캔 후 제품 등록을 완료하세요! ——

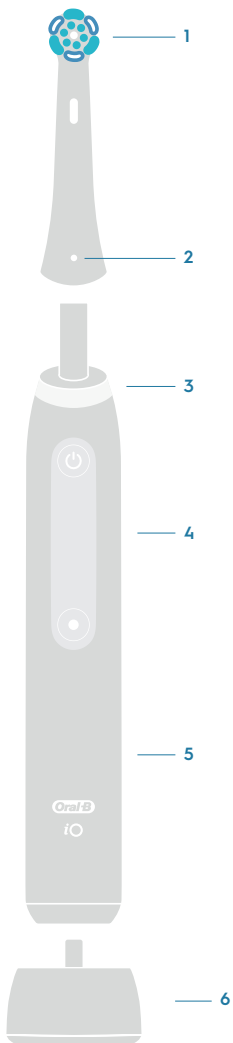

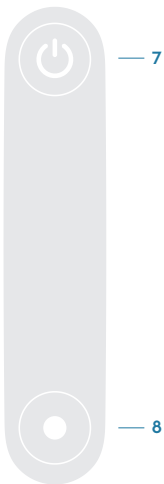


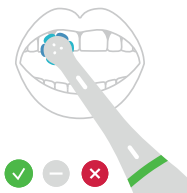


a

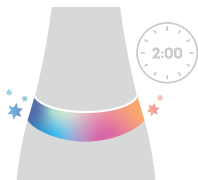


b



c

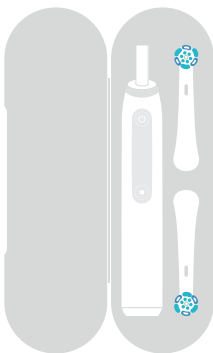

d



e



f



g



h

각 부의 명칭

- 1 칫솔모
- 2 칫솔모 식별 기호
- 3 스마트 압력 센서 / 라이트 링
- 4 인터페이스
- 5 전동칫솔 핸들
- 6 충전기
- 7 전원 버튼
- 8 모드 변경 버튼
- 9 저 충전 표시등
- 10 칫솔모 교체 시기 알림

액세서리(모델에 따라 다름)와 기능

- a 스마트 압력 센서
- b 2분 칫솔질 완료 알림
- c 뚜껑이 있는 칫솔모 거치대
- d 여행용 케이스
- e 칫솔모 거치대
- f 《얼티밋 클린》 칫솔모
- g 《젠틀 케어》 칫솔모
- h 《래디언트 화이트》 칫솔모

알아두기: 구성품은 구입한 모델에 따라 다를 수 있습니다.

한국어

오랄-비의 고객이 되신 것을 환영합니다!

이 제품을 처음 사용하시기 전에 설명서를 잘 읽어보시고,
읽으신 후에도 추후 참조를 위해 잘 보관해 주시기 바랍니다.

중요사항

- 전반적인 제품/전기코드/액세서리의 손상 여부를 정기적으로 확인하십시오. 손상되거나 작동하지 않는 장치는 더 이상 사용하지 마십시오. 제품/액세서리가 손상되었을 경우, 제품을 오랄-비 서비스센터에 가져가십시오. 제품의 어떤 부분도 변경하거나 조작하지 마십시오. 이는 화재, 감전, 혹은 부상을 초래할 수 있습니다.
- 장치의 개구부에 어떤 물체도 삽입하지 마십시오.
- 만 3세 이하의 어린이가 사용하도록 제작되지 않았습니다. 어린이나 육체적, 정신적, 지각 상의 장애를 겪고 있거나 사용 경험이나 지식이 부족한 성인은 보호자의 관리 감독하에 있거나 혹은 안전한 기기 사용을 위한 지도를 받은 경우, 그리고 관련 위험을 이해한 경우에만 전동칫솔을 사용할 수 있습니다.
- 어린이가 세척하거나 관리하지 않도록 합니다.
- 어린이가 가지고 놀지 않도록 지도가 필요합니다.
- 칫솔질에만 사용하십시오. 칫솔모를 씹거나 물지 마십시오. 장난감으로 사용하거나 성인의 감독 없이 사용하지 마십시오.
- 제품은 이 설명에 명시된 목적에만 사용하십시오. 제조업체에서 권장하지 않는 부착물은 절대 사용하지 마십시오.
- 본 제품과 함께 제공된 충전기만 사용하십시오.

주의사항

- 충전기를 물 또는 액체 안이나 욕조 또는 세면대에 쉽게 빠질 수 있는 장소에 놓지 마십시오. 물에 빠뜨린 충전기를 꺼내기 위해 손을 넣지 마십시오. 물에 빠진 즉시 코드를 뽑아 주십시오.
- 코드를 심하게 구부리거나 꼬거나 늘리지 않도록 하십시오.
- 이 제품은 교체 불가능한 배터리를 포함하고 있습니다. 제품을 열거나 분해하지 마십시오. 배터리 재활용을 위해서는 기기 전체를 각 나라의 환경보호 규정에 알맞게 처리하십시오. 핸들을 열면 기기가 파손되고 품질보증 대상에서도 제외됩니다.
- 플러그를 뽑을 때는 항상 코드 선 대신 전원 플러그를 잡고 뽑으십시오. 젖은 손으로 전원 플러그를 만지지 마십시오. 감전의 원인이 될 수 있습니다.
- 구강 관련 질환으로 치료를 받고 있는 경우, 제품 사용 전 전문가와 상담하시기 바랍니다.
- 본 제품은 개인 위생용 기구입니다. 다수의 환자를 대상으로 한 치과 시술이나 기관에서 공동 사용은 적합하지 않습니다. 위생상의 이유로 각 가족 구성원이 개별 칫솔 손잡이와 칫솔모를 사용할 것을 권장합니다.
- 작은 부품이 떨어져 나올 수 있으니 어린이의 손이 닿지 않는 곳에 보관하십시오.

칫솔모 헤드 파손으로 생긴 작은 부품은 질식이나 치아 손상의 위험이 있습니다. 이를 방지하기 위해서는 다음을 실행하십시오.

- 사용 전에 칫솔모 헤드가 잘 맞는지 확인하십시오. 칫솔모가 더 이상 적합하지 않으면 사용을 중지하십시오. 칫솔모 헤드 없이 절대 사용하지 마십시오.
- 칫솔 손잡이를 떨어뜨릴 경우, 눈에 보이는 손상이 없더라도 다음 사용 전에 칫솔모를 교체해야 합니다.
- 3개월마다 혹은 칫솔모(헤드)가 손상 마모된 경우 즉시 교체하시기를 권장합니다.
- 사용할 때마다 칫솔모를 올바르게 세척하십시오 (《세척 권장사항》 단락 참조). 올바른 세척은 칫솔의 안전한 사용과 기능적 수명을 보장합니다.

중요 정보

- 이 칫솔과 파우치(액세서리)는 NdFeB 자석을 포함하고 있으며 자기장을 생성합니다. 의료 기기를 사용하시거나 이식된 의료 기기가 있는 경우, 오랄-비 iO 전동칫솔을 안전하게 사용하기 위해 의료 기기 제조업체 또는 의사와 상의하십시오.

세부사항

전압 사항은 충전장치 하단을 참조하세요.

소음 레벨: 64 dB (A)

전동칫솔 사용하기

충전 및 작동

- 전원에 연결된 충전기 (6) 에 핸들을 올려놓아 충전하십시오.
- 충전 중에는 전원 버튼이 흰색으로 깜박입니다. 충전이 완료되면 표시등이 꺼집니다. 완전히 충전될 때까지는 보통 16시간이 소요됩니다.
- 배터리 충전 정도가 낮을 경우, 저 충전 표시등 (9) 이 빨간색으로 깜박거립니다. 배터리가 완전히 방전되면 모터가 멈춥니다. 배터리를 충전하려면 칫솔을 충전기에 올려놓으십시오.
- 완전 충전상태를 유지하기 위해, 전원이 연결된 충전기에 항상 올려놓을 수 있습니다. 배터리 과충전의 우려는 없습니다. 그러나 환경을 위해 충전하는 동안에만 충전기를 전원 소켓에 연결하십시오.
- 외부 작동 한계 및 표준 배터리 전류를 초과하면 전원이 꺼집니다. 칫솔을 충전기에 올려놓아 작동시킬 수 있습니다.

주의: 이 전동칫솔 핸들은 리튬-이온 배터리가 들어있습니다. 핸들을 50°C 이상의 온도에 노출시키지 마십시오.

알아두기: 최적의 배터리 유지를 위해 핸들은 실온에 보관하십시오.

칫솔질 시작하기

칫솔모 (1) 를 전동칫솔 핸들 (5) 에 꽂습니다. 핸들과 칫솔모 사이에는 작은 틈이 있어야 합니다.

칫솔모를 물에 적시고 치약을 묻힙니다. 치약이 튜는 것을 방지하기 위하여 입안에 칫솔모를 넣으신 후 전원 버튼 (7) 을 누릅니다. 칫솔모를 치아에서 치아로 천천히 움직이십시오. 바깥쪽, 안쪽, 씹는 저작면까지 닦으십시오. 입안의 네 구역을 모두 고르게 닦으십시오. 치과의사나 치위생사에게 올바른 칫솔질에 대한 조언을 구하셔도 좋습니다.

처음 전동칫솔을 사용하는 며칠 동안은 잇몸에서 약간의 피가 날 수도 있습니다. 이러한 현상은 보통 며칠이 지나면 멈춥니다. 그러나 2주가 지나도 출혈이 계속될 경우에는 치과 전문의나 치위생사와 상담하십시오. 치아와 잇몸이 민감하신 경우에는 《부드러운 세정》모드 혹은 《매우 부드러운 세정》모드 사용을 권장합니다. (오랄-비 《젠틀 케어》 칫솔모 (g) 를 함께 이용하실 수 있습니다.) 구매하신 모델에 따라 사용 가능한 모드는 다를 수 있습니다.

타이머

타이머는 30초마다 짧은 진동이 울리면서 구강 내 네 구역 중 다음

구역을 세정할 차례임을 알려줍니다. 치과의사가 권장하는 2분 양치가 완료되면 긴 진동으로 알려줍니다.

칫솔질 도중 전원이 꺼지더라도 양치 시간이 다음 30초 동안 저장됩니다. 전원이 꺼지고 30초가 지나거나 전원이 연결된 충전기에 연결하면 타이머는 초기화됩니다.

칫솔질 완료 알림

2분간의 칫솔질을 완료하면 라이트 링이 반짝입니다 (b).

스마트 압력 센서 / 라이트 링 (a)

이 칫솔은 여러 가지 색상 (a) 으로 표시되는 다양한 기능을 갖춘 스마트 압력 센서 (3) 가 탑재되어 있습니다.

흰색: 압력이 낮음을 알림 / 기본 설정

초록: 알맞은 압력을 알림

빨강: 압력이 높음을 알림

칫솔질에 알맞은 압력을 초록색으로 알려줍니다. 과다한 압력이 가해지면, 빨간불이 켜짐으로써 압력을 줄이도록 알려줍니다. 만약 스마트 압력 센서가 흰색 (혹은 설정 색상) 불이 켜지면 압력을 늘릴 것을 권장합니다.

과한 힘이 가해지면 칫솔모의 움직임이 줄어듭니다 (《일상 세정》, 《강력 세정》, 《부드러운 세정》 모드에서 작동함). 사용 중 칫솔모 헤드를 적당히 눌러 스마트 압력 센서의 작동 상태를 주기적으로 점검하십시오.

칫솔질 모드 (모델에 따라 다름)

이 칫솔은 각기 다른 세정 모드를 제공합니다.

《일상 세정》- 일상적인 구강 세정을 위한 기본 모드

《강력 세정》- 더욱 개운한 세정 (더 빠르게 작동함)

《부드러운 세정》- 민감한 부분을 부드럽고 깔끔하게 세정

《매우 부드러운 세정》- 매우 민감한 부분을 위한 더욱 부드러운 세정

《미백》- 때때로 혹은 일상적인 사용을 위한 세정

《혀 세정》- 때때로 혹은 일상적인 사용을 위한 혀 세정

《잇몸 관리》- 잇몸을 부드럽게 마사지

알아두기: 구매하신 모델에 따라 모드 순서가 다르거나 제공되지 않을 수 있습니다.

《혀 세정》 모드를 사용할 경우 《젠틀 케어》 칫솔모 (g) 사용을

권장합니다. 치약을 사용하거나 치약 없이 혀를 세정할 수 있습니다. 부드럽게 움직이며 혀 전체를 세정합니다. 권장 세정 시간은 30초이며, 30초 뒤에는 모터가 멈춥니다.

모드 설정

처음 사용하는 경우 칫솔은 구입한 모델의 패키지에 표시된 첫 번째 모드로 시작합니다. 모드 버튼 (8) 을 연속으로 눌러 다른 모드로 변경할 수 있습니다. 칫솔질 중에도 모드를 변경할 수 있습니다. 전원을 켜면 마지막으로 선택한 모드로 시작합니다.

칫솔모

오랄-비는 치아 별 정밀 세정을 위해 오랄-비 iO 핸들과 호환 가능한 다양한 iO 칫솔모 (f/g/h)를 제공합니다. 치과의사에게 영감을 받은 독특한 칫솔모는 여러분의 입을 깨끗하고 상쾌하게 해줍니다.

칫솔모 교체 시기

일부 iO 오랄-비 칫솔모는 인디케이터 칫솔모로 교체 시기를 알려줍니다. 하루에 2분씩 2회의 지속적인 양치를 할 경우, 인디케이터 색상이 약 3개월 후에 반 정도 사라지게 되어 칫솔모 교체 시기를 알려줍니다. 인디케이터 색상이 사라지기 전에 칫솔모가 벌어지면, 치아와 잇몸에 과한 압력이 가해질 수 있습니다. 3개월마다 칫솔모를 교체할 것을 권장합니다.

칫솔모 교체 시기 알림


칫솔에 장착되어 있는 《칫솔모 교체 시기 알림》 기능은 하루에 두 번 사용할 경우 약 3개월 후에 칫솔모를 교체해야 함을 알려줍니다. 노란색* 표시등이 진동 신호와 함께 모드 버튼 (10) 이 반짝입니다. 《칫솔모 교체 시기 알림》을 재설정하려면 모드 버튼을 2초 동안 누르십시오. 진동과 불빛으로 재설정되었음을 확인할 수 있습니다. 아무런 조치도 취해지지 않으면 며칠 후 자동으로 재설정됩니다.

*주황색으로 보일 수 있음

세척 권장사항

칫솔질 후 전동칫솔 전원을 켜 채로 흐르는 물에 칫솔모를 깨끗이 행구십시오. 칫솔모를 분리하여 핸들과 칫솔모를 따로 세척하십시오. 핸들 상단 내부와 칫솔모 헤드에도 물이 흐르도록 하십시오. 재조립하기 전에 물기가 마르도록 건조해 주십시오.

세척 전에 충전기의 플러그를 뽑으십시오. 정기적으로 충전기를 젖은 헝겊으로 닦아 주십시오. 《액세서리》 단락에서 각 액세서리에 대한 개별 세척 지침을 확인하십시오.

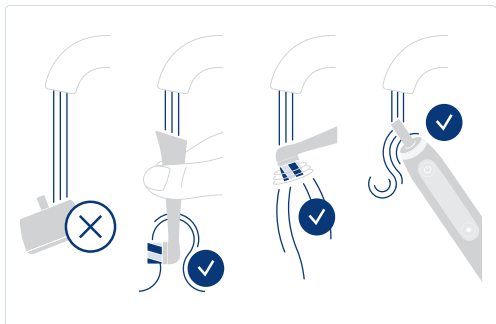

액세서리

(모델에 따라 다름)

여행용 케이스 (d)

핸들과 칫솔모는 깨끗하고 건조된 상태로 여행용 케이스 (d) 에 보관하십시오.

케이스의 외/내부는 젖은 헝겊으로만 닦아주십시오.

알아두기: 여행용 케이스 외부에 묻은 자국은 바로 닦아주십시오. 여행용 케이스는 깨끗하고 건조한 장소에 보관하십시오.

칫솔모 거치대 (e) / 뚜껑이 있는 칫솔모 거치대 (c)

세척한 칫솔모를 칫솔모 거치대 핀에 보관할 수 있습니다. 거치대에 놓거나 뚜껑을 닫기 전에 칫솔모를 건조하십시오. 칫솔모 거치대와 뚜껑은 식기세척기로 세척할 수 있습니다.

지퍼 파우치 / 자석 파우치

세척한 건조된 칫솔과 칫솔모를 지퍼 파우치/자석 파우치에 넣으십시오. 파우치 내부와 외부는 흐르는 물로 세척할 수 있습니다.

세척한 건조된 칫솔은 칫솔모 거치대 (c) 와 함께 자석 파우치에 보관하십시오. 칫솔모 헤드를 거치대에 놓거나 뚜껑을 닫기 전에 칫솔모를 건조하십시오. 케이스 내부와 외부는 흐르는 물로 세척할 수

있습니다. 파우치는 깨끗하고 건조한 장소에 보관하십시오.

알아두기: 파우치 외부에 묻은 자국은 바로 닦아주십시오.

이 안내 사항은 사전 예고 없이 변경될 수 있습니다.

환경 관련 안내

이 제품은 배터리와 재활용 가능한 전자 쓰레기를 포함하고 있습니다. 환경보호를 위해 생활 쓰레기로 분류하지 마시고, 폐전지 수거함이나 재활용 전자 쓰레기 폐기장에 버려주시기 바랍니다.



품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다.
1년간의 품질보증 기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다.
부품 재고량에 따라 다른 색상이나 동등한 모델로 교체될 수 있습니다.

이 보증은 이 기기가 브라운/오랄-비나 또는 지정된 유통 업체를 통해 공급되는 모든 지역에서 적용됩니다. 보증기간 내이라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모(특히 칫솔모), 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.

오랄-비 서비스센터가 아닌 다른 곳에서 수리하였거나 브라운/오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

보증 기간 내에 서비스를 받으시려면 전체 기기와 구입 영수증을 브라운/오랄-비 공인 고객 서비스센터에 제출하거나 보내십시오.

칫솔모 교체 관련 품질보증

오랄-비 정품이 아닌 교체용 칫솔모를 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

오랄-비는 오랄-비 정품이 아닌 교체용 칫솔모나 부품 사용을 권장하지 않습니다.

- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칫솔모의 품질을 보증할 수 없습니다. 따라서 오랄-비 정품이 아닌 다른 교체용 칫솔모를 사용할 경우 최초 구매 시와 동일한 세정 성능을 보장할 수 없습니다.
- 오랄-비 정품이 아닌 다른 교체용 칫솔모는 잘 맞지 않을 수 있으며, 오랄-비는 이를 보장할 수 없습니다.
- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칫솔모를 오랄-비 전동칫솔 핸들에 장기간 사용할 경우 제품에 미칠 수 있는 영향에 대해 알 수 없습니다.

오랄-비 정품 교체용 칫솔모는 오랄-비의 로고를 가지고 있으며 오랄-비의 높은 품질 기준에 충족합니다. 오랄-비는 다른 브랜드명으로 교체용 칫솔모나 핸들 부속품을 판매하지 않습니다.

제조일자 읽는 방법:

제조된 연도와 주는 **충전기** 또는 **전동칫솔 핸들**의 바닥에 표시된 제조 코드에서 확인할 수 있습니다.

첫 자리 수는 생산된 연도를 의미합니다. 다음 두 자릿수는 생산된 주를 나타냅니다. 네 번째 숫자는 생산 요일을 의미합니다.

예시: 《XX1093...》 - 2021년 9번째 주 수요일에 생산되었음.

애프터서비스

A/S 문의: 1577-8027

가까운 서비스센터에서 A/S를 받으실 수 있습니다.

본 제품은 소비자분쟁해결 기준에 따라 교환 또는 보상받으실 수 있습니다.

오랄-비 제품: 전국 유명 백화점 및 전자상가에서 구입하실 수 있습니다.

www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고 객		판 매 점	

한국 피앤지 판매 (유)

서울시 영등포구 국제금융로 10, 37층
소비자 상담실 전화 : 080-920-6000(수신자부담)



Description

- 1** Brush head
- 2** Brush head identification symbol
- 3** Smart Pressure Sensor / Light Ring
- 4** Interface
- 5** Handle
- 6** Charger
- 7** On/off button
- 8** Mode switch button
- 9** Low charge indicator
- 10** Brush Replacement Reminder

Features & Accessories (depending on model):

- a** Smart Pressure Sensor
- b** 2-minutes brushing reward illumination
- c** Brush head holder with cap
- d** Travel case
- e** Brush head holder stand
- f** Brush head «Ultimate Clean»
- g** Brush head «Gentle Care»
- h** Brush head «Radiant White»

Note: Content may vary based on model purchased.

English

Welcome to Oral-B!

Before operating this toothbrush, please read these instructions and save this manual for future reference.

IMPORTANT

- Periodically check the entire product/cord/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/accessory is damaged, take it to an Oral-B Service Centre. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Never insert any object into any opening of the appliance.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and maintenance shall not be performed by children.
- Children shall not play with the appliance.
- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- For tooth brushing only. Do not chew or bite on brush. Do not use as a toy or

without adult supervision.

- Only use the charger provided with your appliance.

WARNING

- Do not place the charger in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- Avoid sharp bending, jamming or squeezing of the cord.
- This appliance contains batteries that are non-replaceable. Do not open and disassemble device. For battery recycling please dispose whole device according to local environmental regulations. Opening the handle will destroy the appliance and invalidate the warranty.
- When unplugging, always pull the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.
- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution. For hygienic reasons we recommend the use of individual brush handles and brush heads for each family member.
- Small parts may come off, keep out of reach of children.

To avoid brush head breakage which may generate a small parts choking hazard or damage teeth:

- Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly. Never use without a brush head.
- If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Replace brush head every 3 months or sooner if brush head becomes worn.
- Clean brush head properly after each use (see «Cleaning recommendations» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.

Important Information

- This toothbrush and pouch (accessory) contains NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your Oral-B iO toothbrush.

Specifications

For voltage specifications refer to the bottom of the charging unit.
Noise level: 64 dB (A)

Using your toothbrush

Charging and Operating

- To charge the battery place the toothbrush on the plugged-in charger (6).
- During charging the on/off button is blinking white. Once it is fully charged the indicator light turns off. A full charge typically takes 16 hours.
- If the battery is running low the low charge indicator (9) blinks in red. Once the battery is empty, the motor stops. To charge the battery please put the brush on the charger.
- The toothbrush can be stored on the plugged-in charger to maintain it at full charge; a battery overcharge is prevented by the device. However, for environmental purposes we recommend to keep charger in the power socket during charging only.
- The toothbrush switches off when exceeding the outside operating limits and/or standard battery current. To enable operation the toothbrush needs to be put on the charger.

Caution: This toothbrush contains a Li-Ion battery. Do not expose toothbrush to temperatures higher than 50°C / 122°F.

Note: Store the toothbrush at room temperature for optimal battery maintenance.

Start Brushing

Place the brush head (1) on the handle (5). A small gap should remain between handle and brush head.

Wet brush head and apply toothpaste. To avoid splashing, put the brush head into your mouth before switching the toothbrush on by pressing the on/off button (7).

Guide the brush head from tooth to tooth. Brush the outsides, the insides and the chewing surfaces. Brush all four quadrants of your mouth equally. You may also consult your dentist or dental hygienist about the right technique for you.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» or «Super Sensitive» modes (optional in combination with an Oral-B «Gentle Care» brush head (g)). Availability of modes may vary depending on model purchased.

Timer

The timer signals with a short stuttering sound in 30-seconds intervals to move to the next quadrant of your mouth. A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time.

The timer memorizes the elapsed brushing time, even when the toothbrush is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds or placing the toothbrush on the plugged-in charger.

Brushing reward illumination

The completion of a 2-minutes brushing event will be rewarded with a colorful light ring illumination. (b)

Smart Pressure Sensor/ Light Ring (a)

Your toothbrush is equipped with a Smart Pressure Sensor (3) that has various functionalities indicated via different colours of light (a):

White = Low pressure indicator / default setting.

Green = optimal pressure indicator

Red = high pressure indicator

Brushing with the recommended pressure is indicated via a green light. If too much pressure is applied, a red light reminds you to reduce pressure. If the Smart Pressure Sensor illuminates in white, we recommend applying more pressure.

When high pressure is applied the brush head movement will be reduced (in «Daily Clean», «Intense» and «Sensitive» modes). Periodically check the operation of the Smart Pressure Sensor by pressing moderately on the brush head during use.

Brushing modes (depending on model)

Your toothbrush offers different brushing modes:

«**Daily Clean**» – Standard mode for daily cleaning

«**Intense**» – For an extraordinary clean feeling (operated with a higher speed)

«**Sensitive**» – Gentle, yet thorough cleaning for sensitive areas

«**Super Sensitive**» – Super gentle cleaning for extra sensitive areas

«**Whiten**» – Polishing for occasional or everyday use

«**Tongue Clean**» – Tongue cleaning for occasional or everyday use

«**Gum Care**» – Gentle massage of gums

Note: The sequence and availability of brushing modes may vary depending on model purchased.

When operating the «Tongue Clean» mode, we recommend using a «Gentle Care» brush head (g). You can brush your tongue either with or without toothpaste. Brush the whole area of your tongue systematically in gentle movements. The recommended brushing time is 30 seconds; the motor stops after 30 seconds.

Mode setting:

For first use the toothbrush starts with the first mode illustrated on the package of your purchased model. To switch to other modes, successively press the mode button (8). You may change the modes during the brushing event. The toothbrush automatically starts in the mode selected last.

Brush heads

Oral-B offers you a variety of different Oral-B iO brush heads (f/g/h) that only fit your Oral-B iO toothbrush handle and these unique brush heads are dentist-inspired to leave your mouth feeling clean and refreshed.

When to exchange brush head

Some iO Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the bristle colour will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the colour recedes, you may exert too much pressure on teeth and gums. In general, we recommend replacing the brush head every 3 months.

Brush Replacement Reminder

The toothbrush is equipped with a «Brush Replacement Reminder» indicating the need to exchange the brush head approximately after 3 months when used twice per day. A yellow* light - accompanied by a vibration signal - will illuminate in the mode button (10).


To reset the «Brush Replacement Reminder» hold the mode button pressed for 2 seconds. A vibration and illumination signal confirms the reset. If no action is taken, an automatic reset will happen after several days.

*may appear orange

Cleaning recommendations

After brushing, rinse your brush head under running water with the handle switched on. Remove the brush head and clean the handle and brush head separately. Make sure water runs inside the top of the handle as well as inside the brush head. Wipe all parts dry and let them air-dry before reassembling your toothbrush again.

Unplug the charger before cleaning. Clean the charger regularly with a damp cloth. Please check individual cleaning instructions for each accessory in its «Accessories» paragraph.

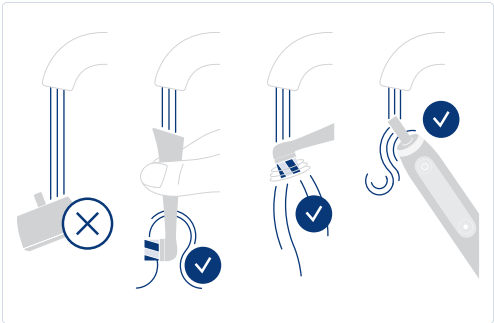

Accessories (depending on model)

Travel Case (d)

Store the clean and dry toothbrush/brush heads in the travel case (d).

The outer and inner case should be cleaned with a damp cloth only.

Note: Clean stains on travel case surface immediately. Store travel case in a clean and dry place.

Brush head holder stand (e) / Brush head holder with cap (c)

You may store your cleaned brush heads on the pins of the brush head holders. Make sure brush heads are dried before placing them in the holder and/or closing the cap. Brush head holders and cap are dishwasher-safe.

Zipper Case / Magnetic Pouch

Store the clean and dry toothbrush/brush heads in the Zipper Case / Magnetic pouch.

The outer and inner parts can be cleaned under running water.

Store the clean and dry toothbrush along with the brush head holder (c) in the magnetic pouch. Make sure brush heads are dried before placing them into the holder and/or closing the cap. The outer and inner surfaces can be cleaned under running water. Store pouches in a clean and dry place.

Note: Clean stains on pouch surfaces immediately.

Subject to change without notice.

Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Li-Ion

Guarantee

We grant 1 year guarantee on the product commencing on the date of purchase.

Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. Depending on availability replacement of a unit might result in a different colour or an equivalent model.

This guarantee extends to every country where this appliance is supplied by Braun/ Oral-B or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun/Oral-B parts are not used.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Oral-B/ Braun Customer Service Centre.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable toothbrush damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable toothbrush at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

Manufacturing date code:

To determine the date of manufacture, refer to the production code located on the type plate of the **handle** and/or **charger**.

Identify the production code starting with two letters:

First digit of the production code refers to the year of manufacture. Second and third digits refer to the calendar week of manufacture. Fourth digit refers to the calendar day of manufacture.

Example: «XX1093...» – means the product was manufactured on Wednesday in week 09 of 2021.

한국어	5
English	14

Internet:
www.oralb.com
www.braun.com
www.service.braun.com
www.oral-b.co.kr

Braun GmbH
Frankfurter Str. 145
61476 Kronberg/Germany

Charger Type 3757
Handle Type 3769



UK

0 800 731 1792

IE

1 800 509 448

KR

1577-8027

90177393

