





한국어 6

English 17



1577-8027

Internet:

www.oralb.com

www.service.oralb.com

www.oral-b.co.kr


Charger Type 3786

Handle Type 3758 | 3796

Travel Case Type 3759

Smart Plug Type 492-XXXX



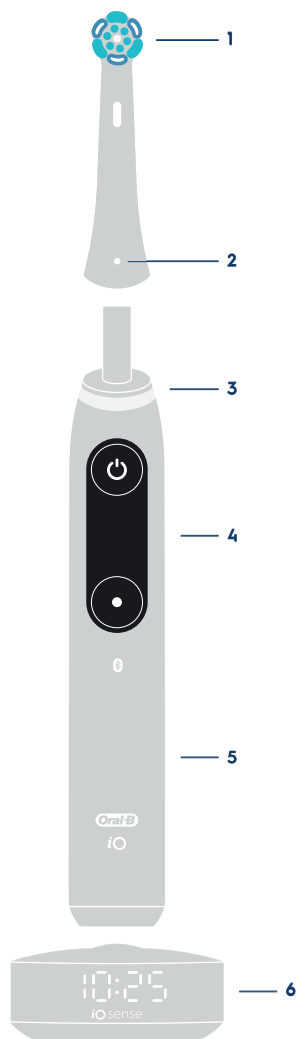



9



10



11



12



13



14



15



16



17

18



19



20



21



22

23



24



25




26




27



=

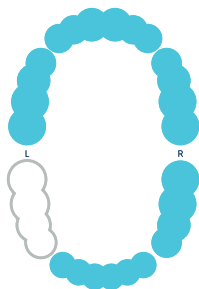


a

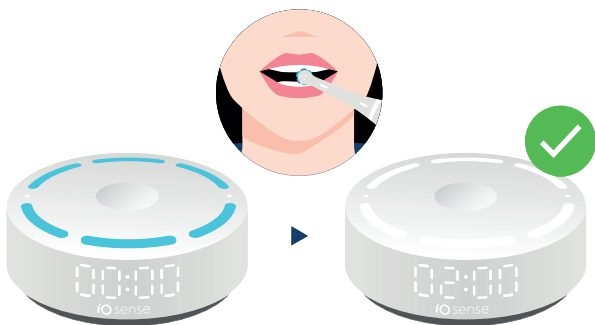

b




c

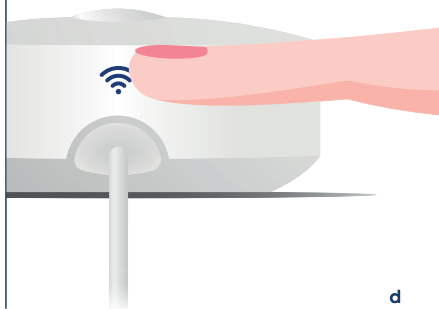


d




e




f




g

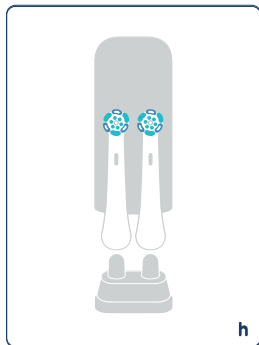


h

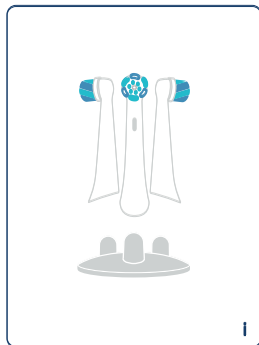

i

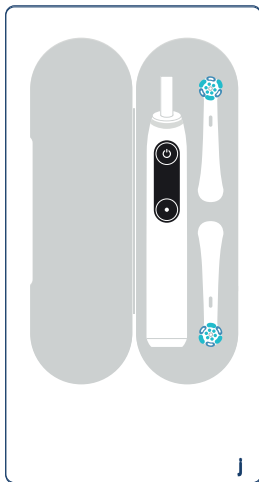

j

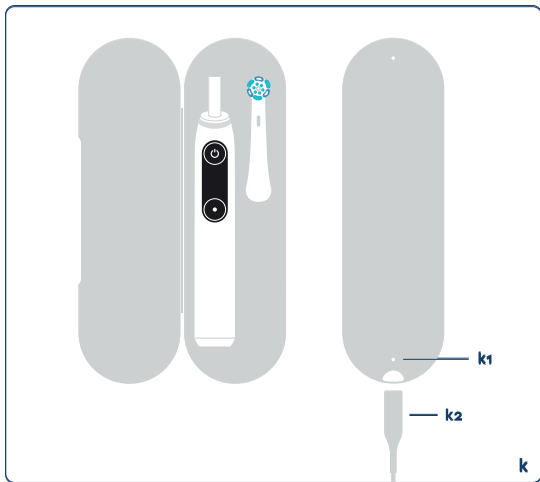

k

각 부의 명칭

- 1 칫솔모
- 2 칫솔모 식별 기호
- 3 스마트 압력 센서 / 라이트 링
- 4 대화형 디스플레이
- 5 전동칫솔 핸들
- 6 iO sense 충전기
- 7 전원 버튼
- 8 모드 버튼
- 9 대화형 디스플레이 기능
- 10 <일상 세정> 모드
- 11 <부드러운 세정> 모드
- 12 <잇몸 관리> 모드
- 13 <미백> 모드
- 14 <강력 세정> 모드
- 15 <매우 부드러운 세정> 모드
- 16 <혀 세정> 모드
- 17 설정 메뉴
- 18 설정 메뉴 기능
- 19 블루투스 설정 관리
- 20 라이트 링 색상 선택/변경
- 21 언어 선택/변경
- 22 공장 초기화
- 23 피드백 기능
- 24 타이머
- 25 배터리 상태
- 26 칫솔모 교체 시기 알림
- 27 칫솔질 피드백

액세서리(모델에 따라 다름)와 기능:

- a** 칫솔질 인식 - LED 표시등
- b** 칫솔질 인식 - 칫솔질 경과 알림
- c** 오랄-비 앱을 설치하여 모든 기능을 활성화
- d** iO sense 버튼
- e** 스마트 압력 센서
- f** <얼티밋 클린> 칫솔모
- g** <젠틀 케어> 칫솔모
- h** 뚜껑이 있는 칫솔모 거치대
- i** 칫솔모 거치대
- j** 여행용 케이스
- k** 여행용 충전 케이스
- k1** 충전표시등
- k2** 충전기

알아두기: 구성품은 구입한 모델에 따라 다를 수 있습니다.

한국어

오랄-비 고객이 되신 것을 환영합니다!

오랄-비 iO 전동칫솔과 iO sense 충전기를 처음 사용하시기 전에 설명서를 잘 읽어보시고, 읽으신 후에도 추후 참조를 위해 잘 보관해 주시기 바랍니다.

중요사항

- 전반적인 제품/전기코드/액세서리의 손상 여부를 정기적으로 확인하십시오. 손상되거나 작동하지 않는 장치는 더 이상 사용하지 마십시오. 제품/액세서리가 손상되었을 경우, 제품을 오랄-비 서비스센터에 가져가십시오. 제품의 어떤 부분이 변경하거나 조작하지 마십시오. 이는 화재, 감전, 혹은 부상을 초래할 수 있습니다.
- 장치의 개구부에 어떤 물체도 삽입하지 마십시오.
- 만 3세 이하의 어린이가 사용하도록 제작되지 않았습니다. 어린이나 육체적, 정신적, 지각 상의 장애를 겪고 있거나 사용 경험이나 지식이 부족한 성인은 보호자의 관리 감독하에 있거나 혹은 안전한 기기 사용을 위한 지도를 받은 경우, 그리고 관련 위험을 이해한 경우에만 전동칫솔을 사용할 수 있습니다.
- 성인의 감독 없이 어린이가 세척하거나 관리하지 않도록 합니다.
- 어린이가 가지고 놀지 않도록 지도가 필요합니다.
- 칫솔질에만 사용하십시오. 칫솔모를 씹거나 물지 마십시오. 장난감으로 사용하거나 성인의 감독 없이 사용하지 마십시오.
- 제품은 이 설명에 명시된 목적에만 사용하십시오. 제조업체에서 권장하지

않는 부속물은 절대 사용하지 마십시오.

- 본 제품과 함께 제공된 충전기만 사용하십시오.
- 기기와 함께 제공되는 충전기 및 통합 안전 초저압 전원공급 장치가 있는 특수 코드 세트만을 사용하십시오. 감전의 위험이 있으므로 부품을 교체하거나 변경하지 마십시오. 492-XXXX가 표시된 충전 거치대/여행용 충전 케이스를 사용할 때는 같은 기호가 표시된 브라운/오랄-비 특수 코드 세트만 사용하십시오.

주의사항

- 충전기와 전원 공급 장치, 여행용 충전 케이스를 물 또는 액체 안이나 욕조 또는 세면대에 쉽게 빠질 수 있는 장소에 놓지 마십시오. 물에 빠뜨린 충전기를 꺼내기 위해 손을 넣지 마십시오. 물에 빠진 즉시 코드를 뽑아 주십시오.
- 코드를 심하게 구부리거나 꼬거나 놀리지 않도록 하십시오.
- 이 제품은 교체 불가능한 배터리를 포함하고 있습니다. 제품을 열거나 분해하지 마십시오. 배터리 재활용을 위해서는 기기 전체를 각 나라의 환경보호 규정에 알맞게 처리하십시오. 핸들을 열면 기기가 파손되고 품질보증 대상에서도 제외됩니다.
- 플러그를 뽑을 때는 항상 코드 선 대신 전원 플러그를 잡고 뽑으십시오. 젖은 손으로 전원 플러그를 만지지 마십시오. 감전의 원인이 될 수 있습니다.
- 구강 관련 질환으로 치료를 받고 있는 경우, 제품 사용 전 전문가와 상담하시기 바랍니다.
- 본 제품은 개인 위생용 기구입니다. 다수의 환자를 대상으로 한 치과 시술이나 기관에서 공동 사용은 적합하지 않습니다. 위생상의 이유로 각 가족 구성원이 개별 칫솔 손잡이와 칫솔모를 사용할 것을 권장합니다.
- 작은 부품이 떨어져 나올 수 있으니 어린이의 손이 닿지 않는 곳에 보관하십시오.

칫솔모 헤드 파손으로 생긴 작은 부품은 직식이나 치아 손상의 위험이 있습니다. 이를 방지하기 위해서는 다음을 실행하십시오.

- 사용 전에 칫솔모 헤드가 잘 맞는지 확인하십시오. 칫솔모가 더 이상 적합하지 않으면 사용을 중지하십시오. 칫솔모 헤드 없이 절대 사용하지 마십시오.
- 칫솔 손잡이를 떨어뜨릴 경우, 눈에 보이는 손상이 없더라도 다음 사용 전에 칫솔모를 교체해야 합니다.

- 3개월마다 혹은 칫솔모(헤드)가 손상 마모된 경우 즉시 교체하십시오.
- 사용할 때마다 칫솔모를 올바르게 세척하십시오. <세척 안내사항> 단락 참조. 올바른 세척은 칫솔의 안전한 사용과 기능적 수명을 보장합니다.

중요 정보

- 이 칫솔과 충전기, 파우치(액세서리)는 NdFeB 자석을 포함하고 있으며 자기장을 생성합니다. 의료 기기를 사용하시거나 이식된 의료 기기가 있는 경우, 오히려 iO 전동칫솔을 안전하게 사용하기 위해 의료 기기 제조업체 또는 의사와 상의하십시오.
- 전파의 혼선과 호환의 충돌을 피하기 위해서, 비행기 또는 병원의 특별 지역과 같은 제한된 환경에서 칫솔을 사용하기 전에 전동칫솔 핸들 (5) 의 블루투스 및 iO sense의 블루투스/와이파이를 해제해 주십시오.
- 블루투스를 비활성화하려면 대화형 디스플레이 (4) 에서 <설정> -> 블루투스 -> 비활성화를 누르십시오. 동일한 방법으로 블루투스를 활성화시킬 수 있습니다. iO sense 버튼 (d) 을 두 번 눌러 저전력 모드를 켜면 블루투스/와이파이가 비활성화됩니다. 버튼을 한 번 눌러 블루투스/와이파이를 다시 활성화합니다.
- 맥박 조정기를 사용하시는 분들은 칫솔의 전원을 켜 상태에서 항상 전동칫솔을 15센티미터 (6인치) 이상 멀리 위치시켜 주십시오. 만약 전파의 혼선이 발생한 것으로 짐작되는 경우, 전동칫솔의 블루투스 기능을 꺼주시기 바랍니다.

세부사항

전압 사양은 충전장치 하단을 참조하세요.
소음 레벨 : 64 dB (A)

첫 사용 시

전원 버튼 (7) 을 눌러 전동칫솔을 켜고 대화형 디스플레이 (4) 의 지침에 따라 처음 설치를 시작하십시오.
더 이상 디스플레이에 지시사항이 없는 경우에는 모드 버튼 (8) 으로 전환하고 전원 버튼 (7) 으로 선택할 수 있습니다.
언제든지 <설정> 메뉴 (17) 를 통해 설정을 변경할 수 있습니다.
콘센트에 연결된 iO sense 충전기와 가까운 곳에서 칫솔을 켜서 iO sense 충전기와 연결할 수 있습니다.

충전 및 작동

- 콘센트에 연결된 iO sense 충전기 (6) 에 핸들을 올려놓아 충전하십시오.
- 대화형 디스플레이 (4) 에 충전상태가 표시됩니다. 충전 중에는 라이트 링 (3) 이 깜박입니다. 충전이 완료되면 디스플레이가 꺼집니다. 완전히 충전될 때까지는 보통 3시간이 소요됩니다.

- 배터리 충전 정도가 낮을 경우, 라이트 링 (3) 이 빨간색으로 빠르게 깜박입니다. 배터리가 완전히 방전되면 모터가 멈춥니다. 최소 5분 동안 충전하면 한 번 사용할 수 있습니다.
- 알아두기: 배터리가 완전히 방전되면 (디스플레이가 꺼짐) 최소 30분 동안 충전해야 합니다.
- 완전 충전상태를 유지하기 위해, 전원이 연결된 iO sense 충전기에 항상 올려놓을 수 있습니다. 과 충전의 우려는 없습니다.

알아두기: 최적의 배터리 유지를 위해 핸들은 실온에 보관하십시오.

주의: 핸들을 50°C 이상의 온도에 노출시키지 마십시오.

iO 전동칫솔 사용하기

칫솔질 시작하기

칫솔모를 전동칫솔 핸들에 꽂습니다. 핸들과 칫솔모 사이에는 작은 틈이 있어야 합니다. 핸들을 집어 들거나 플러그를 꽂은 iO sense 충전기에서 핸들을 들어 올리거나, 전원 버튼 (7) 을 눌러 핸들을 깨웁니다 (디스플레이가 켜짐). 칫솔모를 물에 적시고 치약을 묻힙니다. 치약이 튀는 것을 방지하기 위하여 입안에 칫솔모를 넣으신 후 전원 버튼을 누릅니다.
알아두기: 디스플레이는 시간이 지나면 꺼집니다. 디스플레이를 다시 활성화하려면 전원버튼을 누르십시오.

칫솔모를 치아에서 치아로 천천히 움직이십시오. 바깥쪽, 안쪽, 저자 면까지 닦으십시오. 입안의 네 구역을 모두 고르게 닦으십시오. 치과의사나 치위생사에게 올바른 칫솔질에 대한 조언을 구해서도 좋습니다. 칫솔질 후에 디스플레이는 칫솔질 시간에 따라 피드백을 제공합니다.

처음 전동칫솔을 사용하는 며칠 동안은 잇몸에서 약간의 피가 날 수도 있습니다. 이러한 현상은 보통 며칠이 지나면 멈춥니다. 그러나 2주가 지나도 출혈이 계속될 경우에는 치과 전문이나 치위생사와 상담하십시오. 치아와 잇몸이 민감하신 경우에는 <부드러운 세정>모드 혹은 <매우 부드러운 세정>모드 사용을 권장합니다. (오랄비 <젤을 케어> 칫솔모 (g) 를 함께 사용하실 수 있습니다.) 칫솔질 모드는 구입한 모델에 따라 다를 수 있습니다.

칫솔 타이머 (서터 타이머)

타이머 기능을 탑재한 iO 칫솔은 치과의사가 권장하는 2분 칫솔질을 할 수 있도록 도와줍니다. 타이머는 30초마다 짧은 진동이 울리면서 구강 내 네 구역 다음 구역을 세정할 차례임을 알려줍니다. 치과의사가 권장하는 2분 양치가 완료되면 긴 진동으로 알려줍니다.
칫솔질 도중 전원이 꺼지더라도 양치 시간이 다음 30초 동안 저장됩니다. 전원이 꺼지고 30초가 지나거나 전원이 연결된 iO sense 충전기에 올려두면 타이머는 초기화됩니다.

알아두기: 오랄-비 앱 또는 iO sense 충전기를 사용하는 동안에는 칫솔에서 셔터 타이머가 비활성화됩니다. 오랄-비 앱을 통해 타이머를 설정할 수 있습니다.

라이트 링 (3)

iO 칫솔은 여러 가지 색상으로 다양한 기능을 알려주는 라이트 링 (3) 이 탑재되어 있습니다.

스마트 압력 센서 (e)

흰색(기본) = 작동 중(오랄-비 앱을 통해 변경 가능)/압력이 낮음을 알림

초록색 = 알맞은 압력을 알림

빨간색 = 압력이 높음

만약 스마트 압력 센서가 흰색 (혹은 설정 색상) 불이 켜지면 압력을 늘릴 것을 권장합니다. 칫솔질에 알맞은 압력을 초록색으로 알려줍니다. 과다한 압력이 가해지면, 빨간불이 켜짐으로써 압력을 줄이도록 알려줍니다.

과한 힘이 가해지면 칫솔모의 움직임이 줄어듭니다 («일상 세정», «강한 세정», «부드러운 세정» 모드에서 작동함). 사용 중 칫솔모 헤드를 적당히 눌러 스마트 압력 센서의 작동 상태를 주기적으로 점검하십시오.

알아두기: 오랄-비 앱 사용 시에는 스마트 압력 센서가 작동하지 않을 수 있습니다.

알아두기: «허 세정» 모드에서는 스마트 압력 센서가 작동하지 않습니다.

기타 기능

빨간색 = 배터리 부족 표시등

파란색 = 블루투스 페어링 표시등

주황색 = 오류 표시등 (디스플레이 메시지 참조)

칫솔질 모드 (모델에 따라 다름)

이 칫솔은 각기 다른 세정 모드를 제공하며 디스플레이에 표시됩니다:

- «일상 세정» - 일상적인 구강 세정을 위한 기본 모드
- «부드러운 세정» - 민감한 부분을 부드럽고 깔끔하게 세정
- «잇몸 관리» - 잇몸을 부드럽게 마사지
- «미백» - 때때로 혹은 일상적인 사용을 위한 세정
- «강력 세정» - 더욱 개운한 세정 (더 빠르게 작동함)
- «매우 부드러운 세정» - 매우 민감한 부분을 위한 더욱 부드러운 세정
- «허 세정» - 때때로 혹은 일상적인 사용을 위한 허 세정

알아두기: 구매하신 모델에 따라 모드 순서가 다르거나 제공되지 않을 수 있습니다.

«허 세정» 모드를 사용할 경우 «젠틀 케어» 칫솔모 (g) 사용을 권장합니다. 치약을 사용하거나 치약 없이 혀를 세정할 수 있습니다. 칫솔모를 부드럽게 움직이며 혀 전체 부위를 세정합니다.

권장 세정 시간은 30초이며, 30초 뒤에는 모터가 멈춥니다.

모드 설정:

iO 전동칫솔을 활성화시켜 선택된 세정모드를 확인합니다. 모드 버튼(8)을 연속으로 눌러 다른 모드로 변경할 수 있습니다. 전원을 켜면 마지막으로 선택한 모드로 시작합니다.

알아두기: 오랄-비 앱을 통해 모드를 맞춤 설정할 수 있습니다.

대화형 디스플레이

칫솔을 충전기에서 분리되도록 집어들거나 전원 버튼(7)을 눌러 대화형 디스플레이(4)를 활성화 시켜주십시오.

- (10)-(16) <모드 선택> - 모드 버튼을 눌러 모드를 전환하세요.
- (17) <설정> 메뉴 - «설정» 옵션이 나올 때까지 전환하고 전원 버튼을 눌러 설정에 들어갑니다:
- > (19) 블루투스 설정 관리 (활성화, 비활성화)
- > (20) 라이트 링 색상 선택/변경
- > (21) 언어 선택/변경
- > (22) 공장 초기화

(24) <타이머> - 칫솔질 시간 표시.

(25) <배터리 상태> - 사용 후, 충전 시, 배터리 부족 시 배터리 상태 표시

(26) <교체 알림> - 칫솔모 교체 시기 표시

(27) <칫솔질 피드백> - 칫솔질에 대한 피드백을 오는 얼굴로 표시

칫솔을 들거나 iO sense 충전기에서 꺼내거나 전원 버튼을 누르면 준비 상태를 표시합니다.

«오류 메시지» - «작동 한계를 벗어남»: 표준 온도 이상에서 작동 또는 충전 중.

칫솔모

오랄-비는 치아 별 정밀 세정을 위해 오랄-비 iO 핸들과 호환 가능한 다양한 iO 칫솔모 (f/g) 를 제공합니다.

오랄-비 인디케이터 칫솔모는 칫솔 교체 시기를 알려줍니다. 하루에 2분씩 2회의 지속적인 양치를 할 경우, 인디케이터 색상이 약 3개월 후에 반 정도 사라지게 되어 칫솔모 교체 시기를 알려줍니다. 인디케이터 색상이 사라지기 전에 칫솔모가 벌어지면, 치아와 잇몸에 과한 압력이 가해질 수 있습니다. 3개월마다 칫솔모를 교체할 것을 권장합니다.

칫솔모 교체 시기 알림

칫솔에 장착되어 있는 «칫솔모 교체 시기 알림» 기능은 하루에 두 번 사용할 경우 약 3개월 후에 칫솔모를 교체해야 함을 알려줍니다.

«치솔모 교체 시기 알림»을 재설정하려면 디스플레이의 지침을 따르십시오.

알아두기: 오랄비 앱을 통해 치솔모 교체를 설정할 수 있습니다.

전동치솔을 스마트폰/오랄비 앱에 연결하기

오랄비 앱은 다양한 기능을 제공합니다:

- 치솔 맞춤 설정 (예: 원하는 라이트 링 색상 선택, 타이머 설정, 모드 순서 또는 치솔모 교체 알림 설정)
- 치솔질 습관 확인 (예: 치솔질 시간과 가해진 압력)
- 모든 부위를 적절한 시간 동안 치솔질할 수 있도록 실시간 코칭

오랄비 앱은 iOS나 안드로이드 운영체제로 작동되는 모바일 기기에서 사용하실 수 있습니다. 호환 가능한 스마트폰 사양과 앱 사용 가능 나라에 대해서는 app.oralb.com에서 확인하시기 바랍니다. 애플 앱스토어나 구글 플레이에서 앱을 다운로드하거나 이 안내서 (c) 뒷면에 있는 QR코드를 통해 다운로드하실 수 있습니다.

- 오랄비 앱을 실행시킵니다. 앱이 블루투스 연결 과정을 알려줍니다. 앱 설정에서도 새로운 기기를 연결할 수 있습니다.
- 알아두기: 오랄비 앱 기능은 스마트폰의 블루투스 기능이 해제되어 있으면 사용에 제약이 따릅니다 (활성화 방법은 스마트폰의 사용 설명서를 참고 바랍니다).
- 치솔의 디스플레이 -> 설정 -> 블루투스
활성화/비활성화에서 블루투스 설정을 변경할 수 있습니다.
- 핸드들과 함께 사용할 때는 스마트폰을 가까이 유지하십시오 (5m 이내). 스마트폰을 건조하고 안전한 곳에 놓으십시오.

알아두기: 오랄비 전동치솔과 스마트폰을 연결하기 위해서는 사용 중인 스마트폰이 블루투스 4.2 (또는 이상)을 지원 가능해야 합니다.

주요: 스마트폰과 충전기가 욕실환경에서도 사용 가능하도록 제작되었는지를 스마트폰 사용자 설명서를 통해 반드시 확인하시고 따르시길 바랍니다.

iO sense 충전기 사용하기

맞춤 실시간 코칭 및 스마트 압력 센서 기능

iO sense 충전기에는 치솔질한 부분, 시간, 압력에 대한 실시간 피드백을 제공하는 기능이 있습니다. iO sense 상단의 LED 표시등은 상단과 하단 치아를 나타냅니다 (a). 입안의 어느 부위에서나 치솔질을 시작할 수 있습니다. 치솔질하는 동안 조명이 파란색에서 흰색으로 희미해져 진행 사항을 알려줍니다. 한 부위가 깨끗해지면 (a) LED가

흰색으로 바뀝니다. 너무 많은 압력이 가해지면 LED가 빨간색으로 점등되어 압력을 줄이도록 알려줍니다 (e).

주요: iO sense 충전기의 양치 인식 기능을 활성화시키고 치솔질을 할 때는 안정적인 연결 및 치솔질 인식을 위해 iO sense 충전기와 5m 이내에 있어야 합니다.

iO sense 충전기의 전체 기능을 활성화하려면 오랄비 앱이 필요합니다. 연결 설정은 오랄비 앱의 지침을 따르십시오.

시계 설정

오랄비 앱을 켜고 iO sense 충전기를 앱의 지침에 따라 와이파이에 연결합니다.

참고: 와이파이 연결이 없으면 시계가 작동하지 않습니다.

블루투스 & 와이파이 기능

iO sense 충전기는 블루투스 및 와이파이를 지원합니다.

- 블루투스로 iO sense 충전기와 전동치솔, 오랄비 앱을 연결합니다.
- 와이파이를 iO sense 충전기를 인터넷에 연결합니다.

iO sense 버튼 기능

정전식 터치 버튼 (d) 는 iO sense 충전기 뒷면에 있습니다.


다음의 두 가지 기능이 있습니다:

- **저전력 모드:** 장치가 저전력 모드로 전환됩니다. 충전 이외의 모든 기능은 비활성화됩니다. 버튼 (d) 을 두 번 눌러 저전력 모드를 활성화하고, 한 번 눌러 비활성화합니다. 저전력 모드의 활성화는 iO sense 충전기 상단에 있는 LED 로 표시됩니다. 네트워크 대기 모드의 전력 소비량: 12 W
- **공장 초기화:** iO sense 충전기 상단에 주황색 표시등이 나타날 때까지 버튼 (d) 을 길게 누른 다음 놓습니다. 주황색 조명이 켜진 상태에서 버튼을 다시 한번 누르면 공장 초기화가 시작됩니다. LED가 주황색으로 시계 방향으로 회전하여 공장 초기화를 확인합니다. 모든 자격 증명 정보와 설정이 iO sense 충전기에서 삭제됩니다.

세척 안내사항

치솔질 후 전동치솔 전원을 켜 채로 흐르는 물에 치솔모를 깨끗이 행구십시오. 치솔모를 분리하여 핸드들과 치솔모를 따로 세척하십시오. 핸들 상단 내부와 치솔모 헤드에도 물이 흐르도록 하십시오. 재조립하기 전에 물기가 마르도록 건조해 주십시오.

세척 전에 iO sense 충전기의 플러그를 뽑으십시오. 정기적으로 충전기를 젖은 헝겊으로 닦아 주십시오. <<엑세서리>> 단락에서 각 액세서리에 대한 개별 세척 지침을 확인하십시오.

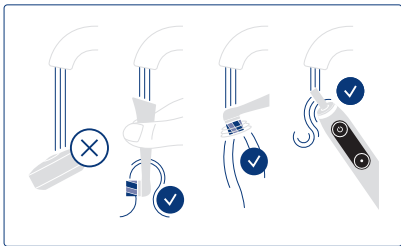

액세서리 (모델에 따라 다름)

여행용 충전 케이스 (k)

- 전동칫솔 핸들 (5) 을 충전하려면 여행용 충전 케이스 (k) 에 넣고 함께 제공된 전원 공급 장치 (k2) 를 콘센트에 연결합니다. 전원 공급 장치는 모든 글로벌 주전원 전압 범위 (100~240V)에 사용할 수 있습니다.
- 여행용 충전 케이스의 표시등 (k1) 은 칫솔이 충전 중임을 나타냅니다. 칫솔이 완전히 충전되면 불이 꺼집니다. 여행용 충전 케이스로 완전히 충전하는 데는 약 6시간이 걸립니다.
- 케이스의 외부와 내부는 젖은 천으로만 청소해야 합니다. 여행용 케이스에 보관하기 전에 칫솔모가 완전히 말랐는지 확인하십시오.

알아두기: 여행용 케이스 외부에 묻은 자국은 바로 닦아주십시오. 케이스를 깨끗하고 건조한 장소에 보관하십시오.

여행용 케이스 (j)

핸들과 칫솔모는 깨끗하고 건조된 상태로 여행용 케이스 (j) 에 보관하십시오. 케이스의 외/내부는 젖은 헝겊으로만 닦아주십시오.

알아두기: 여행용 케이스 외부에 묻은 자국은 바로 닦아주십시오. 여행용 케이스는 깨끗하고 건조한 장소에 보관하십시오.

칫솔모 거치대 (i) / 뚜껑이 있는 칫솔모 거치대 (h)

세척한 칫솔모를 칫솔모 거치대 핀에 보관할 수 있습니다. 거치대에 놓거나 뚜껑을 닫기 전에 칫솔모를 건조하십시오. 칫솔모 거치대와 뚜껑은 식기세척기로 세척할 수 있습니다.

지퍼 파우치 / 자석 파우치

세척한 칫솔 핸들과 칫솔모를 파우치에 보관할 수 있습니다. 칫솔 핸들과 칫솔모는 파우치에 보관하기 전에 건조하십시오. 파우치 내부와 외부의 흐르는 물로 세척할 수 있습니다. 파우치는 깨끗하고 건조한 장소에 보관하십시오.

알아두기: 파우치 외부에 묻은 자국은 바로 닦아주십시오.

이 안내 사항은 사전 예고 없이 변경될 수 있습니다.

환경 관련 안내

이 제품은 배터리와 재활용 가능한 전자 쓰레기를 포함하고 있습니다. 환경보호를 위해 생활 쓰레기로 분류하지 마시고, 폐전자 수거함이나 재활용 전자 쓰레기 폐기장에 버려주시기 바랍니다.



품질보증

본 제품은 구입일로부터 1년간 품질을 보증합니다.

1년간의 품질보증 기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무료보수 또는 교환해 드립니다. 부품 재고량에 따라 다른 색상이나 동등한 모델로 교체될 수 있습니다.

이 보증은 이 기기가 브라운/오랄-비 또는 지정된 유통 업체를 통해 공급되는 모든 지역에서 적용됩니다. 보증기간 내이라도 소비자의 귀책사유에 의한 파손(전압을 잘못 사용한 경우, 부적절한 전원 플러그에 연결한 경우, 사용 중 파손 등), 정상적인 마모(특히 칫솔모), 사용에 지장이 없는 경미한 결함 등은 무상수리 또는 교환이 적용되지 않습니다.

오랄-비 서비스센터가 아닌 다른 곳에서 수리하였거나 브라운/오랄-비 정품이 아닌 부품을 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

본 제품은 전파 승인을 받은 블루투스 및 와이파이가 장착되어 있습니다. 본 제품의 블루투스 전파 모듈과 와이파이의 고장이 아닌 경우, 스마트폰과 블루투스/와이파이 연결이 안 되는 것은 제품 보증에 포함되지 않습니다. 블루투스/와이파이 장치는 오랄-비가 아닌 각 제조사에서 보장합니다. 오랄-비는 해당 장치의 제조에 관여하지 않습니다. 그러므로 오랄-비는 장치와 호환되는 장치의 개수에 대해서 책임을 지지 않습니다.

오랄-비는 오랄-비 시스템 기능을 보완하기 위해 필요한 경우, 사전 예고 없이 기술적 장치 기능의 시스템 구현 변경 또는 메뉴 구조 변경을 할 수 있는 권리를 소유합니다.

보증 기간 내에 서비스를 받으시려면 전체 기기와 구입 영수증을 오랄-비 브라운 공인 고객 서비스센터에 제출하거나 보내십시오.

기타 정보

블루투스 전파 모듈/와이파이 모듈

장치에 모든 표시된 기능을 지원하더라도, 오랄-비는 블루투스/와이파이 연결과 기능 작동 시 항상 일관성 있게 작동한다고 100% 보장할 수 없습니다.

작동 수행과 연결 신뢰성은 각 블루투스/와이파이 장치, 소프트웨어 버전, 각 장치의 운영체제, 각 회사에서 구현한 장치의 보안규정과 직접적인 관련이 있습니다. 오랄-비는 블루투스/와이파이 장치가 오랄-비 칩솔과 통신할 수 있도록 블루투스/와이파이 표준에 준수합니다.

그러나 장치 제조자가 이 표준화 구현을 해내지 못했을 경우, 블루투스/와이파이 호환과 기능이 제대로 작동되지 않을 수 있으며, 사용자는 작동 상의 문제나 기능에 관련된 문제를 겪을 수 있습니다. 블루투스/와이파이 장치에 관한 소프트웨어는 호환과 작동에 중대한 영향을 미칠 수 있음을 유의 바랍니다.

칩솔모 교체 관련 품질보증

오랄-비 정품이 아닌 교체용 칩솔모를 사용하였을 경우에는 품질보증 대상에서 제외됩니다.

오랄-비는 오랄-비 정품이 아닌 교체용 칩솔모나 부품 사용을 권장하지 않습니다.

- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칩솔모의 품질을 보증할 수 없습니다. 따라서 오랄-비 정품이 아닌 다른 교체용 칩솔모를 사용할 경우 최초 구매 시와 동일한 세정 성능을 보장할 수 없습니다.
- 오랄-비 정품이 아닌 다른 교체용 칩솔모는 잘 맞지 않을 수 있으며, 오랄-비는 이를 보장할 수 없습니다.
- 오랄-비는 오랄-비 정품이 아닌 다른 교체용 칩솔모를 오랄-비 전동칩솔 핸들에 장기간 사용할 경우 제품에 미칠 수 있는 영향에 대해 알 수 없습니다.

오랄-비 정품 교체용 칩솔모는 오랄-비의 로고를 가지고 있으며 오랄-비의 높은 품질 기준에 충족합니다. 오랄-비는 다른 브랜드명으로 교체용 칩솔모나 핸들 부속품을 판매하지 않습니다.

애프터서비스

A/S 문의: 1577-8027

가까운 서비스센터에서 A/S를 받으실 수 있습니다.

본 제품은 소비자분쟁해결 기준에 따라 교환 또는 보상받을 수 있습니다.

오랄-비 제품: 전국 유명 백화점 및 전자상가, 그리고 공식 온라인 몰에서 구매하실 수 있습니다.

www.oralb.com 또는 www.oral-b.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
아래 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고 객		판 매 점	

한국 피앤지 판매 (유)

서울시 영등포구 국제금융로 10, 37층
소비자 상담실 전화 : 080-920-6000(수신자부담)



문제 해결 방법

문제점	문제 발생 가능 원인	해결 방법
오랄-비 앱		
핸들과 iO sense 충전기가 이 오랄-비 앱과 (제대로) 작동하지 않습니다.	1. 오랄-비 앱을 실행시키지 않았습니다. 2. 스마트폰의 블루투스 기능이 활성화되지 않았습니다. 3. 핸들의 블루투스 기능이 해제되어 있습니다. 4. 스마트폰과의 블루투스 연결이 끊어졌습니다. 5. 스마트폰이 블루투스 4.2(혹은 그 이상) / 블루투스 스마트를 지원하지 않습니다. 6. 최신 버전의 오랄-비 앱이 아닙니다. 7. 스마트폰이 오랄-비 앱과 호환이 불가능합니다. 8. iO sense 충전기가 저전력 모드로 작동합니다.	1. 오랄-비 앱을 실행하십시오. 2. 스마트폰의 블루투스 기능을 활성화시키십시오 (자세한 방법은 사용자 설명서를 참고). 3. 디스플레이 설정을 통해 핸들의 블루투스를 활성화하십시오. 4. 핸들과 iO sense 충전기를 함께 사용할 때에는 스마트폰을 가까운 곳에 두십시오. 5. 핸들을 스마트폰과 연결하기 위해서는 블루투스 4.2(혹은 그 이상)/블루투스 스마트 기능을 지원해야 합니다. 6. 최신 버전의 오랄-비 앱을 다운로드 하십시오. 7. 호환 가능한 스마트폰 사양과 오랄-비 앱 사용 가능 국가에 대해서는 app.oralb.com에서 확인하십시오. 8. 버튼 (d) 을 한 번 눌러 iO sense 충전기의 저전력 모드를 종료합니다.
전동칫솔 핸들		
칫솔이 의도한 대로 작동하지 않습니다.	칫솔이 올바르게 설정되지 않았습니다.	초기 설정을 복원하려면 공장 초기화를 수행하십시오. 칫솔 디스플레이에서 설정 -> 공장 초기화 (22) 로 이동합니다. 전원 버튼을 눌러 확인합니다.
핸들이 작동되지 않습니다. (처음 사용 시)	1. 충전상태가 매우 낮아 핸들이 작동하지 않습니다. 2. 표준 온도 밖에서 작동 (디스플레이에 메시지 또는 라이트 링으로 표시)	1. 최소 30분 동안 충전하십시오. 2. 항상 적정 온도에서 작동하십시오 (0°C 이상, 40°C 이하).

2분 후에만 짧은 진동 소리가 나거나 핸들 서터 타이머가 전혀 작동하지 않습니다.	1. 앱을 통해 타이머 기능이 바뀌었거나 비활성화되었습니다. 2. 타이머가 오랄-비 앱 또는 iO sense 충전기와 양치 인식 기능을 사용할 때 비활성화되었습니다.	1. 앱을 통해 타이머 세팅 또는 공장 초기화를 시키십시오. 2. 오랄-비 앱과 iO sense 충전기에서 칫솔을 분리하거나 칫솔 인식을 비활성화합니다.
핸들이 충전되지 않습니다.	1. 배터리 충전상태가 매우 낮습니다 (0%). 디스플레이가 켜질 때까지 10~15분 정도 소요될 수 있습니다. 2. 충전을 위한 적정 온도가 아닙니다 (0°C 이하, 40°C 이상). 3. 충전기가 (올바르게) 연결되지 않았습니다.	1. 최소 30분 이상 충전하십시오. 2. 주위 온도가 5~35°C 사이인 곳에서 충전하십시오. 3. iO sense 충전기가 콘센트에 연결되어 있는지 확인하십시오.
전동칫솔을 켜거나 칫솔질을 하는 동안 딸각거리거나 큰 소음이 발생합니다.	1. 칫솔모가 핸들에 올바르게 꽂혀있지 않을 수 있습니다. 2. 칫솔모가 마모되었을 수 있습니다.	1. 칫솔모가 핸들에 제대로 맞는지 확인하십시오. 그 사이에는 작은 틈이 있습니다. 2. 칫솔모를 교체하십시오.
iO sense 충전기		
시계가 iO sense 충전기에 표시되지 않거나 애니메이션이 시계 디스플레이에서 계속 재생되고 있습니다.	장치가 인터넷에 연결되어 있지 않았습니다.	오랄-비 앱을 통해 iO sense 충전기를 설정합니다. 오랄-비 앱의 안내를 따르십시오. Wi-Fi 네트워크가 iO sense 충전기 범위에 있고 인터넷에 연결되어 있는지 확인합니다.
칫솔을 사용할 때 iO sense 충전기가 반응하지 않거나 다른 칫솔에서 반응합니다.	1. iO sense 충전기가 잘못된 칫솔에 연결되어 있습니다. 2. iO sense 충전기가 저전력 모드에서 작동하고 있습니다.	1.1 오랄-비 앱을 사용하지 않을 때: - 칫솔의 디스플레이 설정을 통해 블루투스를 활성화합니다. - iO sense 충전기를 재설정합니다. - 칫솔을 iO sense 충전기에 가까이 대고 전원을 켜서 두 기기를 연결하세요. 1.2 오랄-비 앱을 사용하는 경우: - 칫솔의 디스플레이 설정을 통해 블루투스를 활성화합니다. - 오랄-비 앱을 사용하여 칫솔을 연결하세요. 2. iO sense 버튼 (d) 을 한 번 눌러 저전력 모드를 종료합니다.
iO sense 충전기에 현재 칫솔질 세션이 표시되지 않습니다.	1. 칫솔질을 하는 동안 iO sense 충전기와 연결이 끊겼을 수 있습니다. 2. iO sense 충전기가 저전력 모드에 있습니다. 3. 오랄-비 앱으로 칫솔질 피드백을 제공합니다.	1. 칫솔질할 때는 충전기에 가까이 있어야 합니다. 2. iO sense 버튼 (d) 을 한 번 눌러 저전력 모드를 종료합니다. 3. 칫솔질 피드백은 하나의 장치에서만 제공됩니다. 올바른 장치를 선택했는지 확인하십시오.

해당 충전식 전동칫솔은 2.4~2.48GHz/최대 1mW 출력으로 작동하는 라디오 모듈 기능이 탑재되어 있습니다.

iO sense 충전기는 2.4~2.48GHz/최대 100mW 출력으로 작동하는 라디오 모듈 기능이 탑재되어 있습니다.

이에 따라, BRAUN GmbH는 무선기기 타입 3786, 3796, 3795, 3758, 3753, 3776, 3794, 3771, 3765, 3767 등이 2014/53/EU 지침에 준수함을 알려드립니다.

EU 적합성에 대한 전문은 다음 인터넷 주소에서 확인하십시오: www.oralfb.com/ce

제조일자 읽는 방법:

제조 일자: 전동칫솔 핸들 또는 iO sense 충전기의 바닥에 표시된 제조 코드에서 확인할 수 있습니다.

전동칫솔 핸들:

제조 코드는 두 글자로 시작합니다. 두 글자 뒤에 오는 첫 자릿수는 생산된 연도를 의미합니다. 다음 두 자릿수는 생산된 주를 나타냅니다. 네 번째 숫자는 생산 요일을 의미합니다.

핸들: 《XX1093...》 - 2021년 9번째 주 수요일에 생산되었음.

iO sense 충전기:

제조 코드는 5자리로 구성됩니다. 처음 세 자리는 율리우스력 날짜를 나타내고 (예: 035 = 2월 4일), 네 번째 자리는 생산 연도를 나타내며 (예: 1 = 2021), 다섯 번째 자리는 내부 코드입니다.

여행용 충전 케이스:

제조 코드는 6자리로 구성됩니다. 처음 두 자리는 연도를 나타내고 (예: 21 = 2021년), 다음 두 자리는 생산 달력 주를 나타내며 (예: 01-52), 마지막 두 자리는 내부 코드입니다.

Description

- 1** Brush head
- 2** Brush head identification symbol
- 3** Smart Pressure Sensor / Light ring
- 4** Interactive display
- 5** Toothbrush handle
- 6** iOsense™ charger
- 7** On/off button
- 8** Mode button
- 9** Interactive display features
- 10** «Daily Clean» mode
- 11** «Sensitive» mode
- 12** «Gum Care» mode
- 13** «Whiten» mode
- 14** «Intense» mode
- 15** «Super Sensitive» mode
- 16** «Tongue Clean» mode
- 17** Settings menu
- 18** Settings menu features
- 19** Manage *Bluetooth®* settings
- 20** Select / change colour of light ring
- 21** Select / change language
- 22** Perform factory reset
- 23** Feedback features
- 24** Timer
- 25** Battery status
- 26** Brush head replacement reminder
- 27** Brushing feedback

Accessories (depending on model) and features:

- a** Brushing recognition - Indicator LEDs
- b** Brushing recognition - Brushing progress indication
- c** Download and launch Oral-B App to enable all features
- d** iOsense™ button
- e** Smart Pressure Sensor
- f** Brush head «Ultimate Clean»
- g** Brush head «Gentle Care»
- h** Brush head holder with cap
- i** Brush head holder stand
- j** Travel case
- k** Charging travel case
- k1** Charging light
- k2** Power supply

Note: Content may vary based on the model purchased.

English

Welcome to Oral-B!

Before operating your Oral-B iO toothbrush and iOsense™ charger, please read these instructions and save this manual for future reference.

IMPORTANT

- Periodically check the entire product/cord/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/accessories is damaged, take it to an Oral-B Service Centre. Do not modify or repair the product. This may cause fire, electric shock or injury.
- Never insert any object into any opening of the appliance.
- Usage by children under age 3 is not recommended. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children shall not play with the appliance.
- For tooth brushing only. Do not chew or bite on brush. Do

not use as a toy or without adult supervision.

- Use this product only for its intended use as described in this manual. Do not use attachments which are not recommended by the manufacturer.
- Only use the charger provided with your appliance.
- Only use the charger and/or special cord set with integrated Safety Extra Low Voltage power supply provided with your appliance. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. If charging stand/charging travel case is marked with 492-XXXX, only use Braun/Oral-B special cord set with this identification.

WARNING

- Do not place the charger, power supply or charging travel case in water or liquid or store where it can fall or be pulled into a tub or sink. Do not reach for it when fallen into water. Unplug immediately.
- Avoid sharp bending, jamming or squeezing of the cord.
- This appliance contains batteries that are non-replaceable. Do not open and disassemble device. For battery recycling please dispose whole device according to local environmental regulations. Opening the handle will destroy the appliance and invalidate the warranty.
- When unplugging, always pull the power plug instead of the cord. Do not touch the power plug with wet hands. This can cause an electric shock.

- If you are undergoing treatment for any oral care condition, consult your dental professional prior to use.
- This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution. For hygienic reasons we recommend the use of individual brush handles and brush heads for each family member.
- Small parts may come off, keep out of reach of children.

To avoid brush head breakage which may generate a small parts choking hazard or damage teeth:

- Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly. Never use without a brush head.
- If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible.
- Replace brush head every 3 months or sooner if brush head becomes worn.
- Clean brush head properly after each use (see «Cleaning Guidelines» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush.

Important Information

- This toothbrush, charger and pouch (accessory) contain NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your toothbrush.
- To avoid electromagnetic interference and/or compatibility conflicts, disable *Bluetooth* on your toothbrush handle (5) and *Bluetooth*/Wi-Fi on your iOsense™ charger before using it in restricted surroundings, such as aircrafts or specially marked areas in hospitals.
- Disable *Bluetooth* by entering the «Settings» menu on the interactive display (4) -> *Bluetooth* -> disable. Follow the same procedure to enable *Bluetooth* again. Disable *Bluetooth*/Wi-Fi on your iOsense™ charger by entering low power mode by tapping the iOsense™ button twice (d). Tap the button once again to enable *Bluetooth*/Wi-Fi.
- Persons with pacemakers should always keep the toothbrush more than 15 centimeters (six inches) from the pacemaker while turned on. Anytime you suspect interference is taking place disable *Bluetooth*.

Specifications

For voltage specifications refer to the bottom of the charging unit.

Noise level: 64 dB (A)

First use

Please wake up your iO toothbrush by pressing the on/off button (7) and follow the instructions on the interactive display (4) to get started for first time setup.

If not further instructed on the display, you may toggle with the mode button (8) and select with the on/off button (7).

You may change the settings via the «Settings» menu (17) at any time.

You may connect your iO toothbrush with your iOsense™ charger by switch on the toothbrush in close proximity to the plugged-in iOsense™ charger.

Charging and Operating

- To charge the toothbrush battery place the toothbrush on the iOsense™ charger (6).
- The charge level is indicated on the interactive display (4). The light ring (3) fades in and out during charging. Once it is fully charged the light ring turns off. A full charge typically takes 3 hours.
- If the battery is running low the light ring (3) blinks quickly in red. Once the battery is empty, the motor stops; it will need at least a 5-minute charge for one usage.
Note: In case the battery is empty (display off), charge for at least 30 minutes.
- You can always store the toothbrush on the iOsense™ charger to maintain it at full charge; a battery overcharge is prevented by the device.

Note: Store the toothbrush at room temperature for optimal battery maintenance.

Caution: Do not expose the toothbrush to temperatures higher than 50°C / 122°F.

Using your iO toothbrush

Start Brushing

Place the brush head on the toothbrush handle. A small gap should remain between handle and brush head. Activate the display by picking-up the toothbrush, lifting it off the iOsense™ charger or pressing the on/off button (7) (display turns on). Wet brush head and apply toothpaste. To avoid splashing, guide the brush head to your teeth

before switching the toothbrush on by pressing the on/off button.

Note: Display turns off after some time. You may press the on/off button to activate display again.

Guide the brush head from tooth to tooth. Brush the outsides, the insides and the chewing surfaces. Brush all four quadrants of your mouth equally. You may also consult your dentist or dental hygienist about the right technique for you. After brushing, the display gives you feedback based on your brushing time.

In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» or «Super Sensitive» modes (optional in combination with an Oral-B «Gentle Care» brush head (g)). Availability of modes are depending on model purchased.

Toothbrush Timer (Stutter Timer)

The iO toothbrush is equipped with timer features, which help you to achieve the professionally recommended 2-minute brushing time. The timer signals with a short stuttering sound at 30-seconds intervals to move to the next quadrant of your mouth. A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time.

The timer memorizes the reached brushing time, even when the toothbrush is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds or placing the toothbrush on the plugged-in iOsense™ charger.

Note: During the use of the Oral-B App or iOsense™ charger features the stutter timer is deactivated in the toothbrush. You may also customize the stutter timer settings via Oral-B App.

Toothbrush Light Ring (3)

Your iO toothbrush is equipped with a light ring (3) that has various functions indicated via colours:

Smart Pressure Sensor (e)

White (default) = Operating indicator (choose individual colour via Oral-B App)/ Low pressure indicator

Green = recommended pressure indicator

Red = high pressure indicator

If the Smart Pressure Sensor illuminates in white (or your pre-selected colour), we recommend applying more pressure. The green light indicates recommended brushing pressure. If too much pressure is applied, it lights up in red reminding you to reduce pressure. During high pressure the brush head movement will be reduced (in «Daily Clean», «Intense» and «Sensitive» modes). Periodically check the operation of the Smart Pressure Sensor by pressing moderately on the brush head during use.

Note: During the use of the Oral-B App, the Smart Pressure Sensor indication may be inactive for some features.

Note: Smart Pressure Sensor is deactivated during «Tongue Clean» mode.

Other functions

Red = Low battery indicator

Blue = *Bluetooth* pairing indicator

Orange = Error indicator (follow display messages)

Brushing modes (depending on model)

Your iO toothbrush offers different brushing modes indicated on the display:

«**Daily Clean**» – Standard mode for daily cleaning

«**Sensitive**» – Gentle, yet thorough cleaning for sensitive areas

«**Gum Care**» – Gentle massage of gums

«**Whiten**» – Polishing for occasional or everyday use

«**Intense**» – For an extraordinary clean feeling (operated with a higher speed)

«**Super Sensitive**» – Super gentle cleaning for extra sensitive areas

«**Tongue Clean**» – Tongue cleaning for occasional or everyday use

Note: The sequence and availability of brushing modes may vary depending on model purchased.

When operating the «Tongue Clean» mode, we recommend using a «Gentle Care» brush head (g). You can brush your tongue either with or without toothpaste. Brush the whole area of your tongue systematically in gentle movements.

The recommended brushing time is 30 seconds; the motor stops after 30 seconds.

Mode setting:

Wake up your iO toothbrush to identify selected mode for your brushing session. To change to others modes, successively press the mode button (8) during use. The toothbrush automatically starts in the mode selected last.

Note: You may also customize mode settings via Oral-B App.

Interactive Display

Activate the interactive display (4) by picking-up the toothbrush, lifting it off the charger or pressing the on/off button (7).

(10-16) «Mode selection» – toggle by pressing the mode button during use.

(17) «Settings» – toggle through all modes until you reach the option «Settings»; to enter press the on/off button:

-> (19) manage *Bluetooth* settings (enable, disable)

-> (20) select/change colour of light ring

-> (21) select/change language

-> (22) perform factory reset

(24) «Timer» – displays brushing time.

(25) «Battery status» – shows battery status after use, when charging or when battery is low.

(26) «Exchange reminder» – reminds you when to replace your brush head.

(27) «Brush feedback» – brushing feedback is indicated with a smiley face.

When the toothbrush is picked up, lifted off the iOsense™ charger or when you press the on/off button the toothbrush handle indicates its readiness.

«Error messages» – «outside operating limits»: you are operating or charging outside standard temperature range.

Brush heads

Oral-B offers you a variety of different Oral-B iO brush heads (f/g) that only fit your Oral-B iO toothbrush handle and can be used for tooth-by-tooth precision cleaning.

Most iO Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the bristle colour will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the colour recedes, you may exert too much pressure on teeth and gums. In general, we recommend replacing the brush head every 3 months.

Brush Replacement Reminder

The toothbrush is equipped with a «Brush Replacement Reminder» on the interactive display, indicating the need to exchange the brush head approximately after 3 months when used twice per day.

To reset the «Brush Replacement Reminder» follow the instructions on the display.

Note: You may also customize the brush replacement settings via the Oral-B App.

Connecting your iO toothbrush to your Smartphone/Oral-B App

The Oral-B App offers various features:

- Personalize your toothbrush settings (e.g. choose your preferred light ring colour, adjust stutter timer, brush mode sequence or brush replacement reminder settings)
- Track your brushing behavior (e.g. brushing time and applied pressure)
- Real-time brushing recognition to help you brush every area for the right amount of time.

The Oral-B App is available for smartphones running iOS or Android™ operating systems. Check app.oralb.com for compatible smartphones and country availability of the Oral-B App. It can be downloaded for free from App StoreSM/ Google Play store™ or you may scan the QR code on the cover page of this manual (c).

- Launch the Oral-B App. It will guide you through the entire *Bluetooth* pairing procedure. You may also pair new devices at any time in the Oral-B App's settings.

Note: Oral-B App functionality is limited if *Bluetooth* is deactivated on your smartphone (for directions please refer to your smartphone's user manual).

- You may change *Bluetooth* settings on your toothbrush via the display -> Settings -> *Bluetooth* enable/disable.
- Keep your smartphone in close proximity (within 5m distance) when using it with the toothbrush. Make sure the smartphone is safely positioned in a dry place.

Note: Your smartphone must support *Bluetooth* 4.2 (or higher) / *Bluetooth* Smart in order to pair your toothbrush.

Caution: Follow your smartphone's user manual to ensure your phone/ charger is designed for use in a bathroom environment.

Using your iOsense™ charger

Personalized live-coaching and Smart Pressure Sensor features

The iOsense™ charger has a built-in real-time feedback on brushing coverage, brushing time and

pressure. The LED lights on top of your iOsense™ charger illustrate your upper and lower jaw (a). You may start your brushing session at any area of your mouth. While the area is being brushed, the respective light fades from blue to white, indicating the brushing progress. Once one area is cleaned (a), the respective LED turns into white. If too much pressure is applied, LEDs light up in red reminding you to reduce pressure (e).

Caution: During a brushing session with enabled brushing recognition feature on your iOsense™ charger, please stay within 5m distance to your iOsense™ charger to ensure a stable connection and brushing recognition.

To enable the full feature set of iOsense™ charger, the Oral-B App is required. Please follow the instructions in the Oral-B App for connection setup.

Clock setup

Launch the Oral-B App and connect the iOsense™ charger with your Wi-Fi by following the instructions in the Oral-B App.

Note: The clock doesn't work without the Wi-Fi connection.

Bluetooth & Wi-Fi® functions

The iOsense™ charger supports *Bluetooth* and *Wi-Fi*.

- *Bluetooth* connects the iOsense™ charger with the toothbrush and the Oral-B App.
- *Wi-Fi* connects the iOsense™ charger with the internet.

iOsense™ button functions


You may find the capacitive touch button (d) on the back of your iOsense™ charger. It has two functions:

- **Low Power Mode:** Device enters into low power mode. All features beyond charging are disabled. Tap the button (d) twice to enable low power mode and once to disable. The activation of low power mode is indicated by the LEDs on the top of your iOsense charger. Power consumption of networked standby mode: 1,2 W.
- **Factory reset:** Touch and hold the button (d) until orange light appears on the top of your iOsense™ charger, then release the button. Tap the button once again while orange light is on, to trigger the factory reset. LEDs spin orange clockwise to confirm the factory reset. All credentials and settings are deleted from the iOsense™ charger.

Cleaning Guidelines

After each brushing, rinse your brush head under running water with the handle switched on. Remove the brush head and clean the handle and brush head separately. Make sure water runs inside the top of the handle while the handle is switched on, as well as inside the brush head. Wipe all parts dry and let them air-dry before reassembling your toothbrush again.

Unplug the iOsense™ charger before cleaning. Clean the charger regularly with a damp cloth only. Please check individual cleaning instructions for each accessory in its «Accessories» paragraph.

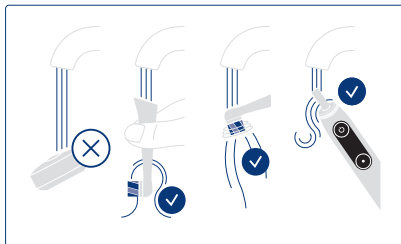

Accessories (depending on model)

Charging Travel Case (k)

- To charge your toothbrush (5) place it in the charging travel case (k) and connect it to the mains outlet, using the extra power supply (k2) provided. The power supply may be used for all global mains voltage ranges (100 – 240V).
- The flashing light (k1) of the charging travel case indicates that the toothbrush is charging. Once the toothbrush is fully charged the light turns off. A full charge in the charging travel case typically takes 6 hours.
- The outer and inner case should be cleaned with a damp cloth only. Make sure that the toothbrush and brush head are completely dry before storing in the travel case.

Note: Clean stains on travel case surfaces immediately. Store travel case in a clean and dry place.

Travel Case (j)

Store the clean and dry iO toothbrush/brush heads in the travel case (j). The outer and inner case should be cleaned with a damp cloth only.

Note: Clean stains on travel case surfaces immediately. Store travel case in a clean and dry place.

Brush head holder stand (i) / Brush head holder with cap (h)

You may store your cleaned and dry brush heads on the pins of the brush head holders. Make sure your brush heads are dried before placing them in the holder and/or closing the cap. Brush head holders and cap are dishwasher-safe.

Zipper Pouch / Magnetic Pouch

You may store your cleaned brush heads and toothbrush in the pouches. Make sure your brush heads and toothbrush are dried before placing them in the pouches. The outer and inner surfaces can be cleaned under running water. Store pouches in a clean and dry place.

Note: Clean stains on pouch surfaces immediately.

Subject to change without notice.

Environmental Notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.



Guarantee

We grant 1 year guarantee on the product commencing on the date of purchase.

Within the guarantee period we will eliminate, free of charge, any defects in the appliance resulting from faults in materials or workmanship, either by repairing or replacing the complete appliance as we may choose. Depending on availability replacement of a unit might result in a different colour or an equivalent model.

This guarantee extends to every country where this appliance is supplied by Braun / Oral-B or its appointed distributor. This guarantee does not cover: damage due to improper use, normal wear or use, especially regarding the brush heads, as well as defects that have a negligible effect on the value or operation of the appliance.

The guarantee becomes void if repairs are undertaken by unauthorized persons and if original Braun / Oral-B parts are not used.

These appliances are equipped with a *Bluetooth* Smart approved radio/Wi-Fi interfaces. Failure to establish a *Bluetooth* Smart/Wi-Fi connection to specific smartphones is not covered under the

device guarantee, unless the malfunction of the *Bluetooth* / Wi-Fi interface is referable to Oral-B. The *Bluetooth* / Wi-Fi devices are warranted by their own manufacturers and not by Oral-B. Oral-B does not influence or make any recommendations to device manufacturers, and therefore Oral-B does not assume any responsibility for the number of compatible devices with our *Bluetooth* / Wi-Fi interface.

Oral-B reserves the right, without any prior notice, to make any technical modifications or changes to system implementation of device features, interface, and menu structure changes that are deemed necessary to ensure that Oral-B systems function reliably.

To obtain service within the guarantee period, hand in or send the complete appliance with your sales receipt to an authorized Oral-B Braun Customer Service Centre.

Information

***Bluetooth*® radio module / Wi-Fi® module**

Although all indicated functions on the *Bluetooth* / Wi-Fi device are supported, Oral-B does not ensure 100% reliability in connection, and feature operation consistency.

Operation performance and connection reliability are direct consequences of each individual *Bluetooth* / Wi-Fi device, software version, as well as the operating system of those *Bluetooth* / Wi-Fi devices and company security regulations implemented on the device.

Oral-B adheres to and strictly implements the *Bluetooth* / Wi-Fi standard by which *Bluetooth* / Wi-Fi devices can communicate and function in Oral-B iO toothbrushes.

However, if device manufacturers fail to implement this standard, *Bluetooth* / Wi-Fi compatibility and features will be further compromised and the user may experience functional and feature-related issues. Please note that the software on the *Bluetooth* / Wi-Fi device can significantly affect compatibility and operation.

Warranty replacement brush heads

Oral-B warranty will be voided if electric rechargeable toothbrush handle damage is found to be attributed to the use of non-Oral-B replacement brush heads.

Oral-B does not recommend the use of non-Oral-B replacement brush heads.

- Oral-B has no control over the quality of non-Oral-B replacement brush heads. Therefore, we cannot ensure the cleaning performance of non-Oral-B replacement brush heads, as communicated with the electric rechargeable handle at time of initial purchase.
- Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.
- Oral-B cannot predict the long-term effect of non-Oral-B replacement brush heads on handle wear.

All Oral-B replacement brush heads carry the Oral-B logo and meet Oral-B's high quality standards. Oral-B does not sell replacement brush heads or handle parts under any other brand name.

Troubleshooting

Problem	Possible reason	Remedy
Oral-B App		
Toothbrush and iOsense™ charger do not operate (properly) with Oral-B App.	1. Oral-B App is closed. 2. <i>Bluetooth</i> is not activated on smartphone. 3. <i>Bluetooth</i> is disabled on toothbrush 4. <i>Bluetooth</i> connection to smartphone has been lost. 5. Your smartphone does not support <i>Bluetooth</i> 4.2 (or higher) / <i>Bluetooth</i> Smart. 6. Outdated Oral-B App. 7. Your smartphone is not compatible with the Oral-B App 8. iOsense™ charger is in Low Power mode.	1. Launch Oral-B App. 2. Activate <i>Bluetooth</i> on smartphone (described in its user manual). 3. Enable <i>Bluetooth</i> via display settings on your toothbrush 4. Keep your smartphone in close proximity when using it with the toothbrush and iOsense™ charger. 5. Your smartphone must support <i>Bluetooth</i> 4.2 (or higher)/ <i>Bluetooth</i> Smart in order to pair toothbrush. 6. Download latest Oral-B App. 7. Check app.oralb.com for compatible smartphones and country availability of the Oral-B App. 8. Quit Low Power mode on iOsense™ charger by tapping the button (d) once.
TOOTHBRUSH		
Unwanted toothbrush behavior	Toothbrush was misconfigured	Perform a factory reset to restore initial settings. Navigate on toothbrush display to Settings -> Factory Reset (22). Press on/off button to confirm.
Toothbrush is not operating (during first use).	1. Battery has a very low charge level; handle does not operate. 2. Operating outside standard temperature range (message on display and/or alternating lights of light ring)	1. Charge at least for 30 min. 2. Always operate in standard operating temperature range (> 0°C and < 40°C).

Short stuttering sounds after 2 minutes or toothbrush does not provide any stutter timer.	1. Timer has been modified/ deactivated via Oral-B App. 2. The toothbrush timer is disabled during use of brushing recognition with Oral-B App or iOsense™ charger.	1. Use Oral-B App to change timer settings or perform toothbrush factory reset 2. Disconnect toothbrush from Oral-B App and iOsense™ charger or configure iOsense™ charger with the App to disable brushing recognition.
Toothbrush does not charge.	1. Battery is at a very low charger level (0%); it may take up to 10-15min until display turns on. 2. Ambient temperature for charging is out of valid temperature range (< 0°C and > 40°C). 3. Charger may not be (properly) connected.	1. Charge at least for 30 min. 2. Recommended ambient temperature range for charging is 5°C to 35°C. 3. Ensure iOsense™ charger is connected to mains voltage.
Rattling/loud noise during brushing or turning on.	1. Brush head may not be placed correctly onto the brush handle. 2. Brush head may be worn out.	1. Check proper fit of brush head on handle. Small gap remains in between. 2. Replace brush head.
iOsense™ charger		
Clock is not displayed on the iOsense™ charger or an animation is playing ongoingly on clock display	Device is not connected to the internet.	Use the Oral-B App to setup the iOsense™ charger. Please follow the instruction in the Oral-B App. Make sure your Wi-Fi network is in range of iOsense™ charger and connected to internet.
iOsense™ charger is not reacting when using my toothbrush or reacts on a different toothbrush	1. iOsense™ charger is connected to a wrong toothbrush 2. iOsense™ charger is in Low Power mode.	1.1 When you are not using the Oral-B App: - Enable <i>Bluetooth</i> via display settings on your toothbrush - Reset iOsense™ charger. - Hold your toothbrush close to iOsense™ charger and turn it on to connect both devices. 1.2 When you are using the Oral-B App: - Enable <i>Bluetooth</i> via display settings on your toothbrush. - Use the Oral-B App to connect your toothbrush. 2. Quit Low Power mode on iOsense™ charger by tapping the button (d) once.
iOsense™ charger is not showing my current brushing session	1. iOsense™ charger may got disconnected from your toothbrush while brushing 2. iOsense™ charger is in Low Power mode. 3. Brushing feedback is already provided in the Oral-B App	1. Please ensure that you stay in close proximity to your charger while brushing 2. Quit Low Power mode on iOsense™ charger by tapping the button (d) once. 3. Brushing feedback can only be provided on one device. Make sure you have selected the right device.

The rechargeable iO toothbrush contains a radio module which operates in the 2.4 to 2.48 GHz band with a maximum power of 1mW.

The iOsense™ charger contains a radio module which operates in the 2.4 to 2.48 GHz band with a maximum power of 100mW.

Hereby, Braun GmbH declares that the radio equipment types 3786, 3796, 3795, 3758, 3753, 3776, 3794, 3771, 3765 and 3767 are in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: www.oralb.com/ce.

Manufacturing date code:

To determine the date of manufacture, refer to the production code located on the type plate on the bottom of the toothbrush handle and/or iOsense™ charger.

Toothbrush Handle:

The production code starts with two letters. The first digit after the two letters of the production code refers to the year of manufacture. Second and third digits refer to the calendar week of manufacture. Fourth digit refers to the calendar day of manufacture.

Handle: Example: «XX1093...» – means the product was manufactured on Wednesday in week 09 of 2021.

iOsense™ charger:

The production code of the device consists of 5 digits. The first three digits represent the Julian Date (Example: 035 = 4 February), the fourth digit is year of production (Example: 1 = 2021), the fifth digit is an internal code.

Charging travel case:

The production code of the device consists of 6 digits. The first two digits represent the Year (Example: 21 = 2021), the next 2 digits are the calendar week of production (Example: 01-52), the last two digits are internal codes.



C

