BRAUN

Series 5

Type 5751

www.braun.com

590cc-4

550cc-4

3
4
5
2
1
BRAUN
6
7
8
9
10
11
12
13
14
15
16
17
590
550
18
19

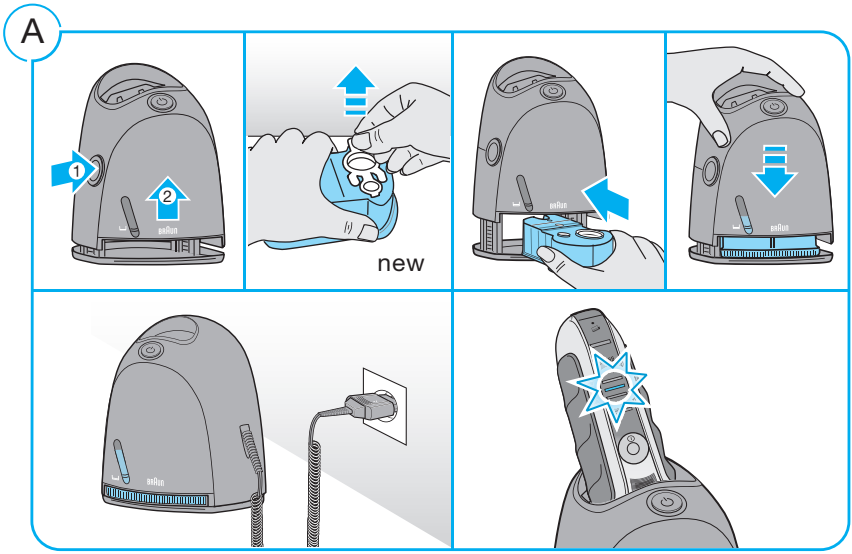
A
1
2
new

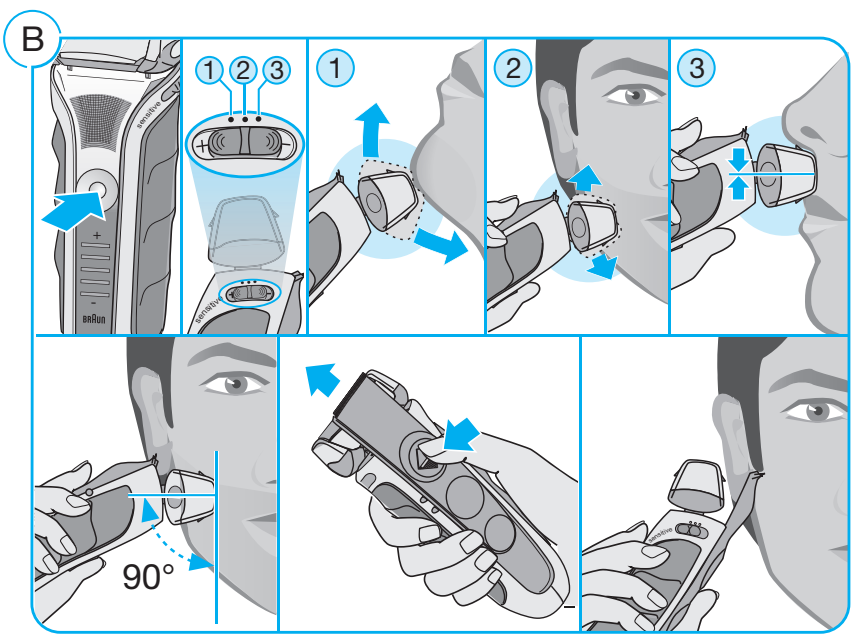
B
1
2
3
1
2
3
90°

C

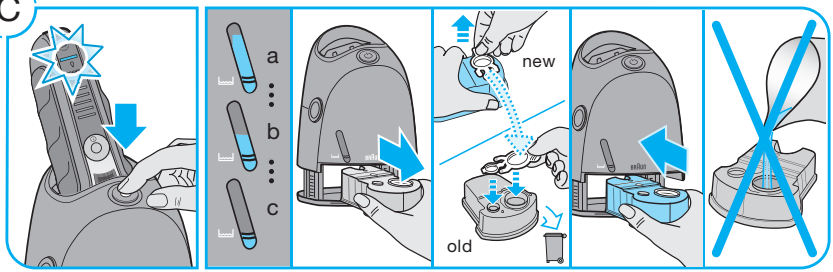

D

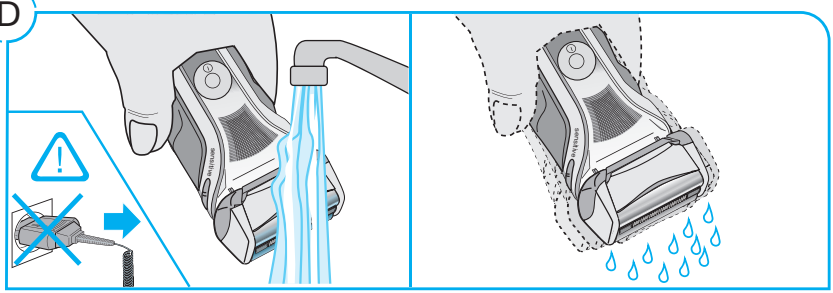

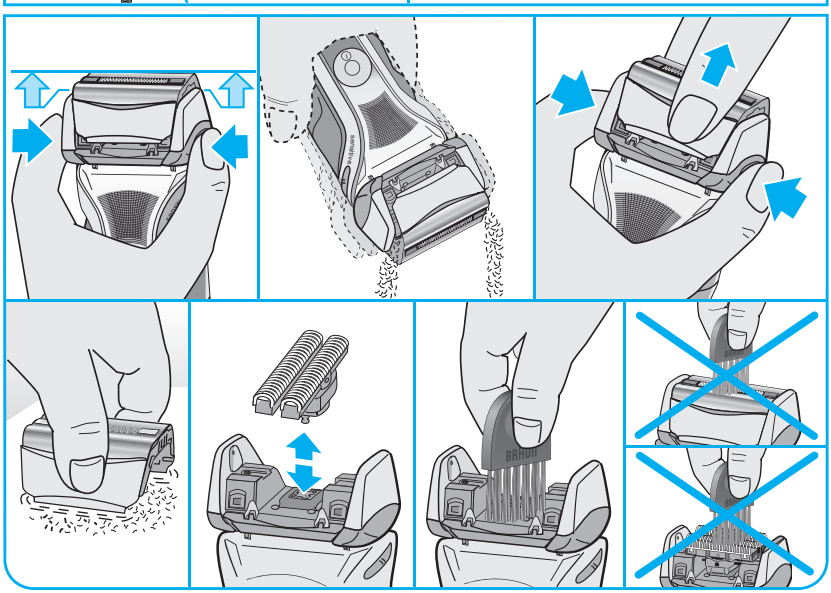

한국어

본 제품은 당사의 엄격한 기준에 맞추어 만들어진 우수한 품질과 기능 그리고 디자인을 갖춘 제품입니다.
저희 브라운 제품을 구입해 주셔서 감사합니다.
안전한 사용을 위해 설명서를 주의 깊게 읽어보시고, 필요할 때 참고할 수 있도록 잘 보관해주시기 바랍니다.

주의사항

본 제품은 안전 저전압 전원 장치가 갖추어진 전용 코드세트가 들어 있습니다. 어떤 부품도 함부로 바꾸거나 조작하지 마십시오. 감전의 위험이 있습니다.
본 제품의 전용코드만 사용하시기 바랍니다.

손상된 면도망과 코드는 절대 사용하지 마십시오.

면도기 헤드는 흐르는 수도물에서 세척할 수 있습니다. 물로 청소하기 전에 면도기를 전원과 분리하십시오.

이 제품은 안전을 위하여 보호자의 관리 감독이 없는 경우 어린아이나 심신박약자가 사용할 수 없습니다. 어린아이의 손이 닿지 않는 곳에 보관하십시오. 어린아이가 가지고 놀지 않도록 지도가 필요합니다.

세척용액이 새지 않도록 Clean & Renew station을 평평한 곳에 놓아둡니다. 세척 카트리지가 장착된 경우에는 기울이거나 갑자기 움직이거나 운반하지 마십시오. 카트리지 용액이 밖으로 샐 수 있습니다. 거울 캐비넷이나 라디에이터 위 또는 미끄러운 표면 위에 놓지 마십시오.

세척 카트리지는 발화성 용액을 함유하고 있습니다. 인화성 물질이나 담뱃불을 가까이 하지 마십시오. 직사광선에 장시간 노출하지 마십시오.

카트리지 용액은 리필하지 말고 브라운 정품 카트리지만을 사용하십시오.

각부의 명칭

Clean&Renew station

1 레벨 표시기
2 카트리지 교환 리프트 버튼
3 면도기와 스테이션 접촉 장치
4 시작 버튼
5 스테이션 전원 소켓
6 세척 카트리지

면도기

7 면도망
8 면도날
9 면도망 분리 버튼
10 긴수염 정리용 트리머
11 컴포트 세팅 스위치 «sensitive»
12 면도기와 스테이션 접촉 장치
13 On/off 스위치
14 면도기 디스플레이
15 청소등 (노란색)
16 면도기 부품 교체 표시등
17 면도기 전원 소켓
18 전용 코드 세트
19 보호용 휴대용 케이스

A 면도하기 전에

면도기를 처음 사용하기 전에 전용 코드 세트(18)를 이용해서 면도기를 전원에 연결시키거나 아래와 같이 진행하십시오.

Clean&Renew 스테이션 장착

- 전용 코드 세트(18)를 이용해서 스테이션 전원 소켓 (5)을 전원에 연결합니다.
- 리프트 버튼 (2)을 눌러서 몸체를 엽니다.
- 세척 카트리지 (6)를 평평하고 안정된 표면 (예:테이블) 위에 놓고 잡습니다.
- 조심스럽게 카트리지 뚜껑을 제거합니다.
- 카트리지를 스테이션의 안쪽으로 끝까지 밀어 넣습니다.
- 천천히 청소 겸용 충전기를 아래로 눌러 닫습니다.

Clean&Renew station에서의 면도기 충전

면도기 헤드를 Clean&Renew station에 거꾸로 꽂습니다. (면도기 뒷면의 접촉 장치 (12)와 스테이션의 접촉 장치 (3)가 합체됩니다. 필요한 경우 Clean&Renew station이 자동적으로 면도기를 충전합니다.

완전 충전된 면도기는 코드 없이 수염 정도에 따라 약 45분정도 사용 가능합니다.

충전을 위한 주변의 최적온도는 5℃에서 35℃입니다. 그 이외의 환경에서는 충전이 안되거나 충전 효율이 떨어질 수 있습니다. 면도를 위한 최상의 온도는 15℃에서 35℃입니다. 면도기를 50℃ 이상 온도에 장시간 노출하지 마십시오.

면도기 디스플레이

면도기 디스플레이 (14)는 배터리 충전상태를 보여줍니다. 충전 중이거나 사용 중일 때 각각의 배터리 마디 충전등이 깜박거립니다 (녹색). 면도기가 Clean&Renew 스테이션에 있을 경우 배터리가 충분히 충전되면 모든 마디 충전등이 약 1시간 동안 지속적으로 켜지게 됩니다.

배터리 용량이 적을 경우 적색 저 충전 표시등이 켜집니다. 면도를 서둘러 끝내주십시오.

B 면도 방법

on/off 스위치 (13)를 눌러서 면도기를 작동합니다.

컴포트 세팅 스위치 «sensitive»

면도기 헤드를 면도가 필요한 부분에 위치시킵니다.

«sensitive» 스위치 (11)는 편안한 세팅을 위해 세가지 옵션을 제공합니다.

① « + » :
면도기 헤드가 자유롭게 피부의 각도에 맞게 완전히 회전하여 편안한 면도를 할 수 있게 해줍니다.

② 중간 :
컨트롤이 가능하도록 면도기 헤드가 부분적으로 고정됩니다.

③ « - » :
완전히 컨트롤 할 수 있도록 면도기 헤드가 고정되어 닿기 어려운 부분까지 정밀하게 면도할 수 있습니다.

긴 수염 정리용 트리머

구레나룻나 콧수염 등을 정리할 때는 긴 수염 정리용 트리머 (10)를 위쪽으로 세워줍니다.

완벽한 건식 면도를 위한 제안

최상의 결과를 얻기 위해 다음과 같은 3단계 과정에 따라 면도하십시오.

1. 항상 세면 전에 면도하십시오.
2. 항상 면도기는 피부에 수직 (90°)이 되도록 사용하십시오.
3. 피부를 곧게 편 상태에서 수염이 자란 반대방향으로 면도하십시오.

코드 사용 면도

배터리가 방전된 경우 전용 코드를 전원에 연결해서 사용하실 수도 있습니다.

청소

가장 좋은 면도 결과를 위해서는 면도할 때마다 스테이션에 면도기를 꽂아서 청소해주시는 것이 좋습니다 («자동청소» 참고). 필요한 모든 충전과 청소 과정이 자동적으로 진행됩니다

청소 표시등

면도후에 노란색 청소 등 (15)이 계속 켜져있으면 Clean & Renew 스테이션에서 면도기를 청소하십시오. 청소를 하지 않는 경우에는 청소 등이 얼마간 시간이 지난 후에 꺼지고 카운터가 다시 재조정됩니다.

C 자동 청소

Clean&Renew 스테이션은 면도기를 청소와 충전, 보관을 할 수 있도록 만들어졌습니다.
매번 면도한 후에 면도기를 Clean&Renew 스테이션에 다시 꽂아서 다음과 같이 청소하십시오:

- 면도기 헤드를 클리닝 스테이션에 거꾸로 꽂아 주십시오.

- 시작 버튼 (4)을 눌러주십시오. 청소 과정이 시작됩니다(약 5분 청소, 4시간 건조).
- 청소 중에는 면도기가 젖어있고 면도하기에 적합하지 않으므로 사용하지 마십시오. 불가피하게 사용해야 할 경우에는 시작 버튼 (4)을 누르십시오.
- 청소가 끝나게 되면 노란색 청소 등이 꺼지고 면도기 사용이 가능합니다.
- 세척카트리지는 약 30회 정도 사용이 가능합니다. 레벨 표시기 (1)가 «min» 표시에 오게 되면 남은 용액으로 약 5번 더 청소할 수 있습니다.
  매일 사용할 경우 대략 4주마다 세척카트리지를 교환해 주셔야 합니다.
- 위생 세척 카트리지에는 알코올이 들어있어 일단 개봉하면 천천히 공기 중으로 증발됩니다. 매일 사용하지 않더라도 약 8주 후에는 카트리지를 교체해 주십시오.
- 세척 카트리지는 윤활유가 들어있어서 청소 후에 면도기 헤드 위에 자국이 남을 수 있지만 천이나 부드러운 휴지로 닦아주면 쉽게 제거됩니다.

몸체 청소

때때로 면도기의 몸체와 Clean&Renew 스테이션을 젖은 헝겊으로 특별히 면도기를 꽂는 부분을 깨끗이 닦아주십시오.

카트리지 교환

리프트 버튼 (2)을 눌러 몸체를 열고 세척 용액이 떨어지지 않도록 몇 초간 기다린 후 다 사용한 카트리지를 빼냅니다. 새 카트리지의 뚜껑으로 다 사용한 카트리지를 확실히 막아서 폐기하십시오. 사용한 카트리지는 오염된 클리닝 용액이 포함되어 있습니다.

D 수동청소

흐르는 물에 면도기 헤드를 헹구면 특별히 여행 중에 면도기를 깨끗하게 관리하실 수 있습니다.

- 면도기의 스위치를 켜고(코드 없이) 면도기 헤드를 흐르는 따뜻한 물에 헹구십시오. 연마제가 들어 있지 않은 액체 비누를 사용하십시오. 거품을 모두 헹군 후에 면도기를 수초동안 작동시키십시오.
- 그런 다음, 면도기 스위치를 끄고 분리 버튼 (9)을 눌러서 면도망 (7)과 면도날 (8)을 분리한 후 해체된 부품들을 말려주십시오.
- 면도기를 흐르는 물에 정기적으로 세척 중 인경우, 긴 수염 정리용 트리머 (10)와 면도 망 (7)에 일주일에 한 번 묽은 윤활유 한 방울을 떨어뜨려 주시기 바랍니다.

빠른 청소를 위한 또 다른 방법은 다음과 같습니다:

- 면도망 분리 버튼 (9)을 눌러서 면도망을 들어올립니다 (면도망을 완전히 분리하지 마십시오).
  면도기 스위치를 켜고 약 5초에서 10초 정도 작동시켜 면도 찌꺼기를 제거하십시오.
- 면도기 스위치를 끄십시오. 면도 망을 분리한 후 평평한 표면에 놓고 톡톡 쳐서 털어줍니다. 청소용 솔을 이용하여 면도기 헤드의 내부를 청소하십시오. 단, 면도망이나 면도날은 청소용 솔로 청소하지 마십시오. 손상의 위험이 있습니다.

면도기를 최상의 상태로 유지하려면

면도망과 면도날 교체와 재설정

100% 면도 효과를 얻기 위해 부품 교체 표시등 (16)에 불이 들어오거나 (약 18개월 후) 부품이 닳는 대로 면도망 (7)과 면도날 (8)을 교체해 주십시오.

부품 교체 표시등이 켜져서 7번 면도를 하는 동안 면도망과 면도날의 교체시기를 잊지 않도록 알려줍니다. 그 후에는 자동으로 재설정됩니다.

면도부품 (면도망과 면도날)을 교체한 후 On/Off 스위치 (13)를 최소 5초간 눌러서 카운터를 재설정합니다. 조작하는 동안 교체표시등이 깜박거리다 재설정이 완료되면 불이 꺼집니다. 수동설정은 언제나 원하실 때 하실 수 있습니다.

기타 부품들

부품은 구입한 곳이나 브라운 서비스 센터에서 구입하실 수 있습니다.

- 면도망과 면도날 : 51S
- Cleaning cartridge Clean&Renew: CCR

환경보호 주의사항

본 제품에는 충전용 배터리가 들어있습니다.
환경보호를 위하여 수명이 다한 후에도
일반쓰레기와 함께 버리지 마십시오.
브라운 서비스 센터나 지정된 폐전지 수거함을 통해
배출하십시오.

본 사용설명서는 사전예고 없이 변경될 수 있습니다.

전자 부품 명세는 전용 코드 세트에 표시된 사항을
참조하십시오.

품질 보증

- 본 제품은 **구입일로부터 1년간** 품질을 보증합니다.
- 보증기간 동안 제품 자체나 생산과정에서 비롯된 불량품은 상태에 따라 무상 수리 또는 교환해 드립니다.
- 상기 사항은 브라운이나 지정 대리점에 의해 공급된 모든 나라에 적용됩니다.
- 보증기간 내에라도 소비자의 과실로 인한 파손이나 정상적인 마모 (예: 면도날& 면도망 카세트) 또는 사용에 지장이 없는 경미한 결함 등은 무상 수리 또는 교환을 받으실 수 없습니다.
- 브라운 서비스 센터가 아닌 다른 곳에서 수리를 하였거나 브라운 정품이 아닌 부품을 사용하였을 경우에는 품질 보증 대상에서 제외됩니다.
  보증 기간 내에 서비스를 받으시려면 브라운 고객 서비스센터에서 구입 영수증을 확인 받으셔야 합니다.

본 제품은 소비자분쟁해결기준에 따라 보상 받을 수 있습니다.
A/S 문의: 1588 – 1588
가까운 대우 일렉 서비스 센터에서 A/S를
받으실 수 있습니다.

브라운제품:
전국 유명 백화점, 할인점, 양판점 및 전자상가에서
구입할 수 있습니다.
http : //www.braun.com
http : //www.braun.co.kr

품질보증서

본 제품은 철저한 품질관리와 검사를 거쳐서 제조·수입된 제품입니다.
이력 기재된 내용으로 품질을 보증합니다.

제 품 명		모 델 명	
구 입 일		보증기간	구입일로부터 1년
고객		판매점	

한국 피앤지 판매 (유)
서울시 강남구 테헤란로 203, 16층
소비자 상담실 전화 : 080-920-6000(수신자부담)

English

Our products are designed to meet the highest standards of quality, functionality and design. We hope you enjoy your new Braun Shaver.

Read these instructions completely, it contains safety information. Keep it for future reference.

Warning
Your shaving system is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. Only use the special cord set provided with your appliance.

Never shave with a damaged foil or cord.

The shaver head is suitable for cleaning under running tap water. Detach the shaver from the power supply before cleaning the shaver head in water.

This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, unless they are given supervision by a person responsible for their safety. In general, we recommend that you keep the appliance out of reach of children. Children should be supervised to ensure that they do not play with the appliance.

To prevent the cleaning fluid from leaking, ensure that the Clean&Renew station is placed on a flat surface. When a cleaning cartridge is installed, do not tip, move suddenly or transport the station in any way as cleaning fluid might spill out of the cartridge. Do not place the station inside a mirror cabinet, nor place it on a polished or lacquered surface.

The cleaning cartridge contains a highly flammable liquid so keep it away from sources of ignition. Do not expose to direct sunlight and cigarette smoking nor store it over a radiator.

Do not refill the cartridge and use only original Braun refill cartridges.

Description

Clean&Renew station
1 Level indicator
2 Lift button for cartridge exchange
3 Station-to-shaver contacts
4 Start button
5 Station power socket
6 Cleaning cartridge

Shaver
7 Shaver foil
8 Cutter block
9 Foil release buttons
10 Long hair trimmer
11 Comfort setting switch «sensitive»
12 Shaver-to-station contacts
13 On/off switch
14 Shaver display
15 Cleaning light (yellow)
16 Replacement light for shaving parts
17 Shaver power socket
18 Special cord set
19 Etui

A Before shaving

Prior to first use, you have to connect the shaver to an electrical outlet using the special cord set (18) or alternatively, proceed as follows:

Installing the Clean&Renew station
- Using the special cord set (18), connect the station power socket (5) to an electrical outlet.
- Press the lift button (2) to open the housing.
- Hold the cleaning cartridge (6) down on a flat, stable surface (e.g. table).
- Carefully remove the lid from the cartridge.
- Slide the cartridge into the base of the station as far as it will go.
- Slowly close the housing by pushing it down until it locks.

Charging the shaver in the Clean&Renew station
Insert the shaver head down into the cleaning station. (The contacts (12) on the back of the

shaver will align with the contacts (3) in the cleaning station).
If required, the Clean&Renew station will start charging the shaver now.

A full charge provides up to 45 minutes of cordless shaving time. This may vary according to your beard growth.

Recommended ambient temperature for charging is 5 °C to 35 °C.The battery may not charge properly or at all under extreme low or high temperatures. Recommended ambient temperature for shaving is 15 °C to 35 °C. Do not expose the shaver to temperatures higher than 50 °C for extended periods of time.

Shaver display

The shaver display (14) shows the charge status of the battery. During charging or when using the shaver, the respective battery segment will blink (green). When fully charged, all segments will light up for approximately one hour, provided the shaver sits in the C&R station.

The red low-charge light flashes when the battery is running low.
You should be able to finish your shave.

B Shaving

Press the on/off switch (13) to operate the shaver.

Comfort setting switch «sensitive»
Setting the shaver head according to your comfort needs.

The «sensitive» switch (11) provides three options for comfort setting:

① «+»:
The shaver head is in full swing, freely follows the contours of your skin to provide more comfort.

② middle position:
The shaver head is semi-fixed for more control.

③ «–»:
The shaver head is fixed for full control and precise handling in hard to reach areas.

Long hair trimmer
To trim sideburns, moustache or beard, slide the long hair trimmer (10) upwards.

Tips for the perfect dry shave
For best results, Braun recommends you follow 3 simple steps:
1. Always shave before washing your face.
2. At all times, hold the shaver at right angles (90°) to your skin.
3. Stretch your skin and shave against the direction of your beard growth.

Shaving with the cord
If the shaver has run out of power (discharged), you may also shave with the shaver connected to an electrical outlet via the special cord set.

Cleaning

For best shaving results, we recommend cleaning the shaver in the station after each shave (see «Automatic cleaning»).
All charging and cleaning needs are then automatically taken care of.

Cleaning indicator
Clean your shaver in the Clean&Renew station at the latest when the yellow cleaning light (15) shines constantly after shaving.
If this is not done, the cleaning light will go off after some time and the counter will be reset.

C Automatic cleaning

The Clean&Renew has been developed for cleaning, charging and storing your shaver. After each shave, return the shaver to the Clean&Renew station and proceed as follows:

- Insert the shaver head down into the cleaning station.
- Push down the start button (4). The cleaning process will start (approx. 5 minutes cleaning, 4 hours drying).
- Do not interrupt the cleaning process, as it leaves the shaver wet and not fit for use. If interruption is needed nonetheless, press the start button (4).
- When cleaning is finished, the yellow cleaning light will go off.
- A cleaning cartridge should be sufficient for about 30 cleaning cycles. When the level indicator (1) has reached the «⎵» mark, the remaining fluid in the cartridge is sufficient for about 5 more cycles. Then the cartridge should be replaced, when used daily approx. every 4 weeks.
- The hygienic cleaning cartridge contains alcohol, which once opened will naturally evaporate slowly into the surrounding air. Each cartridge, if not daily used, should be replaced after approximately 8 weeks.
- The cleaning cartridge also contains lubricates, which may leave residual marks on the shaver head after cleaning. However, these marks can be removed easily by wiping gently with a cloth or soft tissue paper.

Cleaning the housing
From time to time clean the housing of the shaver and the Clean&Renew station with a damp cloth, especially inside the cleaning chamber where the shaver rests.

Replacing the cleaning cartridge
After having pressed the lift button (2) to open the housing, wait for a few seconds before removing the used cartridge to avoid any dripping.
Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution.

D Manual cleaning

Rinsing the shaver head under running water is an alternative way to keep the shaver clean, especially when traveling:
- Switch the shaver on (cordless) and rinse the shaver head under hot running water. You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.
- Next, switch off the shaver, press the foil release buttons (9) to remove the shaver foil (7) and cutter block (8). Then leave the disassembled shaving parts to dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil onto the long hair trimmer (10) and shaver foil (7).

The following quick cleaning is another alternative cleaning method:
- Press the foil release buttons (9) to lift the shaver foil (do not remove the foil completely). Switch on the shaver for approx. 5–10 seconds so that the shaved stubbles can fall out.
- Switch off the shaver. Remove the shaver foil and tap it out on a flat surface. Using a brush, clean the inner area of the shaver head. However, do not clean the shaver foil nor the cutter block with the brush as this will damage them.

Keeping your shaver in top shape

Replacing the foil and cutter block / reset
To maintain 100% shaving performance, replace the shaver foil (7) and cutter block (8), when the replacement symbol (16) lights up (after about 18 months) or when cassette is worn.

The replacement symbol will remind you during the next 7 shaves to replace the shaver foil and cutter block. Then the shaver will automatically reset the display.

After you have replaced the shaving parts (foil and cutter block), press the on/off switch (13)

for at least 5 seconds to reset the counter. While doing so, the replacement light blinks and goes off when the reset is complete. The manual reset can be done at any time.

Accessories

Available at your dealer or Braun Service Centres:
- Shaver foil and cutter block: 51S
- Cleaning cartridge Clean&Renew: CCR

Environmental notice

This product contains rechargeable batteries. In the interest of protecting the environment, please do not dispose of the product in the household waste at the end of its useful life. Disposal can take place at a Braun Service Centre or at appropriate collection points provided in your country.

The cleaning cartridge can be disposed with regular household waste.

Subject to change without notice.

For electric specifications, see printing on the special cord set.

96342830/V-13
Korea/UK