





Lay out base ensuring Velcro flap is in front right corner. Assemble floor poles and 3-way corners as shown.

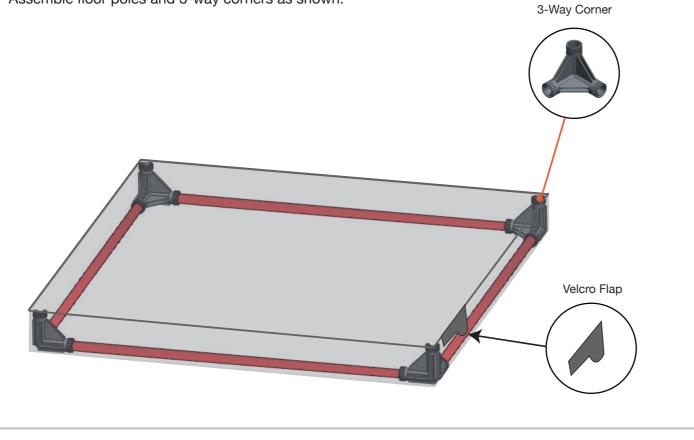

Step 3

Insert ceiling poles into 3-way corners. Fit equipment hanger ends to poles. Position equipment hangers as required.

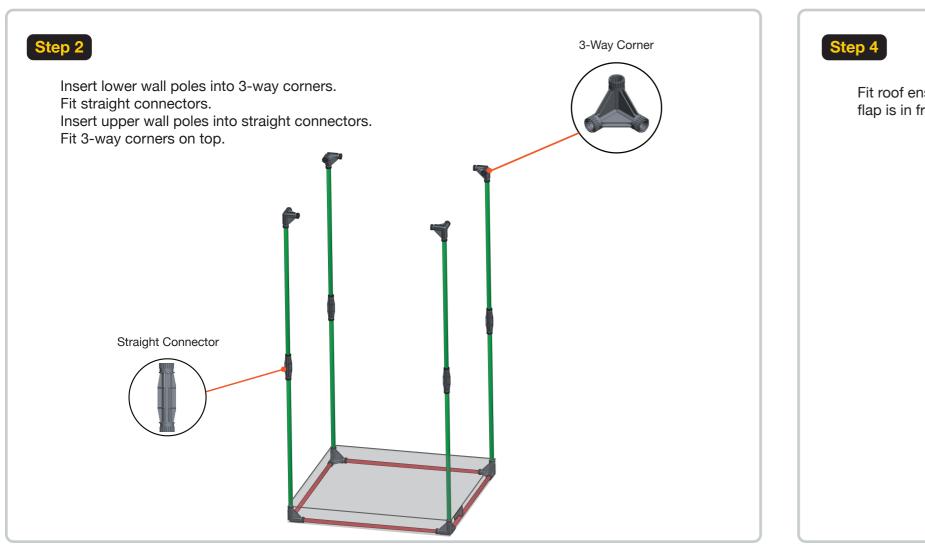

Fit roof ensuring Velcro flap is in front right corner.

