



Installation and Operation Instructions

MATRIX® Compatible OBDII Interface
Chevrolet 2021+ Tahoe, 2021+ Silverado 1500,
2025 Silverado 2500HD (Gas)

IMPORTANT! Read all instructions before installing and using. Installer: This manual must be delivered to the end user.



WARNING!

Failure to install or use this product according to manufacturer's recommendations may result in property damage, serious injury, and/or death to those you are seeking to protect!

 **Do not install and/or operate this safety product unless you have read and understood the safety information contained in this manual.**

1. Proper installation combined with operator training in the use, care, and maintenance of emergency warning devices are essential to ensure the safety of emergency personnel and the public.
2. Emergency warning devices often require high electrical voltages and/or currents. Exercise caution when working with live electrical connections.
3. This product must be properly grounded. Inadequate grounding and/or shorting of electrical connections can cause high current arcing, which can cause personal injury and/or severe vehicle damage, including fire.
4. Proper placement and installation is vital to the performance of this warning device. Install this product so that output performance of the system is maximized and the controls are placed within convenient reach of the operator so that they can operate the system without losing eye contact with the roadway.
5. Do not install this product or route any wires in the deployment area of an air bag. Equipment mounted or located in an air bag deployment area may reduce the effectiveness of the air bag or become a projectile that could cause serious personal injury or death. Refer to the vehicle owner's manual for the air bag deployment area. It is the responsibility of the user/operator to determine a suitable mounting location ensuring the safety of all passengers inside the vehicle particularly avoiding areas of potential head impact.
6. It is the responsibility of the vehicle operator to ensure daily that all features of this product work correctly. In use, the vehicle operator should ensure the projection of the warning signal is not blocked by vehicle components (i.e., open trunks or compartment doors), people, vehicles or other obstructions.
7. The use of this or any other warning device does not ensure all drivers can or will observe or react to an emergency warning signal. Never take the right-of-way for granted. It is the vehicle operator's responsibility to be sure they can proceed safely before entering an intersection, drive against traffic, respond at a high rate of speed, or walk on or around traffic lanes.
8. This equipment is intended for use by authorized personnel only. The user is responsible for understanding and obeying all laws regarding emergency warning devices. Therefore, the user should check all applicable city, state, and federal laws and regulations. The manufacturer assumes no liability for any loss resulting from the use of this warning device.

2021+ Tahoe

Unpacking and Pre-Installation:


Carefully remove the product from its packaging. Examine the unit for transit damage and locate all parts as detailed in the Kit Contents table below. If damage is found or parts are missing, contact the transit company or Code 3 customer support. Do not use damaged or broken parts.

This device is a Matrix® compatible interface between the OEM CAN network and the Code 3 Matrix® system. It allows the user to configure system operations that respond to OEM data.

Kit Contents Table
OBDII Device – Matrix® Compatible
OBDII Harness

Installation and Mounting:

Before proceeding with installation, plan all wiring and cable routing. Disconnect vehicle battery. Reconnect battery after installation is complete.

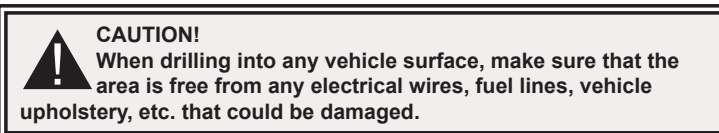

Step 1. Remove the two push in rivets indicated in Figure 1 in order to remove the felt foot well covering.

Step 2. Using a 7mm wrench, remove the bolt holding the black plastic heating vent in place.

Step 3. Remove the vent shown in Figure 2.

Step 4. Locate the serial gateway module shown in Figure 3.

Step 5. Remove the black connector shown in the far left position in Figure 3.

Step 6. Locate the wires going to pins 5 and 6 (Blue and White) and trace them back along the cable a few inches, shown in Figure 5. You may need to cut back the mesh jacket to get far enough back from the connector to work.

Step 7. Splice the **Code 3** supplied harness to the blue and white wires following the chart below shown in Figure 4. **Note: It is recommended that the splice be soldered after functionality is checked.**

Tips: The Tahoe hazards are temporarily activated when the turn signal is turned off. By default, Matrix activates Arrowstik flash when the hazards are triggered. Remove Arrowstik flash from the Matrix configuration if you do not want this feature used with the turn signals.

The trigger wire for the OEM headlight flasher activates the high beam signal on the dashboard. It also sends a signal to Matrix the highbeams are on. Deactivate highbeam default settings in Matrix if you don't want the white lighting in Matrix to turn on.

Code 3 Harness	Tahoe 2021 Harness
Green	Blue
White	White

Step 8. Repeat for the other wire.

Step 9. Tuck and secure any excess cabling under the dash, up and away from vehicle controls (e.g. pedals). Ensure that the cabling does not interfere with proper operation of the vehicle. The other connectors will be routed back to the OBDII Device and another Matrix compatible device.

Step 10. Reset the shroud back into its location on the connector. Place the connector back into the correct location on the Serial Data Gateway Module. Lock the unit in place using the red tab. Ensure positive lock.

Step 11. Replace the black plastic heating vent and secure it with the 7mm bolt. Replace the felt covering and secure it with the push in rivets. Ensure that the felt does not interfere with proper operation of the vehicle.

Note: For alternate mounting location, see Silverado 1500 Mounting install instructions on page 4.

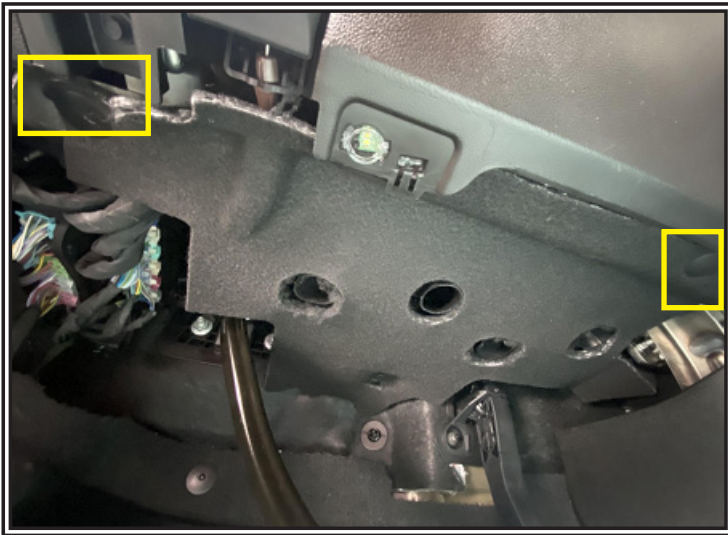


Figure 1

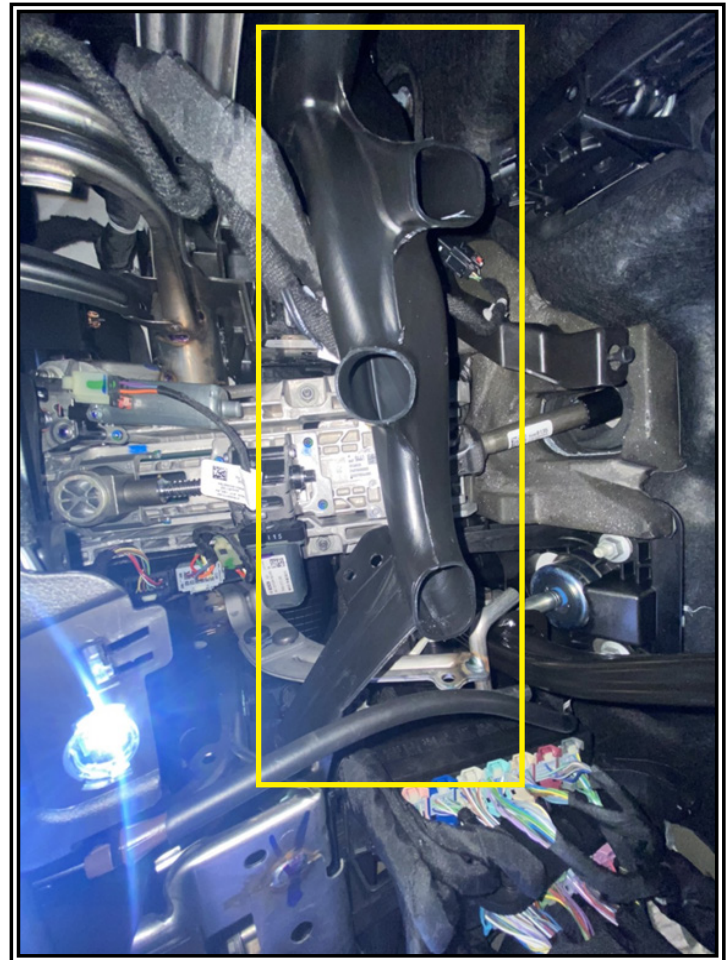


Figure 2

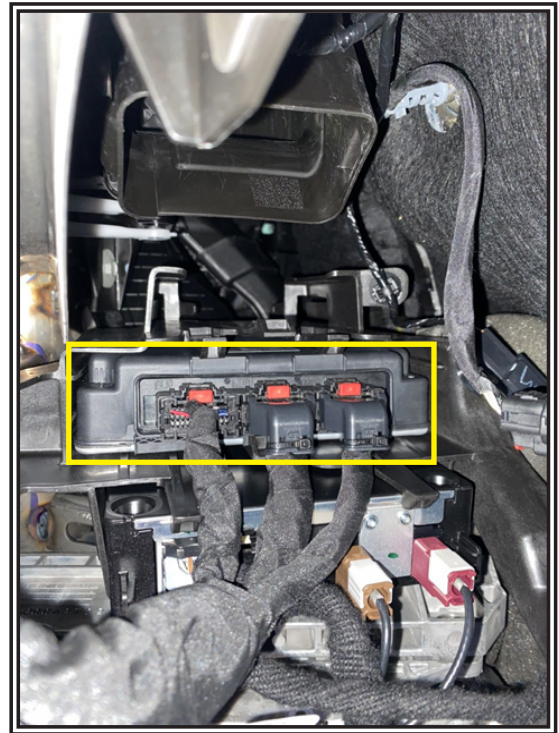


Figure 3

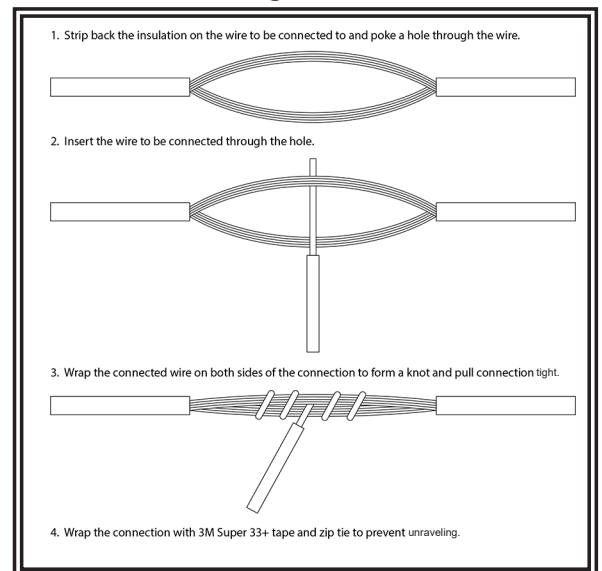


Figure 4

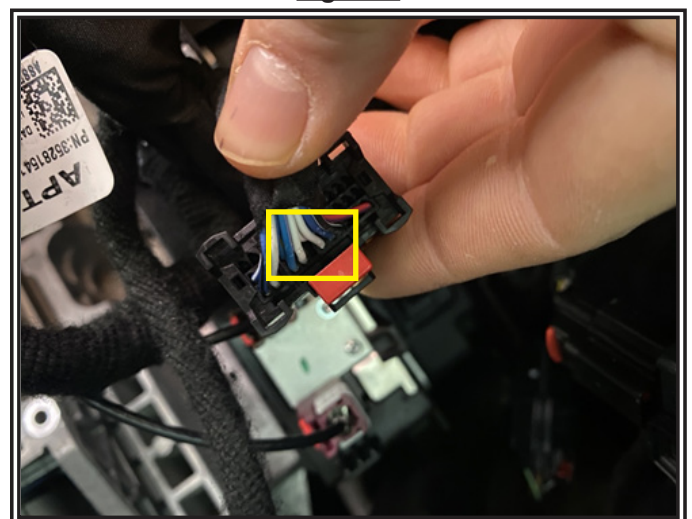


Figure 5

2021+ Silverado 1500

Installation and Mounting:

Step 1. Under the passenger seat, locate the passenger constraint module.

Step 2. Using provided Posi-taps connect green wire from OBDII module into one of the blue wires and connect the white wire from OBDII module to one of the white wires. See FIGURE 6. **Note:** Selection of the paired blue and white wires does not effect operation of the OBDII module.

Note: The following functions are not included in the Silverado 1500:

- Rear Hatch
- Air Condition
- Marker Lights

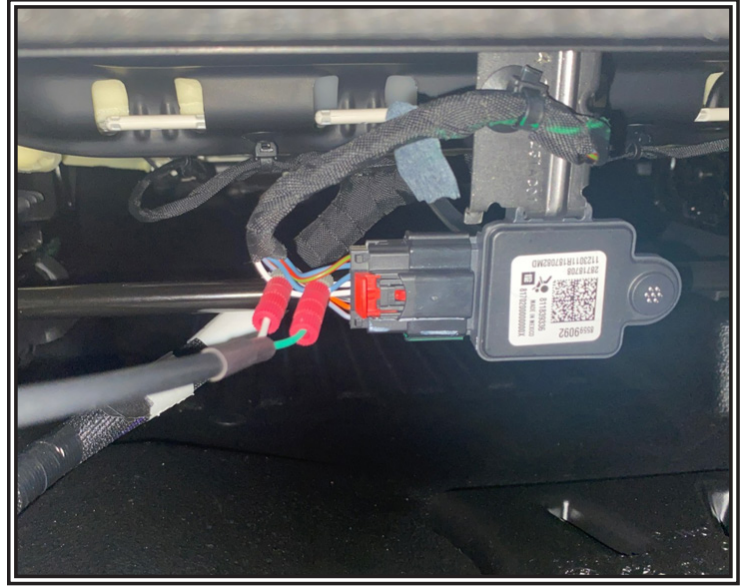


Figure 6

Wiring Instructions:

Notes:

1. Larger wires and tight connections will provide longer service life for components. For high current wires it is highly recommended that terminal blocks or soldered connections be used with shrink tubing to protect the connections. Do not use insulation displacement connectors (e.g., 3M Scotchlock type connectors).
2. Route wiring using grommets and sealant when passing through compartment walls. Minimize the number of splices to reduce voltage drop. All wiring should conform to the minimum wire size and other recommendations of the manufacturer and be protected from moving parts and hot surfaces. Looms, grommets, cable ties, and similar installation hardware should be used to anchor and protect all wiring.
3. Fuses or circuit breakers should be located as close to the power takeoff points as possible and properly sized to protect the wiring and devices.
4. Particular attention should be paid to the location and method of making electrical connections and splices to protect these points from corrosion and loss of conductivity.
5. Ground termination should only be made to substantial chassis components, preferably directly to the vehicle battery.
6. Circuit breakers are very sensitive to high temperatures and will "false trip" when mounted in hot environments or operated close to their capacity.

Caution: Disconnect the battery before wiring up the product to prevent accidental shorting, arcing, and/or electrical shock.

Step 1. Route the remaining, unused OBDII Harness connectors to the location where the OBDII Device will be mounted. The OBDII Device must be mounted near another Matrix® compatible device with a 4 Pin AUX connector. Confirm that the cable length is sufficient to reach both required locations. See FIGURE 7 for further details.

Step 2. Connect the OBDII Device to the 14 Pin connector on the OBDII Harness. Secure the device away from moving parts. See FIGURE 8.

Step 3. Connect the 4 Pin connector of the OBDII Harness to a Matrix® compatible device, which may be the central node of the system (e.g. Serial Interface Box or Z3 Serial Siren).

The OBDII interface is designed to interact with other Matrix® compatible products out of the box using default settings. However, device operation can be further configured using the Matrix® Configurator.

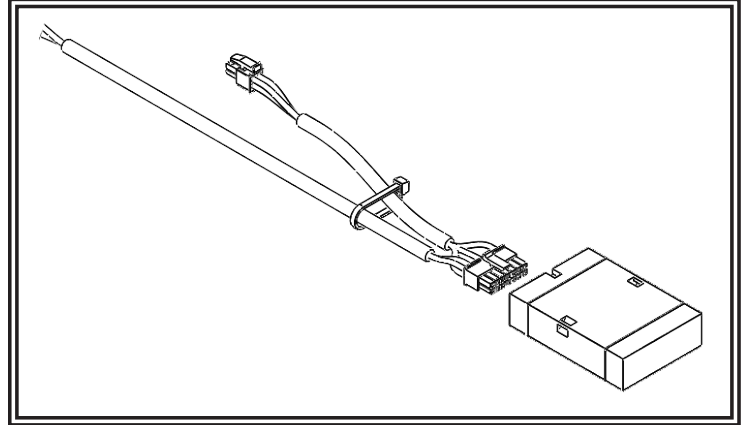


Figure 7

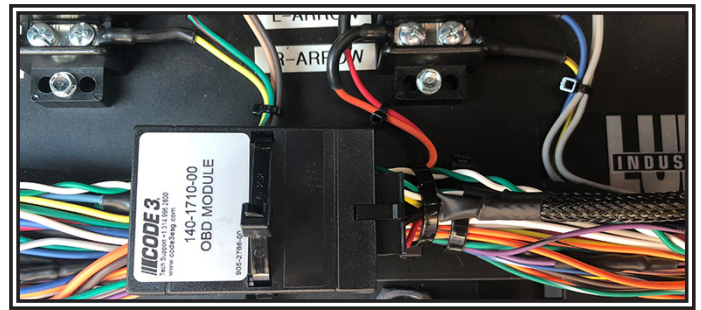


Figure 8

OBD Signal - Default Functions	
Input	Function
Driver Side Door Open	Driver Side Cut
Passenger Side Door Open	Passenger Side Cut
Rear Hatch Door Open	Rear Cut
High Beams = ON	N/A
Left Turn Signal = ON	N/A
Right Turn Signal = ON	N/A
Brake Pedal Engaged	Rear Steady Red
Key Position = ON	N/A
Transmission Position = PARK	Park Kill
Transmission Position = REVERSE	N/A

Troubleshooting:

All products are thoroughly tested prior to shipment. However, should you encounter a problem during installation or during the life of the product, follow the guide below for troubleshooting and repair information. If the problem cannot be rectified using the solutions given below, additional information may be obtained from the manufacturer - contact details are at the end of this document.

Problem	Possible Cause(s)	Comments / Response
OBDII Device not functional	Improper connection between the OBDII Device and the Matrix® network	Verify that all harness connections to and from the OBDII Device are properly seated and secure
	Matrix® network is inactive (sleep mode)	An ignition input is required to bring the Matrix network out of a sleep state, if the timeout period has already expired. Refer to the user manual for your particular Matrix central node (e.g. SIB or Z3X Siren, etc) for more information on how to wakeup the network with an ignition input
Check engine light has come on	BLACK connector is not seated properly	The check engine light is likely in response to a loss of communications on the main CAN bus. Seating the cable/clearing short between should resolve the issue. Reset the vehicle/clear the check engine light and re-start the vehicle. Ensure that the check engine light does not come back on.
	Spliced wires are making contact	

Notes

Warranty:

Manufacturer Limited Warranty Policy:

Manufacturer warrants that on the date of purchase this product will conform to Manufacturer's specifications for this product (which are available from the Manufacturer upon request). This Limited Warranty extends for Sixty (60) months from the date of purchase.

DAMAGE TO PARTS OR PRODUCTS RESULTING FROM TAMPERING, ACCIDENT, ABUSE, MISUSE, NEGLIGENCE, UNAPPROVED MODIFICATIONS, FIRE OR OTHER HAZARD; IMPROPER INSTALLATION OR OPERATION; OR NOT BEING MAINTAINED IN ACCORDANCE WITH THE MAINTENANCE PROCEDURES SET FORTH IN MANUFACTURER'S INSTALLATION AND OPERATING INSTRUCTIONS VOIDS THIS LIMITED WARRANTY.

Exclusion of Other Warranties:

MANUFACTURER MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED. THE IMPLIED WARRANTIES FOR MERCHANTABILITY, QUALITY OR FITNESS FOR A PARTICULAR PURPOSE, OR ARISING FROM A COURSE OF DEALING, USAGE OR TRADE PRACTICE ARE HEREBY EXCLUDED AND SHALL NOT APPLY TO THE PRODUCT AND ARE HEREBY DISCLAIMED, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ORAL STATEMENTS OR REPRESENTATIONS ABOUT THE PRODUCT DO NOT CONSTITUTE WARRANTIES.

Remedies and Limitation of Liability:

MANUFACTURER'S SOLE LIABILITY AND BUYER'S EXCLUSIVE REMEDY IN CONTRACT, TORT (INCLUDING NEGLIGENCE), OR UNDER ANY OTHER THEORY AGAINST MANUFACTURER REGARDING THE PRODUCT AND ITS USE SHALL BE, AT MANUFACTURER'S DISCRETION, THE REPLACEMENT OR REPAIR OF THE PRODUCT, OR THE REFUND OF THE PURCHASE PRICE PAID BY BUYER FOR NON-CONFORMING PRODUCT. IN NO EVENT SHALL MANUFACTURER'S LIABILITY ARISING OUT OF THIS LIMITED WARRANTY OR ANY OTHER CLAIM RELATED TO THE MANUFACTURER'S PRODUCTS EXCEED THE AMOUNT PAID FOR THE PRODUCT BY BUYER AT THE TIME OF THE ORIGINAL PURCHASE. IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR LOST PROFITS, THE COST OF SUBSTITUTE EQUIPMENT OR LABOR, PROPERTY DAMAGE, OR OTHER SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES BASED UPON ANY CLAIM FOR BREACH OF CONTRACT, IMPROPER INSTALLATION, NEGLIGENCE, OR OTHER CLAIM, EVEN IF MANUFACTURER OR A MANUFACTURER'S REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. MANUFACTURER SHALL HAVE NO FURTHER OBLIGATION OR LIABILITY WITH RESPECT TO THE PRODUCT OR ITS SALE, OPERATION AND USE, AND MANUFACTURER NEITHER ASSUMES NOR AUTHORIZES THE ASSUMPTION OF ANY OTHER OBLIGATION OR LIABILITY IN CONNECTION WITH SUCH PRODUCT.

This Limited Warranty defines specific legal rights. You may have other legal rights which vary from jurisdiction to jurisdiction. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages.

Product Returns:

If a product must be returned for repair or replacement*, please contact our factory to obtain a Return Goods Authorization Number (RGA number) before you ship the product to Code 3®, Inc. Write the RGA number clearly on the package near the mailing label. Be sure you use sufficient packing materials to avoid damage to the product being returned while in transit.

*Code 3®, Inc. reserves the right to repair or replace at its discretion. Code 3®, Inc. assumes no responsibility or liability for expenses incurred for the removal and /or reinstallation of products requiring service and/or repair; nor for the packaging, handling, and shipping; nor for the handling of products returned to sender after the service has been rendered.



10986 North Warson Road
St. Louis, MO 63114 USA
(314) 996-2800
c3_tech_support@code3esg.com
CODE3ESG.com

439 Boundary Road
Truganina Victoria, Australia
+61 (0)3 8336 0680
esgapsales@eccogroup.com
CODE3ESG.com/au/en

Unit 1, Green Park, Coal Road
Seacroft, Leeds, England LS14 1FB
+44 (0)113 2375340
esguk-code3@eccogroup.com
CODE3ESG.co.uk

An ECCO SAFETY GROUP™ Brand
ECCOSAFETYGROUP.com