

CODE 3® Installation and Operation Instructions **COMMAND STIK MAGNETIC MOUNT**

**SHOWN IN THE NEW 2016
FORD PI UTILITY**



INSTALLATION PROCEDURE:

1. Open rear hatch and disengage ceiling from trim gasket along rear edge of vehicle. (SEE FIG. 1)



FIG. 1

2. Locate two magnetic headliner fasteners at both ends of rear opening. (SEE FIG. 2 & 3)



FIG. 2

**Driver
Side**

FIG. 3

**Passenger
Side**



3. Command stik mounting magnets will be located at the outside edges of the existing ceiling mounts and plastic holders.

IMPORTANT:

Read all instructions and warnings before installing and using.

INSTALLER:

This manual must be delivered to the end user of this equipment.

4. Mark headliner with two dots - located 24.5 Inches apart and centered on the headliner across the rear area of the hatch opening.
(Marks should be approx. 2 Inches back from the rear edge of the headliner.)
5. Drill (2) .250 Dia. Holes through plastic headliner only - (not into metal ceiling material.)
6. Insert #10 1 inch machine screw through back side of magnet housing
7. Insert screw through back side of hole in headliner so the threads are pointing down into the vehicle through the holes just drilled.
8. Place command stik "L" bracket onto machine screw threaded shaft.
(The spacing should be correct for using the center square hole in the bracket on both driver and passenger sides of the installation.)

(HEADLINER NOT SHOWN)




Driver Side




Passenger Side

NOTE: (THE HORIZONTAL LEG OF THE L BRACKET SHOULD BE FACING THE CENTERLINE OF THE VEHICLE.)

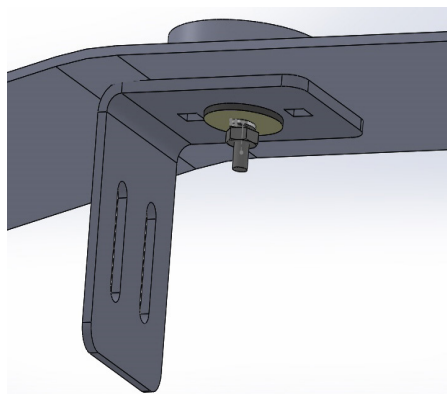

HEADLINER

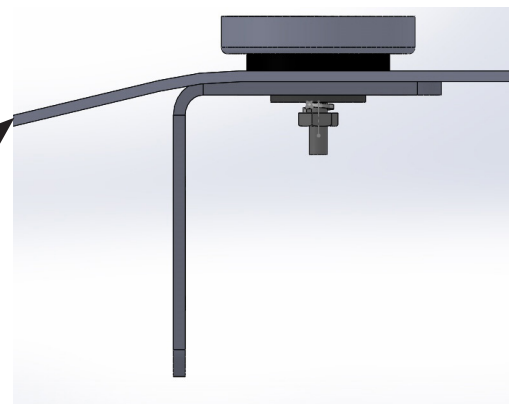

VIEWS FROM REAR OF VEHICLE - ON DRIVER SIDE.

9. Place fender washer, split locking washer and nut onto machine screw.

10. Using a stubby phillips screwdriver or wrench with phillips bit, tighten the #10 screw until I bracket is secure on headliner on both driver and passenger sides of the installation.

11. Re-seat the headliner up to the ceiling, making sure the two product magnets and the two headliner magnets seat against the ceiling metal frame and reseating the rear trim gasket around the trailing edge of the headliner material.

12. Place command stik product up between bracket slots and install (2) star face washers and (2) black phillips screws into each end of the command stik - leaving them loose for leveling.

13. Place level onto bottom edge of command stik and level the product on the vehicle, side-to-side and front-to-rear. Tighten screws when level.

PARTS LIST:

NO:	PART NO:	DESCRIPTION:	QTY:
1.	T01587	magnet	2
2.	T01642	foam pad	2
3.	T01109	split washer	2
4.	T00142	#10 X1 fender washer	2
5.	T05221	10-24 X1 phillips machine screw	2
6.	T06145	10-24 hex head nut	2

WARRANTY

This product was tested and found to be operational at the time of manufacture. Provided this product is installed and operated in accordance with the manufacturer's recommendations, CODE3, Inc. guarantees this product for a period of 5 years from the date of purchase or delivery, whichever is later (does not apply to lamps). Units demonstrated to be defective within the warranty period will be repaired or replaced at the factory service center at no cost.

Use of a lamp or other electrical load of a wattage higher than installed or recommended by the factory, or use of inappropriate or inadequate wiring or circuit protection causes this warranty to become void. Failure or destruction of the product resulting from abuse or unusual use and/or accidents is not covered by this warranty. Use of non-CODE 3 components and assemblies may cause damage to the system and/or personal injury, and voids all warranties.

CODE 3, Inc. shall in no way be liable for other damages including consequential, indirect or special damages whether loss is due to negligence or breach of warranty.

CODE 3, INC. MAKES NO OTHER EXPRESS OR IMPLIED WARRANTY INCLUDING, WITHOUT LIMITATION, WARRANTIES OF FITNESS OR MERCHANTABILITY, WITH RESPECT TO THIS PRODUCT.

PRODUCT RETURNS

In order to provide you with faster service, if you are going to return a product for repair or replacement*, please contact our factory to obtain a Return Goods Authorization Number (RGA number) before you ship the product to Code 3. Write the RGA number clearly on the package near the mailing label. Be sure you use sufficient packing materials to avoid damage to the product being returned while in transit.

*Code 3, Inc. reserves the right to repair or replace product at its discretion and assumes no responsibility or liability for expenses incurred for the removal and/or reinstallation of products requiring service and/or repair.

NEED HELP? Call our Technical Assistance HOTLINE - (314) 996-2800



10986 North Warson Road
St. Louis, MO 63114
Customer Service
(314) 426-2700
cs-c3@code3esg.com
www.code3esg.com

A Division of ESG | www.eccogroup.com