


Tech Bulletin : Basic Installation method for 2" Shiplapped Amorim Cork Insulation

- directly to WRB, over sheathing & studs - or - directly to cinder block
- nail sealing tape can be used to keep WRB leak proof

Front

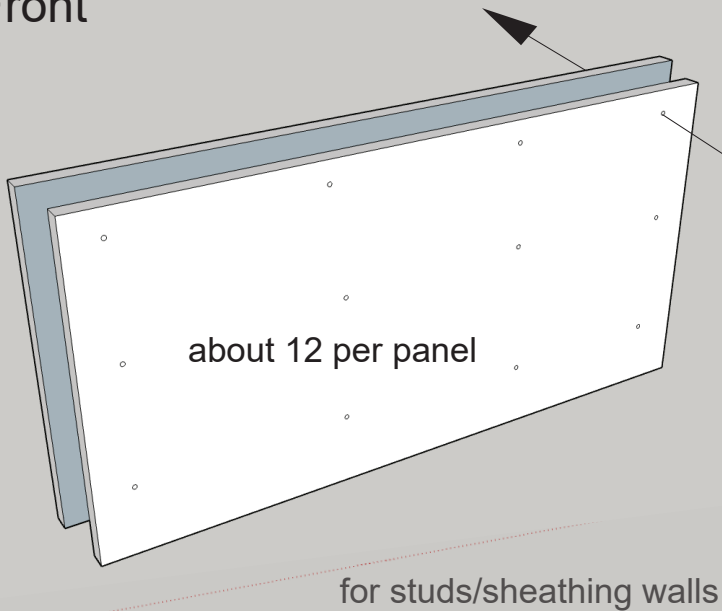


USE : Trim Head exterior screws -
- if you do not want to see hardware. GRK brand, for instance are great.

these can be screwed straight through the face of the cork into the sheathing and studs.

bury the head of the trim head screw 1/2" into the surface of the panel if you do not want it seen.

not every screw will hit a stud - but make sure some of them do on every panel.

Back

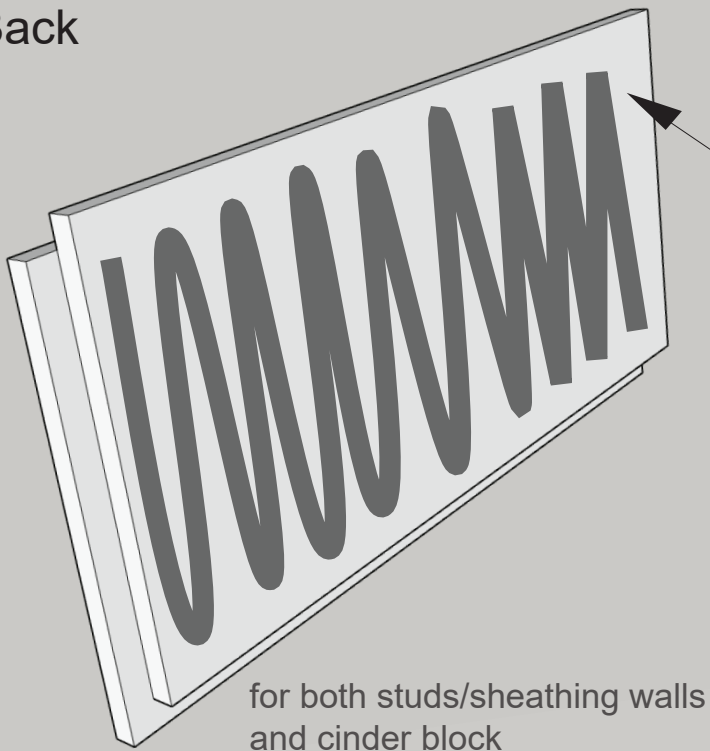

USE : Loctite brand PL Premium construction adhesive

apply to the back face in a loose squiggle pattern up & down.

leave 2 or 3 inches of space between each vertical of your 'squiggle' -
- so there will be ample surface area to evaporate water through the face of the panel.

Use a J Roller to press somewhat firmly in place - no need to dent the material doing so however.