




R1

Glass Roof Sunshade Guide

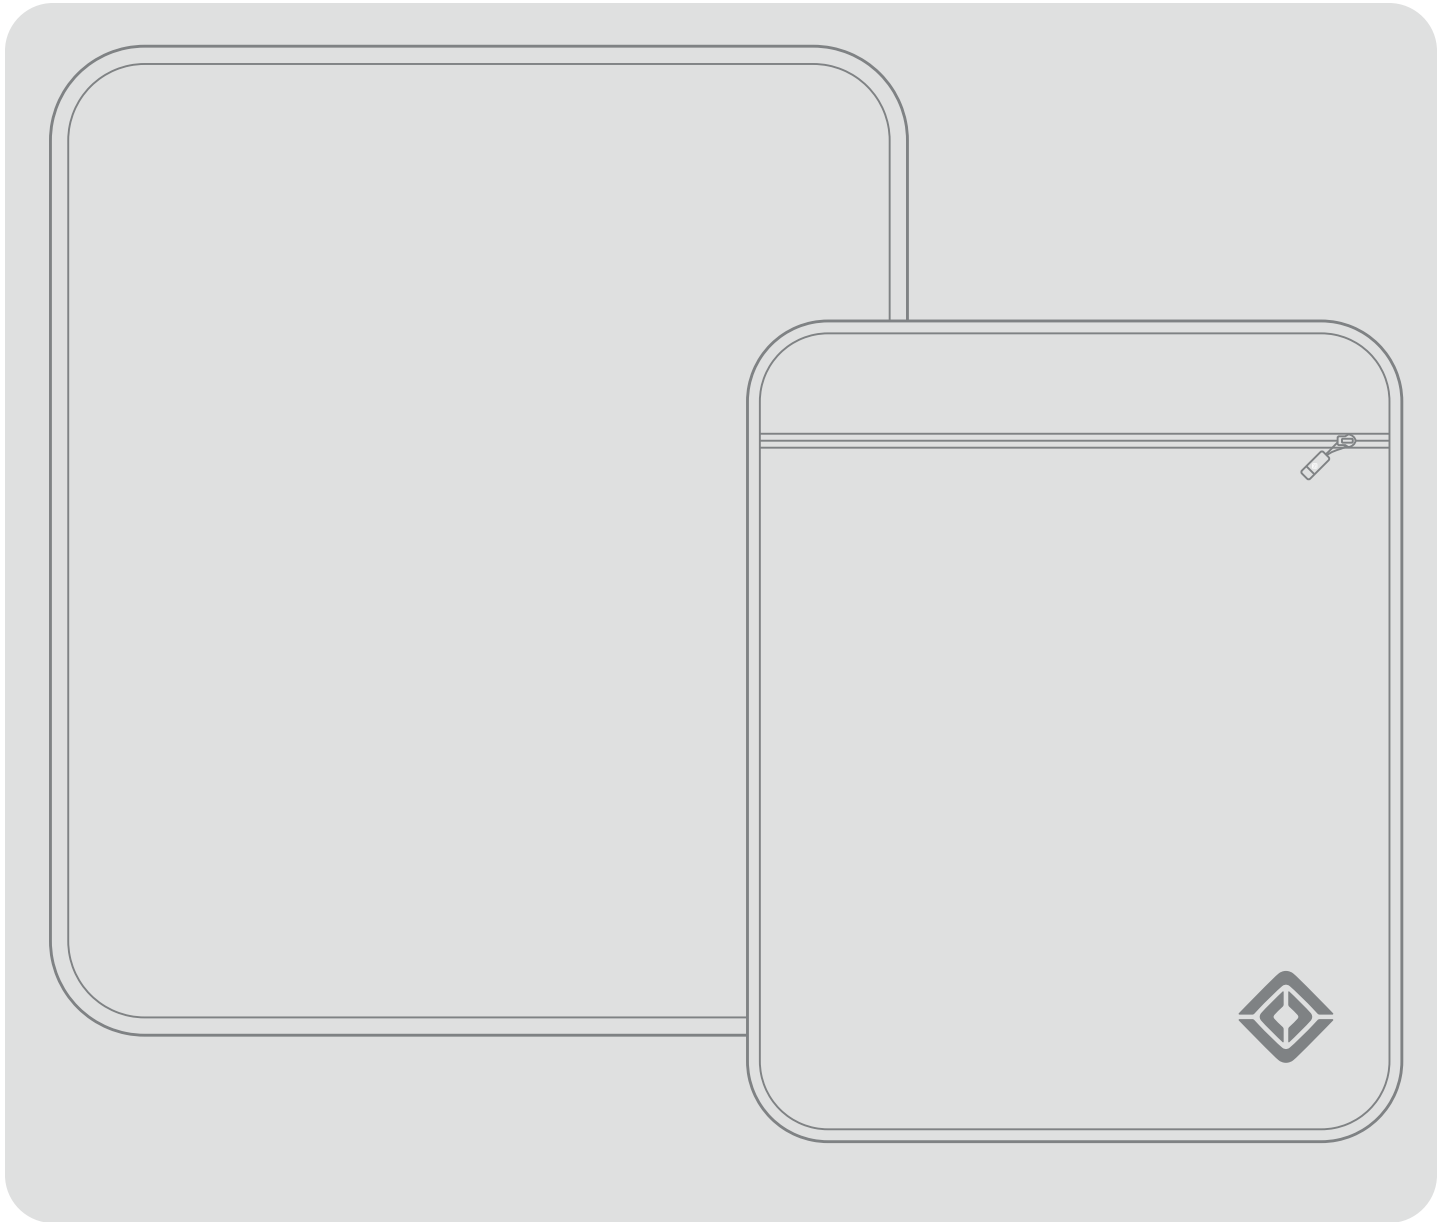

RIVIAN

© 2026 Rivian Automotive, LLC. All rights reserved.

All information in this document and all Rivian software is subject to copyright and other intellectual property rights of Rivian Automotive, LLC, its affiliates, or its licensors. This material may not be modified, reproduced, or copied, in whole or in part, without the prior written permission of Rivian Automotive, LLC, its affiliates, or its licensors. Unless indicated otherwise, all trademarks are owned and registered by Rivian Automotive, LLC, its affiliates, or its licensors in the United States and/or other countries. Please visit <https://www.rivian.com/legal/brand> for Rivian's trademarks and service marks.

The images provided in this document are for illustrative purposes only. Depending on the product details and market region, the information in this document may appear slightly different from your product.

Contents

Symbols Used in This Guide	4
Safety Information	5
Parts and Tool	6
Front Glass Roof Sunshade	7
Rear Glass Roof Sunshade (R1S Only)	7
Install the Glass Roof Sunshade	8
Stow the Glass Roof Sunshade	12
Store the Glass Roof Sunshade	14
Clean the Glass Roof Sunshade	14
Glass Roof Sunshade Specifications	14
Adventure Gear Limited Warranty	14
Contact Rivian	15

Symbols Used in This Guide

The following are the meanings of symbols used in this guide:



DANGER

Risk of major injury such as

- fire
- chemical or poison
- crushing
- maiming
- death



WARNING

Risk of minor injury

NOTE

Useful information

Safety Information

Carefully read and follow all instructions prior to each use.

Store these installation instructions in the vehicle for future reference.

The glass roof sunshade is intended to be used exclusively with the Rivian vehicle for which it is designed.



DANGER

- Incorrect or improper installation may result in the sunshade becoming dislodged during travel. This may distract the driver, reduce visibility, or result in a crash.
- Install or remove the sunshade only when the vehicle is in **P** (Park).
- Inspect the sunshade before installation and each use. Don't use the sunshade if it is worn, damaged, bent, loose, or degraded in shape or fit.
- Ensure the sunshade is secured in place before you drive the vehicle.




WARNING

- Keep children and pets out of the vehicle during installation and removal of the sunshade.
- The frame of the sunshade is under tension. Use caution to keep the sunshade from causing injury or damage as you unfold it.

Parts and Tool

The glass roof sunshade includes the following:

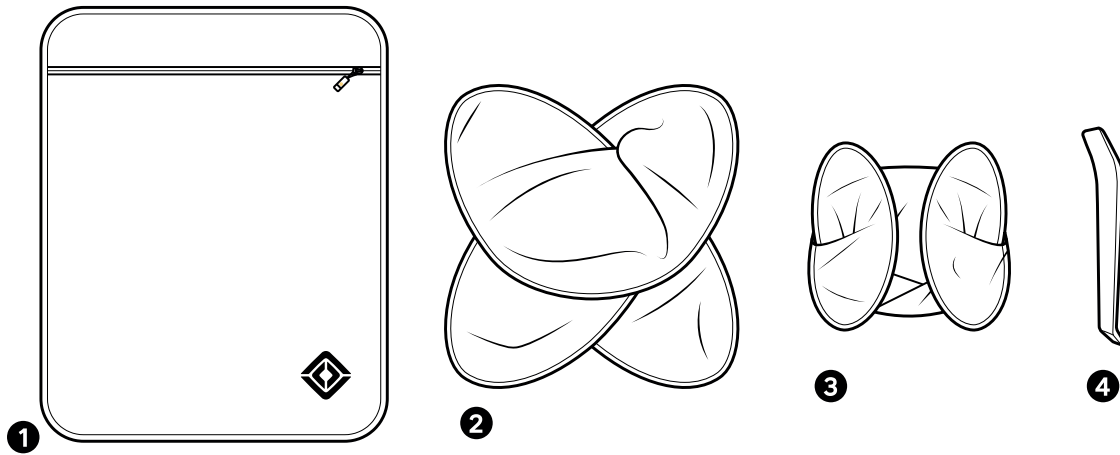


Number	Description
1	Bag
2	Front glass roof sunshade, folded
3	Rear glass roof sunshade, folded (R1S only)
4	Pry tool

The bag includes the following:

- Folded sunshade(s) for the R1S or R1T
- Pry tool




Front Glass Roof Sunshade

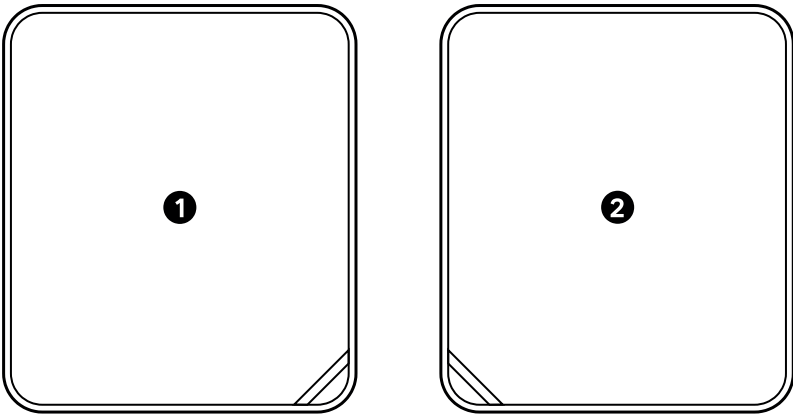

This shows the unfolded R1S sunshade; the R1T sunshade differs in dimensions.

Number	Side	Description
1	Interior	A pull strap is on one rear corner.
2	Exterior	A pull strap is on one rear corner.

Rear Glass Roof Sunshade (R1S Only)

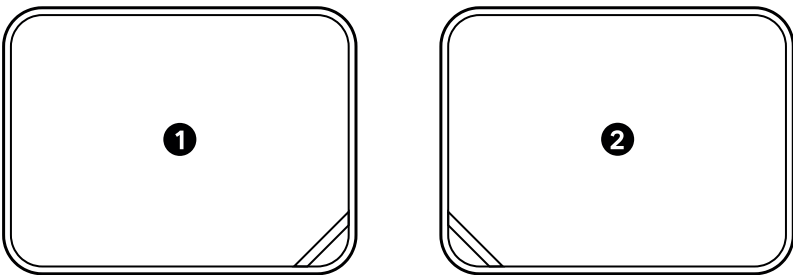

Number	Side	Description
1	Interior	A pull strap is on one rear corner.
2	Exterior	A pull strap is on one rear corner.

Install the Glass Roof Sunshade

The sunshade is designed for seasonal or semi-permanent use.

These instructions show the front sunshade for the R1S but also apply to the sunshade for the R1T.



WARNING


Keep children and pets out of the vehicle during installation.

1. Take the bag holding the sunshade and pry tool to the vehicle.
2. Lower the sun visors.
3. Unzip the bag and remove the sunshade and pry tool.
4. Hold the sunshade at arm's length, and unfold it.




WARNING

The frame of the sunshade is under tension. Use caution to keep the sunshade from causing injury or damage as you unfold it.

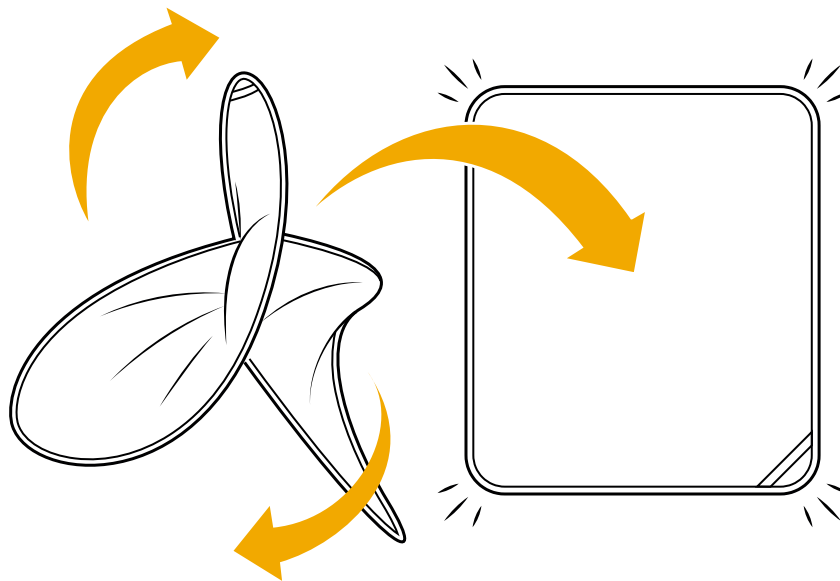



5. Position the sunshade so the pull strap is near a rear corner of the roof glass.

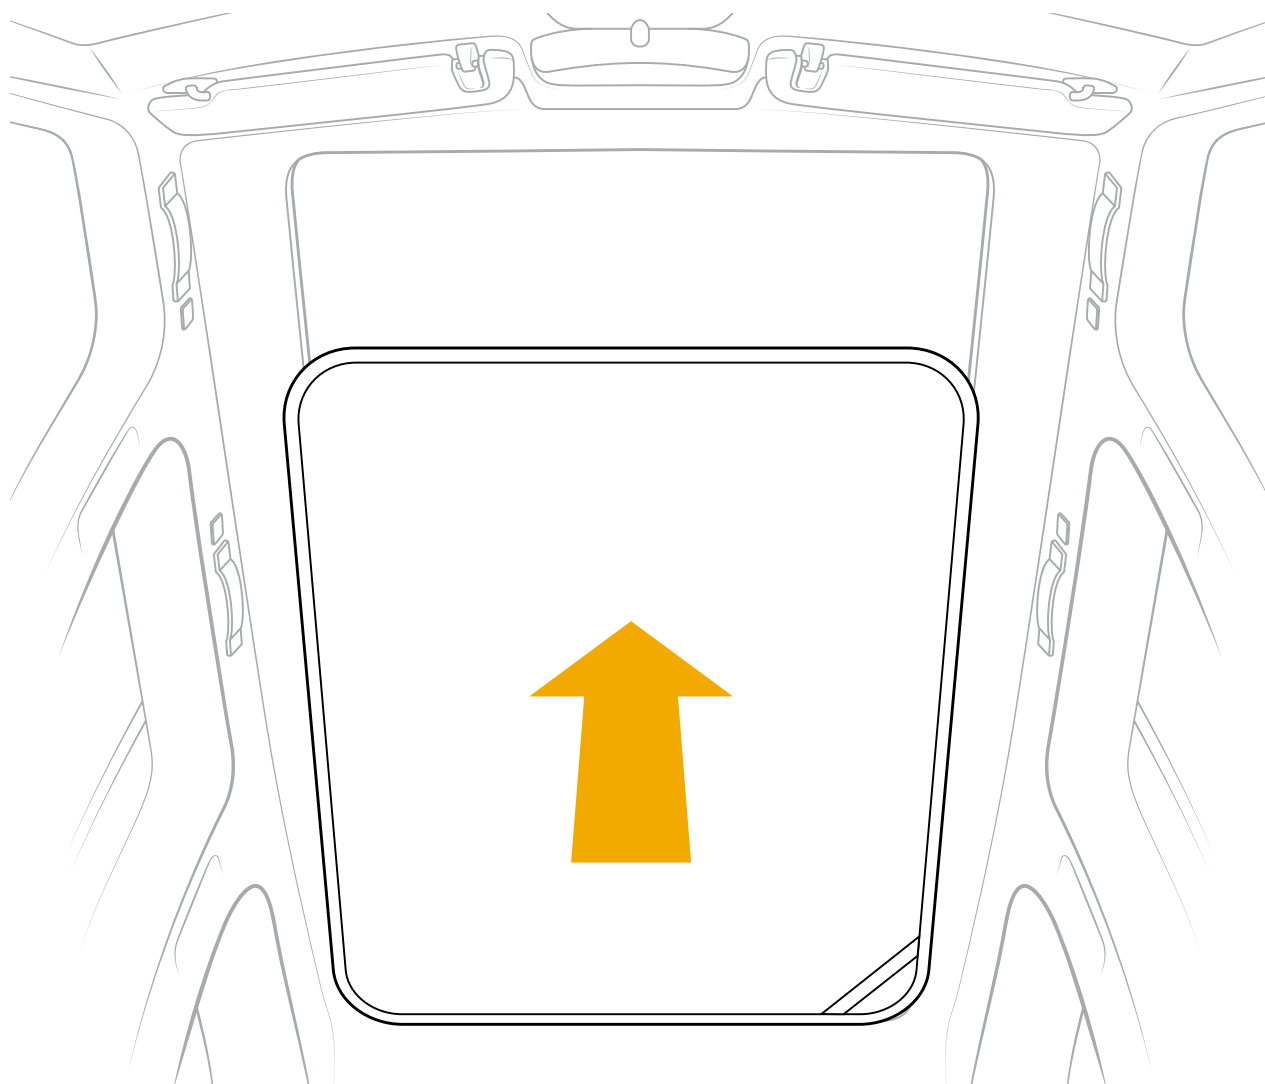

6. Position the pry tool at the midpoint of the roof glass on one side.




7. Use the pry tool to gently move the headliner down and away from the roof glass. While you keep the gap open, insert the edge of the sunshade into the gap.

NOTE

Use the pry tool as needed to push the sunshade into the gap between the headliner and roof glass.

**WARNING**

Pinch hazard: If you insert your fingers into the gap, ensure the headliner doesn't close the gap; otherwise this may cause an injury.

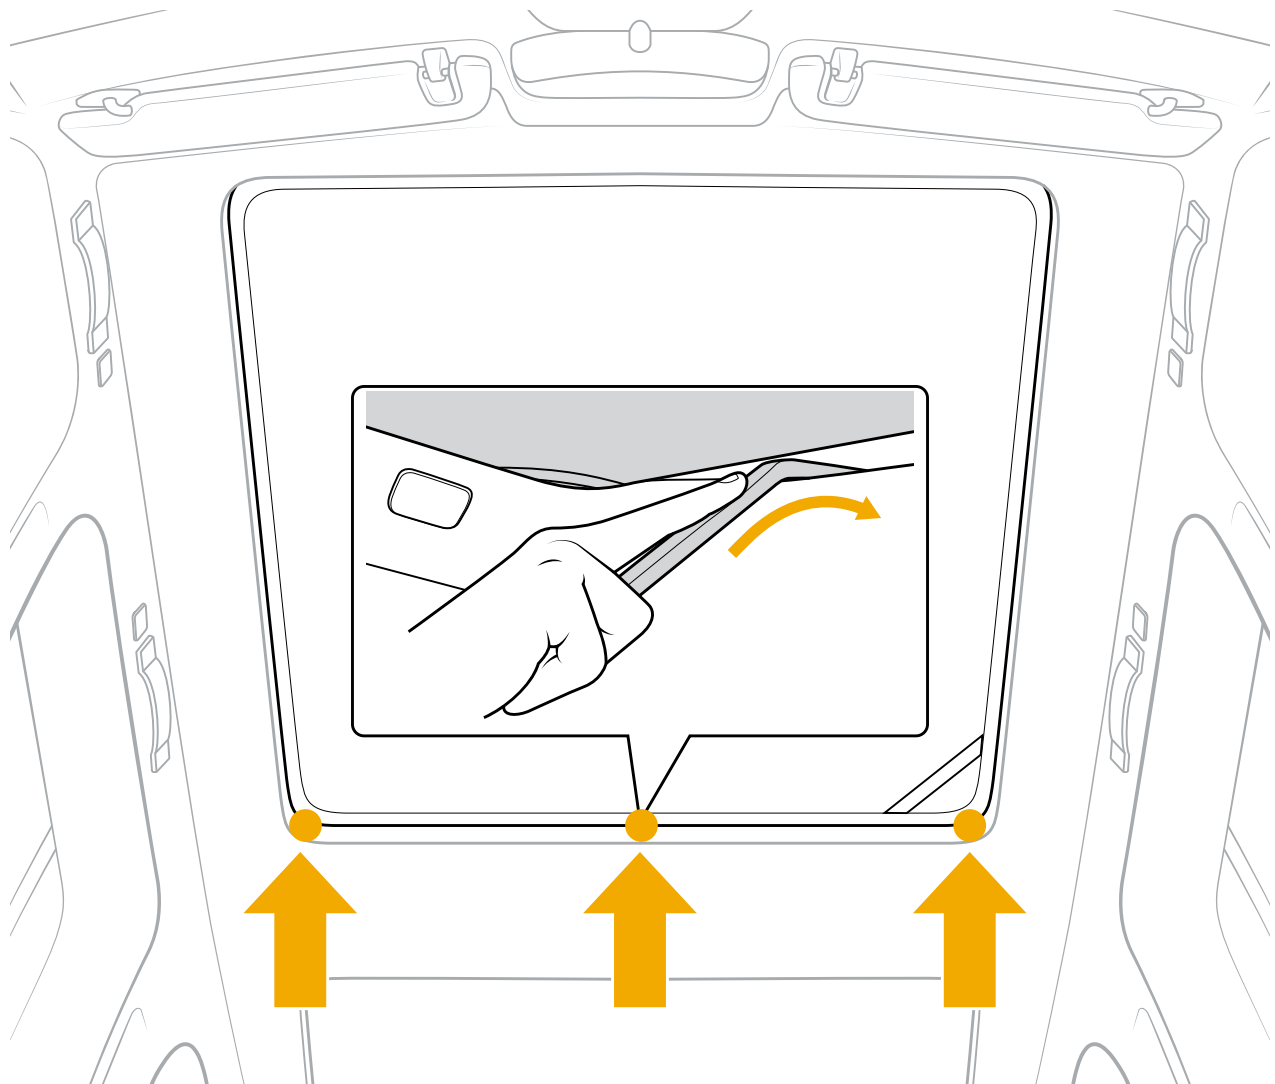


8. Allow the gap to close on the sunshade.
9. Insert the corners of the sunshade under the corners of the headliner, and use the pry tool as needed.



10. Repeat steps 6-9 for the remaining sides.

NOTE

If you see any roof glass, adjust the position of the sunshade so it sits flush with the headliner.

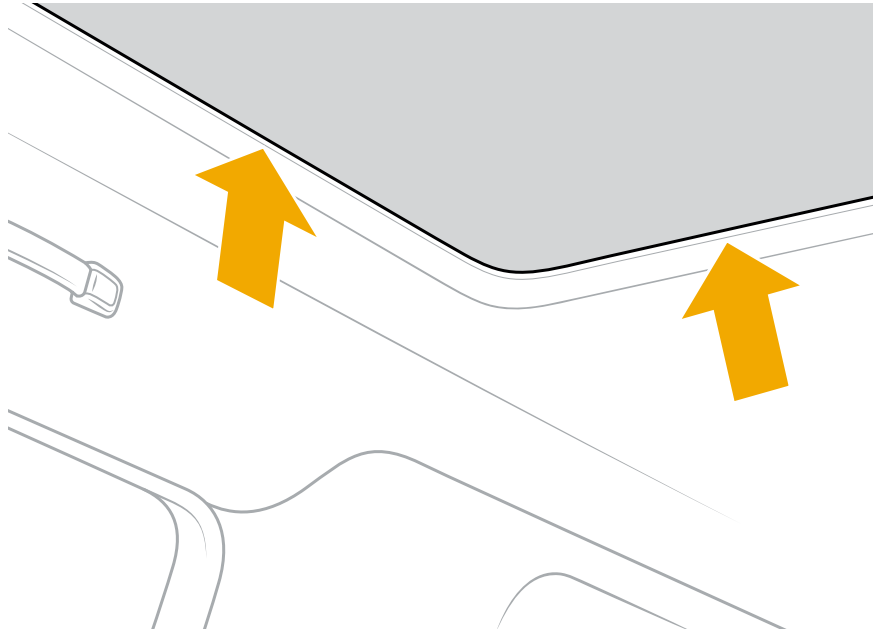

For the R1S, repeat steps 4-10 to install the rear sunshade.



DANGER

Ensure the sunshade is secured in place before you drive the vehicle.

Stow the Glass Roof Sunshade




WARNING

Keep children and pets out of the vehicle while you remove the sunshade.

1. Lower the sun visors.
2. Use the pull strap to release one corner of the sunshade.

NOTE


Use the pry tool as needed.

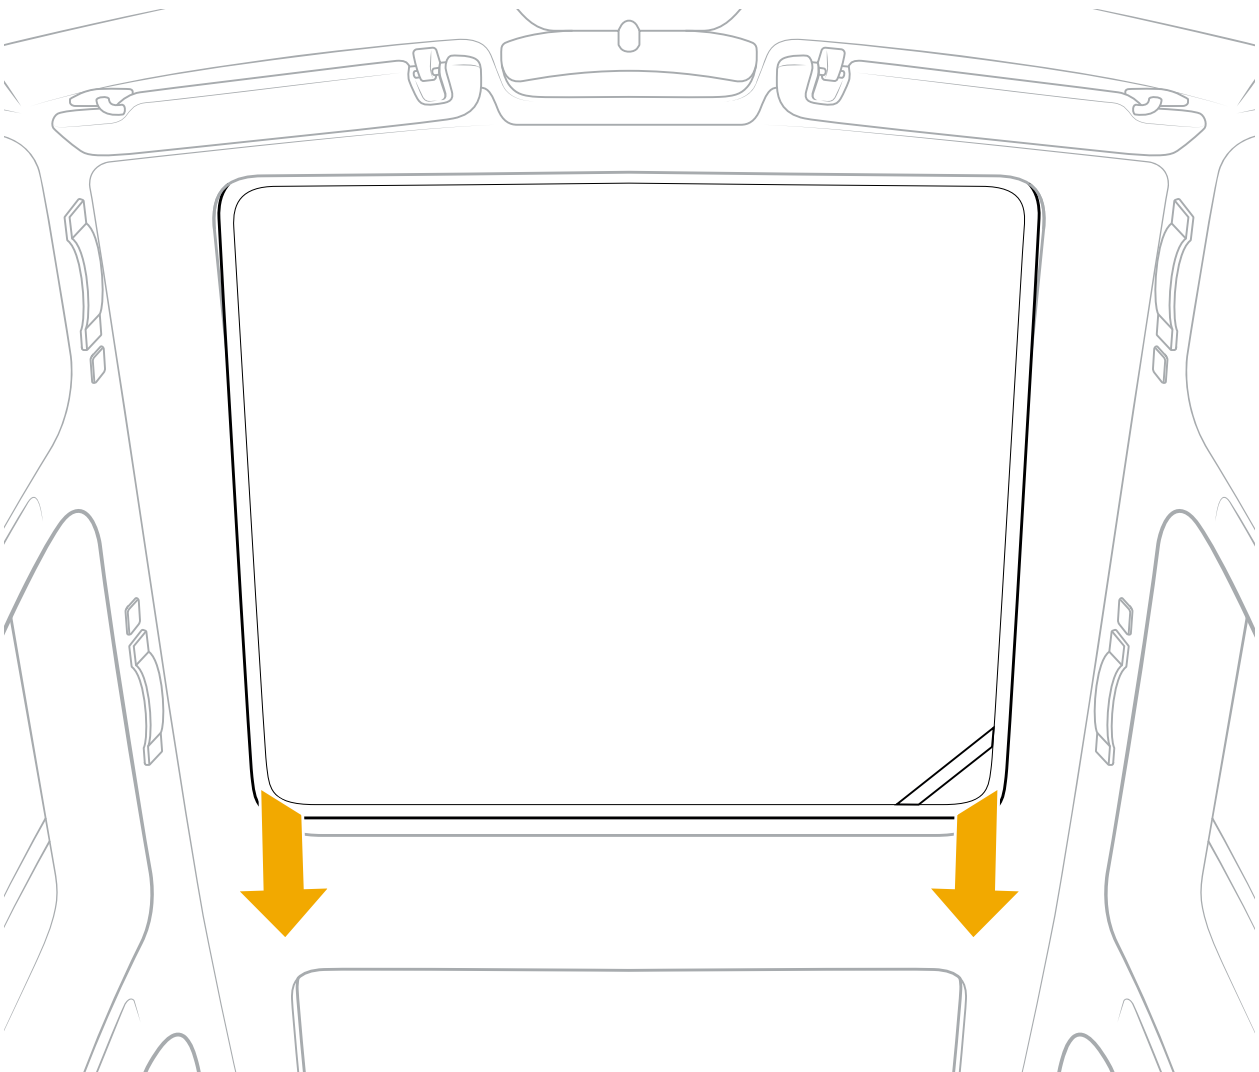

3. Remove the rest of the sunshade.




4. To fold the sunshade for storage, hold the sunshade by the edges. Turn the outside edges in opposite directions and then rotate inwards.

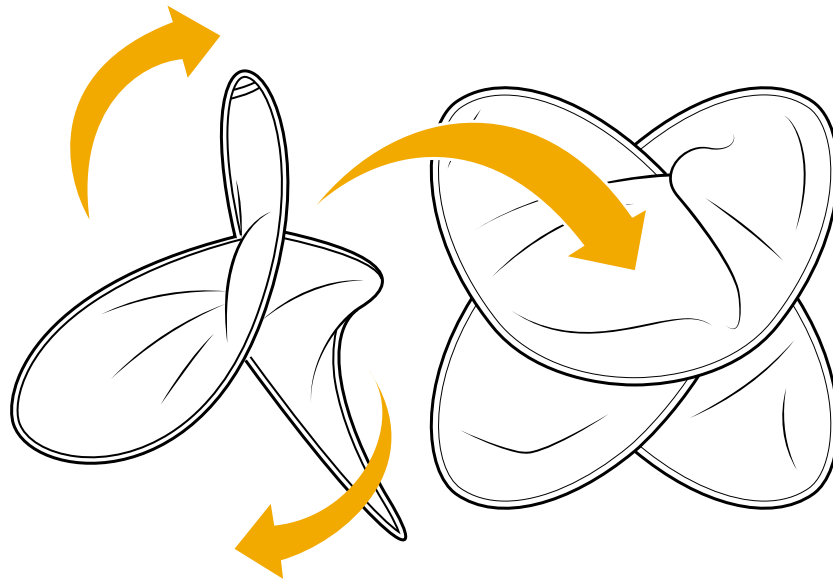

5. Insert the sunshade into the bag.

NOTE

For the R1S, repeat steps 2-5 to stow the other sunshade.

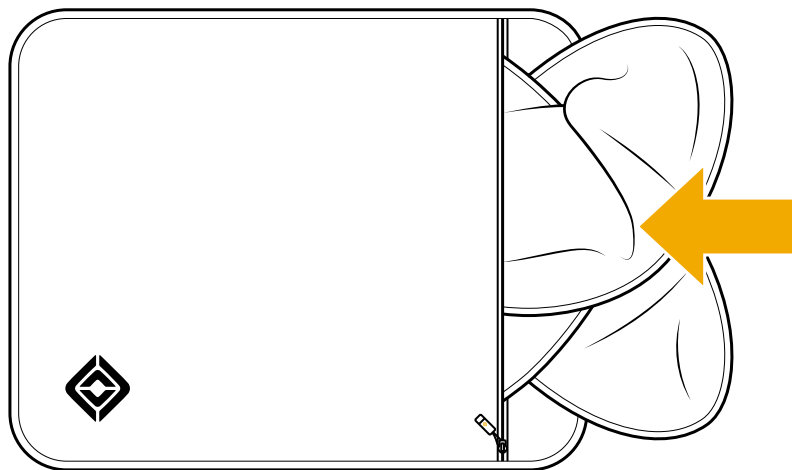

6. Zip the bag closed.

Store the Glass Roof Sunshade

Store the sunshade in one of the vehicle's storage areas, such as the front trunk.

NOTE

Keep the sunshade in the included bag when not in use to help protect it.

Clean the Glass Roof Sunshade

Spot clean the sunshade with a damp cloth.

NOTE

Don't use cleaners that have bleach, ammonia, or alcohol on the sunshade.

Glass Roof Sunshade Specifications

Item	Value
Material, sunshade	Sunlight-filtering mesh
Material, bag	Polyester with polyvinyl chloride (PVC) backing
Dimensions, open, front glass roof sunshade, R1S (length x width)	42.1 in x 49.2 in (1,068 mm x 1,250 mm)
Dimensions, open, rear glass roof sunshade, R1S (length x width)	39.3 in x 20.0 in (999 mm x 509 mm)
Dimensions, open, glass roof sunshade, R1T (length x width)	42.1 in x 42.2 in (1,070 mm x 1,072 mm)
Dimensions, bag (length x width)	19.5 in x 23.5 in (495 mm x 597 mm)

Adventure Gear Limited Warranty

Refer to the [Adventure Gear Limited Warranty Guide](#) for warranty information.

Contact Rivian

Still need help? Connect with us.

RIVIAN

Rivian Support

(888) RIVIAN1 / (888) 748-4261
rivian.com/support/contact