

## LYFT LEGS


## FOR GRYD

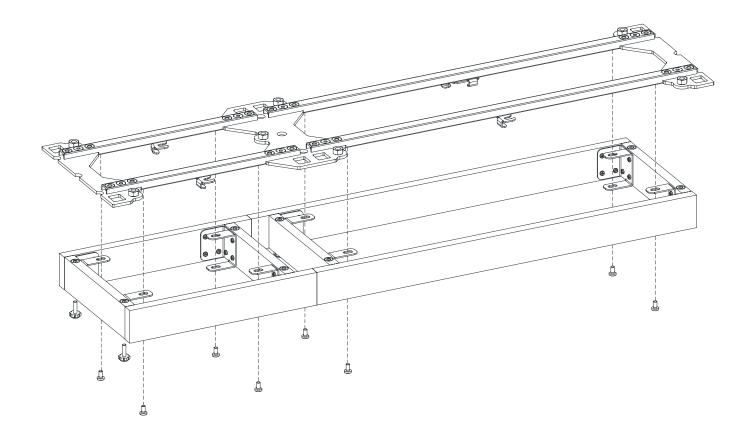


You will build something similar to this.


## Here are the parts you will need.

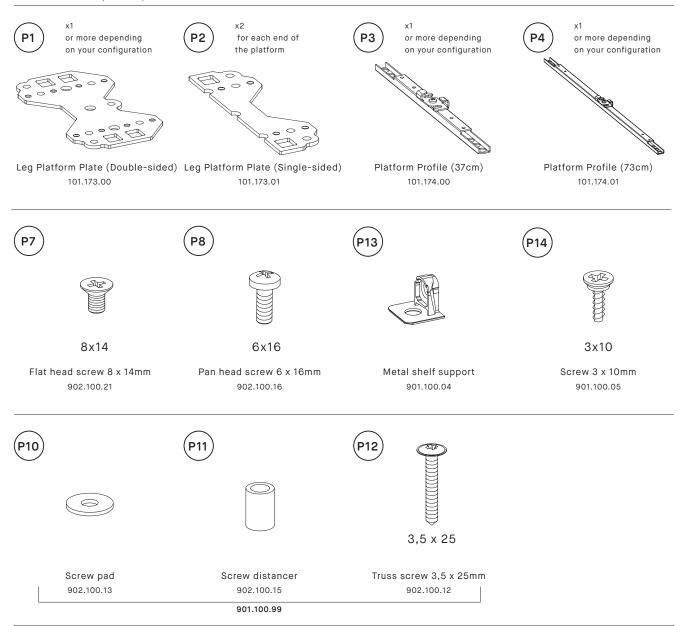

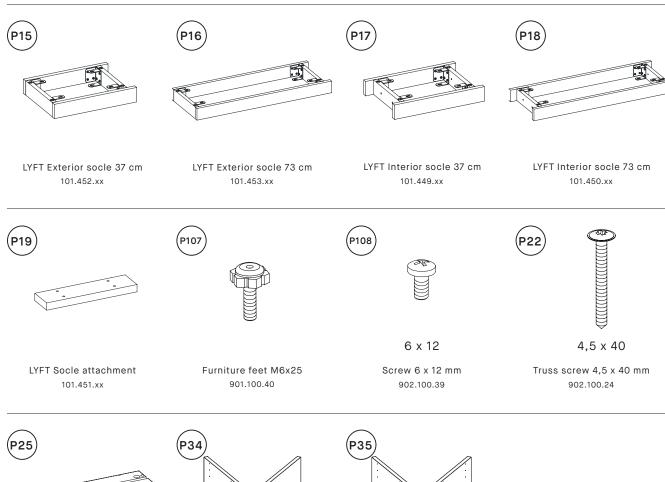







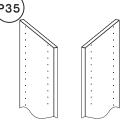


Inner Sidewalls 101.106-111.xx/ 101.407-413.xx

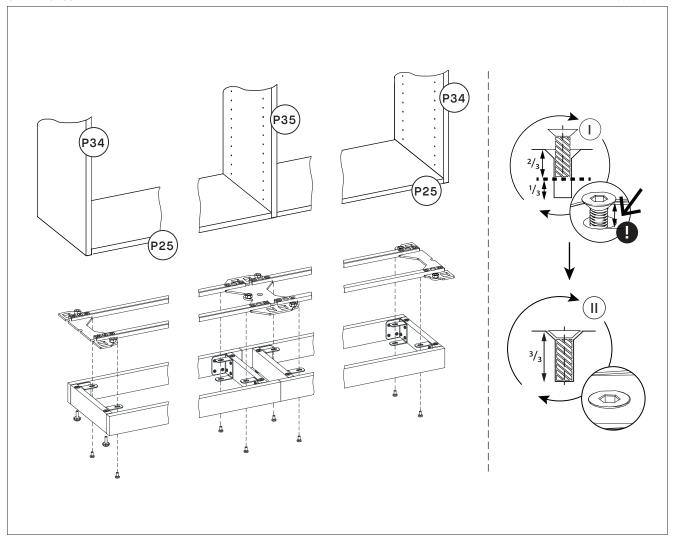



Overall: the single platforms belong below the outer sidewalls and the double platform(s) belong below the inner sidewall(s).

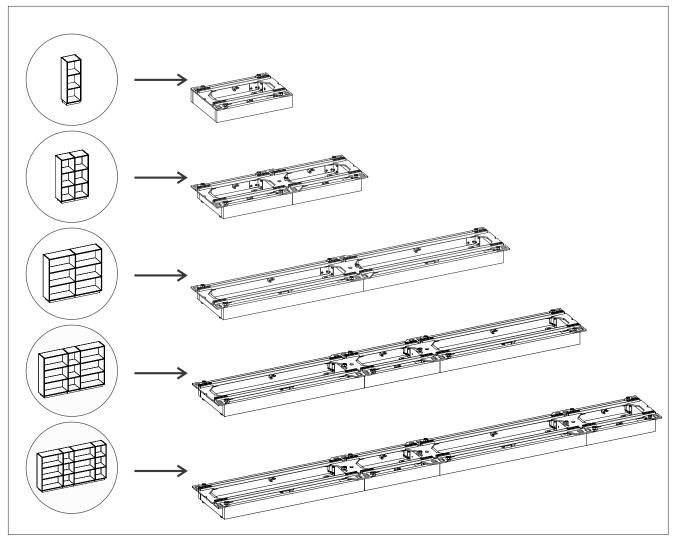


Have a look at the example constructions on the left and how the leg construction for these examples look like on the right. Find the one construction that matches your design the best and assemble the leg construction accordingly.

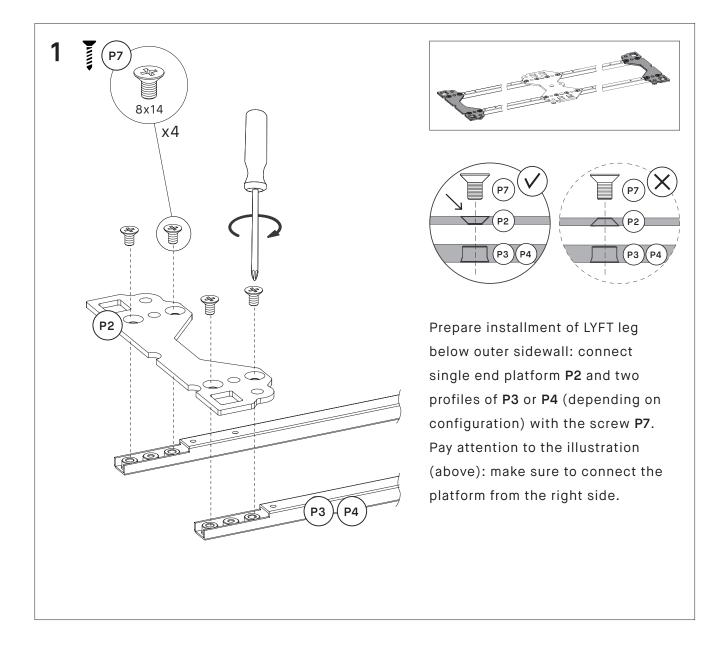


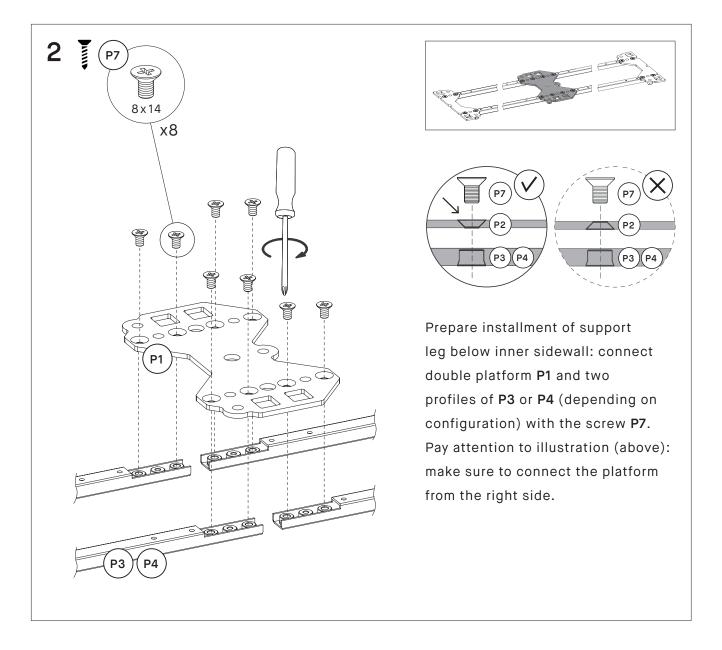

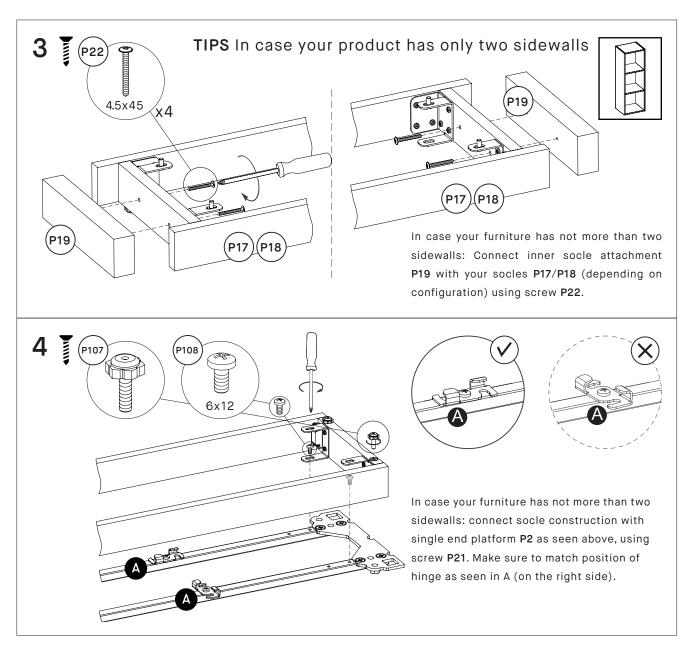


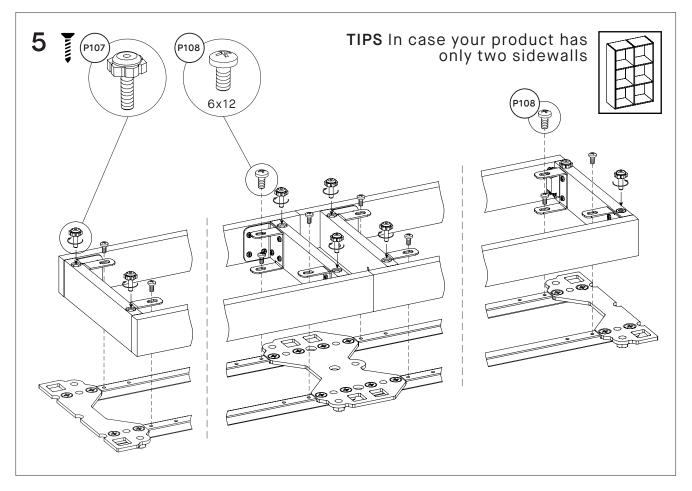


In case your furniture has more than two sidewalls: connect socle construction with platforms using screw P21 as seen above.

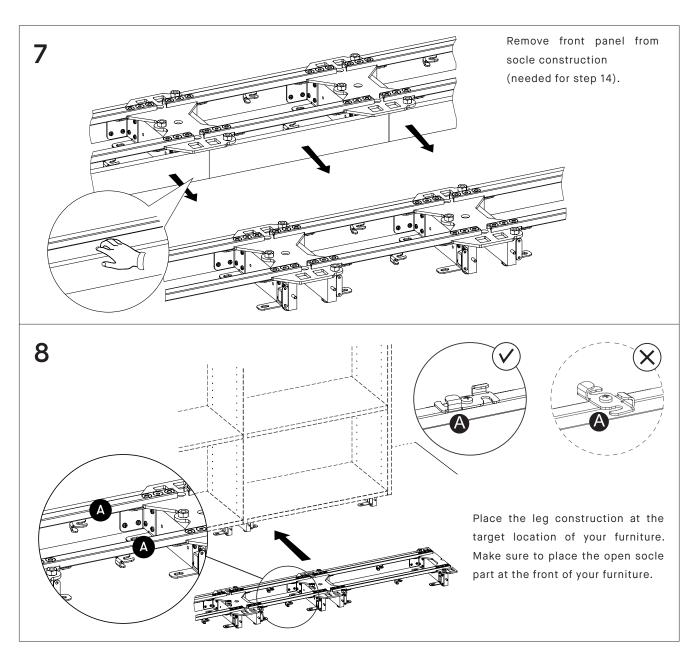

883.101.03 GRYD Manual

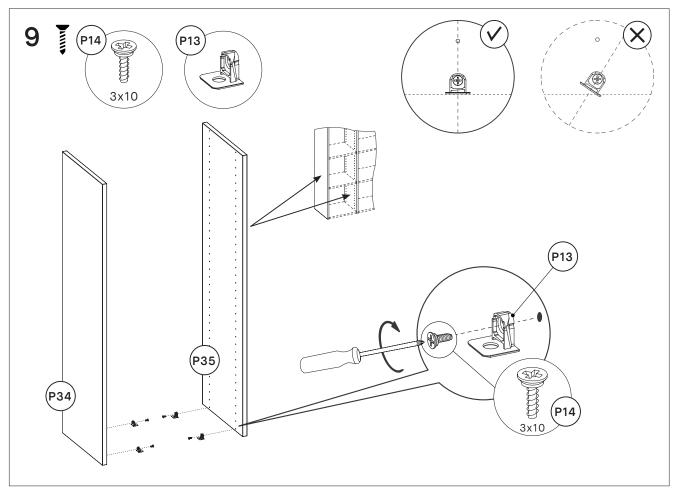


The connectors tabs P13 are there to hold the bottom boards. Screw them into all sidewalls as shown above (using screw P14).

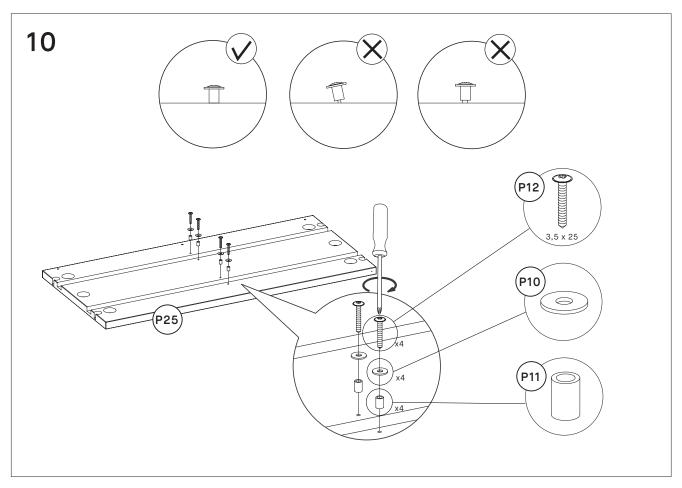


Screw in distancer P11 and pad P10 to the bottom boards P25 by using the screw P12 (3,5 x 25mm).

883.101.03 GRYD Manual

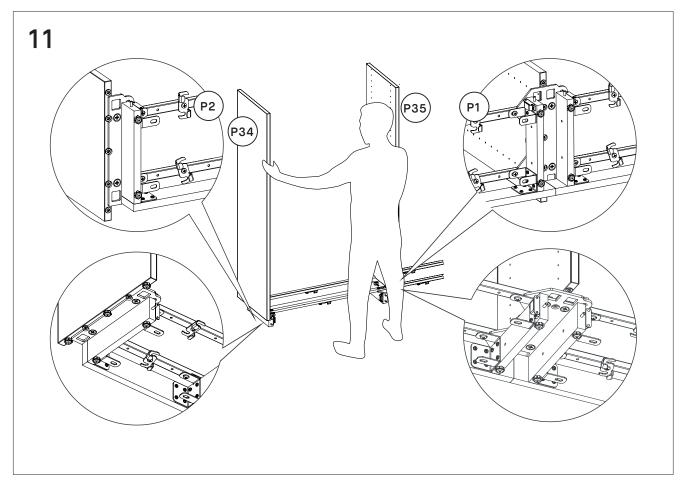


Now stick the first two sidewalls into their platform: the outer sidewalls go into the end of the single end platform P2 and the inner sidewall in the middle of the double platform P1.

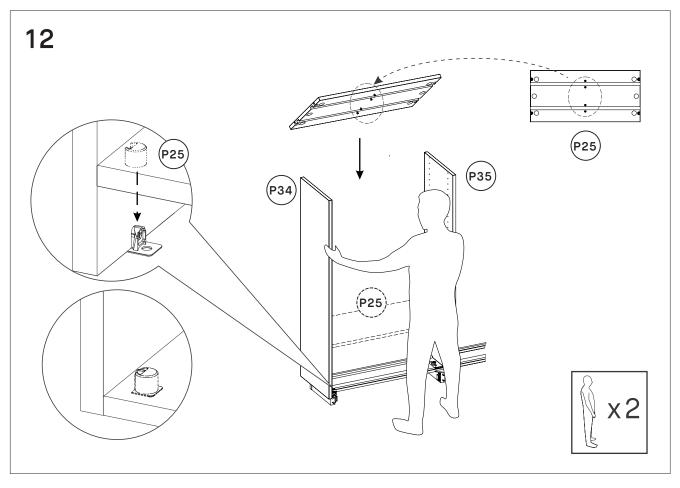


Place bottom boards P25 on the platform by joining it to the sidewalls P34/P35 with additional help.

883.101.03 GRYD Manual

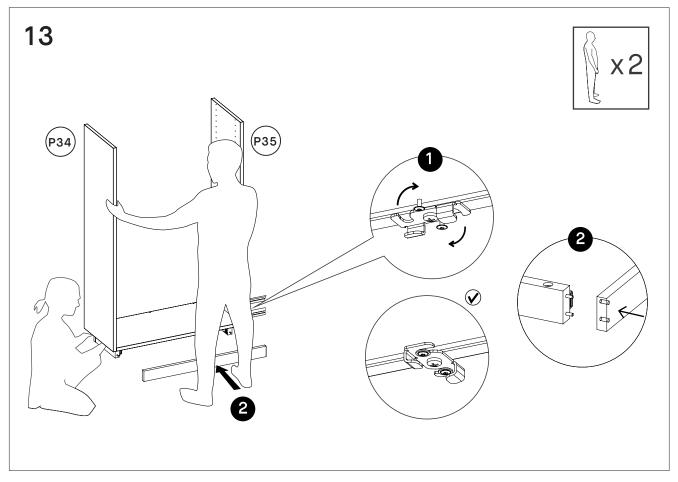

- 1. Lock the hinge underneath the bottom board to connect the rails with the board. You should hear a 'click' sound once the lock is in it's final position.
- 2. Once this is done, put the front part(s) of the socle back into place (as they have been removed in step 7).

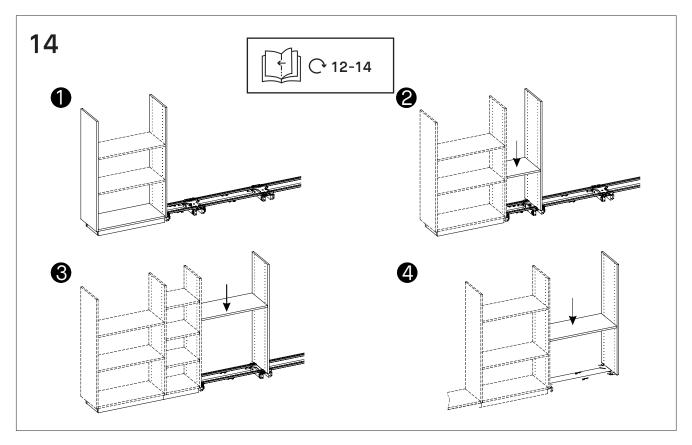

**NOTE:** Step 12 to 14 go together and have to be performed multiple times, in case your configuration requires it (depending on the number of sidewalls you have ordered). Please connect two sidewalls on the left side of your product with their platform (step 12), mount the bottom board in the middle of them (step 13) and finally lock the bottom platform with the rails (step 14). Repeat steps 12 to 14 by adding sidewall by sidewall, until you reach the outer sidewall on the right side of your product.