

TPO Walkway Roll

PRODUCT DESCRIPTION

EverGuard® TPO Walkway Roll provides roofing contractors with an easy-to-install factory-built detail. EverGuard® TPO Walkway Rolls are manufactured using proven, durable EverGuard® TPO as well as recycled TPO.

DURABLE


The EverGuard® TPO Walkway Roll is designed to protect the membrane in areas exposed to rooftop traffic for maintenance access or other uses. These areas include HVAC, roof hatches, access doors, etc. The EverGuard® TPO Walkway Roll is required on a BMI-warranted roofing system.

OPTIONS

In addition to a standard Gray TPO Walkway Roll, BMI has recently introduced Yellow Walkway Rolls to the market. These “safety” Yellow Walkway Rolls are great for sensitive areas of a roof, such as perimeters, around skylights, or in areas of low clearance.

PRODUCT HIGHLIGHTS

- Great traction with diamond plate design. Deep buttress threads further increase pull-out resistance.
- Walkways have smooth edges for easy weldability.
- Manufactured using recycled TPO with excellent weatherability built in.
- Comes in standard Gray and Yellow.
- 34" x 50' (864 mm x 15.24 m) (diamond pattern measures 30" [762 mm] with 2" [51 mm] smooth on both edges).
- 125 mil thickness.
- 75 lb. (34.02 kg) per roll (nominal).

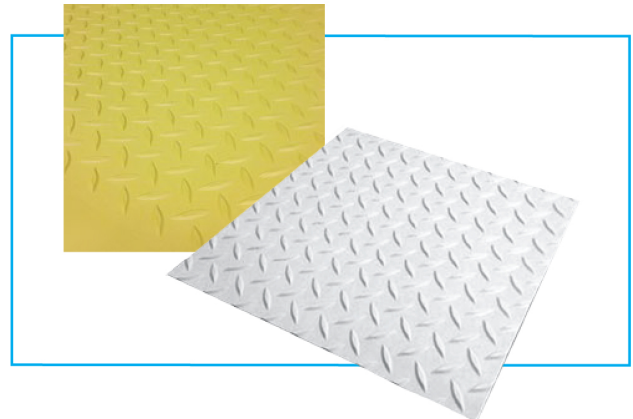

APPLICATION

Heat Weld

Heat-weld EverGuard® TPO Walkway Roll to the roof membrane surface continuously around the walkway roll perimeter.

- Walkway rolls must be spaced 6" (152 mm) to allow for drainage.

Tape

Heat-weld EverGuard® TPO Walkway Roll to the roof membrane surface continuously around the walkway roll perimeter.

- EverGuard® TPO Walkway Roll may also be installed with TPO primer and 3" (76 mm) seam tape.
- First, roll or brush the TPO primer on the back of the TPO roll along the edges and down the middle length of the roll.
- Clean and prime the roof membrane where the roll will be installed.
- Install tape to the back of the roll where cleaned (edges and middle) and roll-in with a silicone hand roller.
- Remove the release paper and install the taped rolls directly onto the roof membrane. Secure the rolls by rolling into place.
- Walkway rolls must be spaced 6" (152 mm) to allow for drainage.

EverGuard® TPO accessories are designed for use with BMI EverGuard® TPO single-ply membranes and with EverGuard Extreme® and EverGuard® Freedom™ TPO self-adhering membranes. The factory-coated accessories may be installed on mechanically attached, fully adhered, or self-adhered EverGuard® TPO roofing systems.

See published application and specifications manual for detailed instructions.