Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
AH01	Armhole-Straight	
Lay garment	flat. Measure from top to bottom of armhole straight.	AHDI Amtrile Straight
AH02	Armhole-Bodice Point to SS-Straight	
Lay garment	t flat facing front. Measure straight from bodice point to the side seam.	AHD2 Amthole-Bodice Point to SS-Straight
AH03 Lay garment	Armhole-Bodice Point to SS-Along Curve I flat facing front. Measure from bodice point to the side seam, along the curve of the armhole.	AF03 Amhole Bodice Point to SS-Along Curve

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
AH04	Armhole Drop from HPS-(straight)- @ SS	
Lay garment	triat facing front. Measure straight from HPS to the armhole.	AHD4 Amtrole Drop from HFS-(Straight)-@SS Imaginary HFS line HRONT
BB01	Bib Seam from HPS @ CF-(under10")	BB01BibSeamfromHPS @CF-(under 10°)
		HPS
BB01.1	Bib Seam from HPS @ CF-(over10")	
		BBOL1 Bib Seamfrom HPS @CF- (over 10") HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BB02	Bib Seam from CF @ Shoulder Seam	BB02 Bib SeamfromCF @ Shoulder Seam
BB03	Bib Seam from CF @ Neck Seam	BBO Bib Seamfrom CF @ Neck Seam
BB04	Bib Seam from CF @ Across Chest Placement	BB04 Bib Seamfrom CF @ Across Chest Placement GF IRS IRM VI29

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BC01	Bust Cup Height @ Center	BCD1 Bust Cup Height @Center
BC02	Bust Cup Width @ Ends	BCO2 Bust Cup Width @Ends
BD01	Bottom Band Height	<u>BD01 - BattomBand Height</u>

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA01	Front Nk Length-(CF Cup to Srap Point)Along Curve	
		FEE.
BRA02	Side Wing Height @ Cup Seam-Along Curve	
		S E E E
BRA03	CB Closure Height (1 hook 3 adj)- Edge to Edge	
310100	SS SISSAID FIGURE (1 FISON O DUJ). Luge to Luge	Brown B B B B B B B B B B B B B B B B B B B

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA04	Back Straps Apart- Inside (On tightest adjustment)	
		BFAOA
		BACK VIEW: (CLOSED ON TIGHTEST ADJUSTMENT)
BRA05	Strap Width	
BRA06	Strap Length (total)-w/2" between O ring & slider	
B11/100	Ottap Longitt (total) in/L bottoon o mig a ondo	

Company: ANTHROPOLOGIE/URBAN - NEW
Size Range: XS-XXL

Ref Code	Description / How 2 Measure	Image
BRA07	Side Bone Tunnel Height	
BRA08	Bottom Width-Flat (on tightest adjustment)	BRACK VIEW: (CLOSED ON TIGHTEST ADJUSTMENT)
BRA09	Bottom Width - Total (Hook to 1st eye)	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code BRA10	Description / How 2 Measure Wire Tunnel Length- Along Outside Curve Edge	Image
BRA11	Gore Height@ Cup Seam - Along Curve	
BRA12	Gore Height @ CF-Straight	ans.

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA13	Gore Width @ Top Edge- Straight	
		BAAS
BRA14	Gore Width @ Bottom Edge- Straight	
Diviti	adio matir © Bottom Eago Citatgrit	
BRA15	Front A/H Length-(Side Cup to Strap Pt)Along Curve	
		FEE.

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA16	Top Side Wing Length-(Cup Seam to Hook/1st eye)	
		BRANG P.
BRA17	Bottom Side Wing Length-(Cup Seam to Hook/1st eye)	
		BRA17
BRA18	Wing Distance Apart@Bottom Cup-Straight (Hook Up)	
		B P E

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA19	Front Strap Length (including hardware) Relaxed	BPA 22
BRA20	Front Strap Length (including hardware) Extended	
BRA21	Back Strap Width	BRACK VIEW. (CLOSED ON TIGHTIEST ADJUSTMENT)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA22	Back Strap Length-(back strap point to ring)	
BRA23	Across Cup Width- Along Seam- Seam to Seam	
		BRACO
BRA24	Cup Height- Total- Strap Point to Bottom Cup Edge	Benefit

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA25	Bottom Cup Height @ Center	
BRA26	Across Cup Seam from Top Edge@CF -Along Wire	
BRA27	Across Cup Seam from Top Edge @ SS-Along Wire	

Company: ANTHROPOLOGIE/URBAN - NEW Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code Description / How 2 Measure Image BRA28 Wire Bone Play Width BRA29 Side Bone Tunnel Placement from Side Cup@ Top BRA30 Back Neck Drop-Strap Point to Edge (racerback)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA31	Across Back@ 2 1/2" from Strap Point-Edge to Edge	
	<u></u>	
BRA32	Back Length from Strap Point to Bottom Edge(racer)	
BRA33	Dart Legs Apart @ Bottom Cup Seam	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BRA34	Dart Length	
DDAGE	Darle Cours (Socials) from Healthat and	
BRA35	Back Sraps (inside) from Hook/1st eye	
BT01	Belt Length-Total from Center Buckle to End	BT01 Belt Length - Total firmCenter Buckle to End
Lay belt flat a	nd measure from end of belt to the bar of the slider to which belt is attached.	
		PLACEMENT WILL BE
		PLACEMENT WILL BE SPECIFIED (FOR BELTS WITH UNEVEN LENGTHS)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT01.1	Belt Length-Total @	BIOI Belt Length - Total firm Center Buckle to End PLACEMENT WILL BE SPECIFIED (FOR BELTS WITH UNEVEN LENGTH-S)
BT02 Measure, ve	Belt Height rtically, the height of the belt from the bottom edge to the top.	BTO2 Belt Height
ВТ03	Center of Middle Grommet from Center of Buckle	BIO3 Center of Middle Grommet firmCenter of Buckle

Company: ANTHROPOLOGIE/URBAN - NEW

BIO Belt Loop Length @Center
BIOS Belt Loop Length @Center
BIOS Belt Loop Length @Center
BIOS Belt Loop Length @ Side
_

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT07	Belt Loop Width	
		BIO7 Belt Loop Width
BT08	Belt Loop Width @ Top	
		BIOS Belt Loop Width @ Top
BT09	Belt Loop Width @ Bottom	
		BIO9 Belt Loop Width @ Bottom

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code BT10	Belt Loop from HPS @ SS	BB10 Belt Loop from IPS @ SS
BT10.1	Belt Loop from Armhole @ SS	BBI01 Belt Loop from Amhole @SS
BT11	Front Belt Loop from HPS	BT11 Front Belt Loopfrom HS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT12	Back Belt Loop from HPS	BT12 Back Belt LoopfromHS
BT13	CB Belt Loop from HPS	BI 13 CB Belt Loop from HS
BT14	Front Belt Loop from CF @ Top of Loop	BI14Front Belt LoopfromCF@Topof Loop

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT14.1	Front Belt Loop from CF @ Bottom of Loop	BTI41 From Belt Loop from GF @ Bottom of Loop
BT15	Front Belt Loop from SS @ Top Waist	BITS Front Belt Loop From SS @ Top Waist
BT15.1	Front Belt Loop from SS @ Bottom WB	BITS.1 Front Belt Leep From SS @ Bottom Waist

Company: ANTHROPOLOGIE/URBAN - NEW Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
BT15.2	Front Belt Loop from Front Pocket Edge @ Top Waist	
		BT15.2 Front Belt Loop FromFront Pocket Edge: @Top Waist
BT15.3	Front Belt Loop from Front Pocket Edge @ Bottom WB	
		BT15.3 Front Belt Loop From Front Pocket <u>Edge @ Bottom Waist</u>
	1	
BT16	Back Belt Loop from CB @ Top of Loop	BT16 Back Belt Loop from CB @ Top of Loop

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT16.1	Back Belt Loop from CB @ Bottom of Loop	BT16.1 Back Belt Loop from CB @ Bottom of Loop
BT16.2	Back Belt Loop from CB @ Bottom WB	
		BΓ162 Belt Loop from CB & Bottom WB
BT17	Belt Loop from Bottom Sleeve Opening	
		BT17 Belt Loop fim Bottom Sleeve Opening

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
BT18	Belt Loop Spacing	BT18 Belt Loop Spacing
CF01	Cuff Height	
		CFOI Cuff High
CF02	Cuff Height Exposed	CF02 Cuff Height Exposed

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
CL01	Collar Height @ CB	
	t with inside of collar facing you. Measure from center back neck seam to top edge of collar.	
		CLO! Colker Height @CB
		CLI/ CORE LEGE WCD
		ов
		NECKBAND
CL02	Collar Roll Height-Inside CB Neck Seam to Top Roll	
		CL02 Collar Roll Height-Inside CB Neck Seam to Top Roll
		TOPROL
		OB Neck Searn
CL03	Collar Length @ Outer Edge-Point to Point	
		CL133 Collar Length @ Outer Feige- Point to Point

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
CL04	Collar Length @ Outer Edge-CB To CF Along Curve	
		CL04Collar Length @Outer Felge-CB to CF Along Curve
		OB OB
		NECKBAND
		ĊF
CL05	Collar Length @ Neck Seam	
		CL05 Collar Length @ Neck Seam
		,
	1	
CL05.1	Collar Length @ Top Neckband Seam	
		CL05.1 Collar Length @ Top Neckband Seam

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
CL06	Collar Point	
Lay center fro	ont edge of collar flat and measure from collar at neck seam along edge to point of collar.	CL06Collar Point
CL07	Collar Spread	
Close necklin	e and lay flat with front facing you. Measure from collar point to collar point horizontally.	CL07 Collar Spread
CL08	Collar Spacing Apart @ CF Neck Seam	CLOS Collar Spacing Apart @CF Nock Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General

Product: W1 Tolerance

Ref Code Description / How 2 Measure Image CL09 Neckband Height @ CB CL09 Neckband Height @CB CL10 Neckband Height @ Front Edge CL10 Neckband Height @Front Edge CL11 Neckband Length @ Top Band Along Seam CL11 Neckband Length @ Top Band Along Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
CL12	Neckband Length @ Bottom Band Along Seam	
		CL12 Neckband Length @ Bottom Band Along Seam
CI 12	Neckhand Center of Button to Front End of Ptoholo	
CL13 Open necklin	Neckband-Center of Button to Front End of Btnhole e and lay neckband flat. Measure from button to end of buttonhole.	
		CL13 Neekband-Center of Button to Front End of Buttonhole
CL14	Notch Intersection from HPS	
		CL14 Notch Intersection from HPS
		Nuch litersection

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
CL15	Lapel Point from HPS-(Lapel Folded)	
Measure the	length of the lapel point, from HPS to edge of lapel point.	HPS Lapst Rint
CL16	Lapel Point	
	length of the lapel point, from seam where the lapel meets collar, to edge of lapel point.	CL16Lapel Rint
CL17	Lapel Width-(Roll Line to Lapel Point-Straight) width across lapel from roll line to lapel point.	
casure ure	THE RESIDUE REPORTED TO THE BITO TO TREPORT PORTS.	CL17Lapel Width - (Roll Line to Lapel Point - Straight)

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
CL18	Lapel Width-(Lapel Seam to Lapel Point-Straight)	
Measure the v	vidth across lapel from the edge of the lapel seam to lapel point.	CL18 Lapel Width - (Lapel Seamto Lapel Point - Straight) NEOK SEAM
CL19	Lapel Notch Spread	
lapel point.	istance of the opening of the notch. Measure the negative space from collar point down to	CI_19Lapel Notch Spread
CL20	Lapel-Neckband Overlap Width @ Seam	CL20 Lapel Neckband Overlap Width @ Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
CL21	Collar Height Cape @ 3 inches	
		CL21 Collar Height; Cape @3"
		3"
	T	
DP01	Center of 1st from HPS(under 10")	DPOLCenter of First ? from HPS (under 10")
		HPS O
DP02	Center of 1st from HPS (over 10")	
		DP02 Center of First ? from HPS (over 10")
		HES

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DP03	Center of (spec #) from HPS (over 10")	
Measure fom	center of specified buton or trim from HPS	<u>DP03 Center of (spec#) from HPS (over 10")</u>
DP04	Center of from Bottom Opening	
		DR04 Center of ? fromBottom Opening
DP05	Vertical Spacing Apart-Center to Center	
		DP05 Vertical Spacing Apart Center to Center

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DP06	Horizontal Spacing Apart-Center to Center	
		DPOS Horizontal Spacing Apart Center to Center
DS01	Drawstring Length Total	DS01 Drawstring Length
DS02	Drawstring Exposed Length-(each)-Tunnel Extended	
		DS02 Drawstring Exposed Length (each) Turnel Extended

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
DS03	Drawstring Height	<u>D803 Dawstring Height</u>
DT01	Bust Dart Apex (point) from HPS	
Lay garment of dart).	flat front facing you, measure from high point of shoulder vertically at right angle to apex (end	DIOI Bust Dart Apex (point) from HPS
DT02	Bust Dart Apex (point) from Armhole flat front facing you, measure from armhole level vertically at right angle to apex (end of dart)	
or leg (start o	f dart).	DIO Bast Dart Apex (point) from Armhole

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

DIO3 Bast Dard og From HPS @SS
DIO Bast Datleg From HS @SS
DIO4 Bust Dart Leg From Amhole @SS
DIOS Bust Durt Length

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Ref Code	Description / How 2 Measure	Image
DT06	Front Waist Dart Apex (point) from HPS	
Lay garment of dart).	t flat front facing you, measure from high point of shoulder vertically at right angle to apex (end	DITO Waist Dart Apex (point) from HPS
DT07	Front Waist Dart Apex (point) from Armhole	
Lay garmen	t flat front facing you, measure from armhole level vertically at right angle to apex (end of dart).	DI07 Waist Dart Apex (point) from Armhole
DT08	Front Waist Dart Apex (point) from CF	
Lay garmen	t flat front facing you, measure from center front horizontally to the dart apex.	DIOS Waist Dart Apex (point) from CF

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Ref Code	Description / How 2 Measure	Image
DT09	Front Waist Dart from CF @ Bodice Seam	
Lay garment f	lat front facing you, measure from center front horizontally to the dart apex, along the bodice	DI(9) Waist Dart from CF @ Bodice Seam
DT10	Front Waist Dart from CF @ Waist	
	lat front facing you, measure from center front horizontally to the dart apex along the waistline.	DT10 Waist Dat from CF @ Waist
DT11	Front Waist Dart from CF @ Top Pocket	
		DTII Waist Dart from CF @ Top Ptokes

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code Description / How 2 Measure		Image
DT11.1 Front Waist Dart from CF @ Bottom Open	ing	
Lay garment flat front facing you, measure from center fro	ont horizontally to the dart apex along the hemline.	DT11.1 Waist Dart from Greening
DT12 Front Waist Dart Length		
Lay garment flat front facing you, measure the length of the	ne dart, from apex to apex, straight.	DT12 Front Weisst Dart Length
DT13 Back Waist Dart Apex (point) from HPS		
Lay garment flat back facing you, measure from high poir of dart).	t of shoulder vertically at right angle to apex (end	DT13 Back Waist Dart Apex (point) from HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Ref Code	Description / How 2 Measure	Image
DT14	Back Waist Dart Apex (point) from Armhole	
Lay garment	flat back facing you, measure from armhole level vertically at right angle to apex (end of dart).	DT14 Back Waist Dut Apex (point) from Amhole
DT15	Back Waist Dart Apex (point) from CB	
Lay garment	flat back facing you, measure horizontally from center back to the apex of the dart.	DI 15 Back Waist Dut Apex (point) from CB
DT16	Back Waist Dart from CB @ Bodice Seam	
seam.	flat back facing you, measure horizontally from center back to the dart apex, along the bodice	DT16 Back Waist Dut from CB @ Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Ref Code Description / How 2 Measure	Image
DT17 Back Waist Dart from CB @ Waist	
Lay garment flat back facing you, measure horizontally from center back to the dart apex, along the waist.	DT17 Back Whist Dut from CB @ Whist
DT17.1 Back Waist Dart from CB @ Bottom Opening	
Lay garment flat back facing you, measure horizontally from center back to the dart apex, along the bodice seam.	DF17.1 Back Waist Dart from CB @ Back Opening
DT18 Back Waist Dart Length	
Lay garment flat, back facing you. Measure the length of the dart, from apex to apex, straight.	DF18 Back Waist Durt Length

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class:

General

Ref Code	Description / How 2 Measure	Image
DT19	Front Dart Length from Top Waist	
		DT19 Front Dart Apex (point) from Top Waist
DT19.1	Back Dart Length from Top Waist	DT19 Back Dart Apex (point) from Top Waist
		B
DTO		
DT20 Lay garment waistband se	Front Dart from CF @ Top Waist flat, front facing you. Measure horizontally from center front to the dart leg, along the top am.	DI20 Hart from CF @ Top of WB
		Ø () () () () () () () () () (

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT20.1	Front Dart from CF @ Bottom WB	g-
	lat, front facing you. Measure horizontally from center front to the dart leg, along the bottom	DE20.1 Front Dart from CF @ Betternof WB
DT21	Back Dart from CB @ Top Waist	
	lat, back facing you. Measure horizontally from center back to the dart leg, along the top	DI21 Back Dart from CF @ Top of WB
		CB
DT21.1	Back Dart from CB @ Bottom WB	
	lat, back facing you. Measure horizontally from center back to the dart leg, along the bottom	DI21.1 Back Dart from CF @ Bottom of WB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT22	Front Neck Dart Spacing Apart @ Neck Seam	
		DT22 Front Neck Dart Spacing Apart @Neck Seam
DT23	Front Neck Dart Apex (point) Spacing Apart	
D123	Thom: Neek Dait Apex (point) Spacing Apart	DT23 Front Neck Dart Apex (point) Spacing Apart
DT24	Front Neck Dart Length	
		DT24 Front Neck Dart Length

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT25	Back Neck Dart Spacing Apart @ Neck Seam	
		DIT25 Back Neck Dart Spacing Apart @ Neck Seam
DT26	Back Neck Dart Apex (point) Spacing Apart	
		DT26 Back Neck Dart Apex (point) Spacing Apart
DT27	Back Neck Dart Length	
		DT27 Back Neck Dart Length

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT28	Elbow Dart Leg from Armhole Along Seam	DI28 Fllow Dart Leg from Armhole Along Seam
DT29	Elbow Dart Leg Spacing Apart @ Seam	DI29 Elbow Dart Leg Spacing Apart @ Seam
DT30	Elbow Dart Apex (point) Spacing Apart	DESOEIDON Dart Apex (point) Specing Apert

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT31	Elbow Dart Length	DI31 Flbow Dart Length
DT32	Knee Dart from Bottom Opening Along Seam	DT32 Knee Dart From Bottom Opening Along Seam
DT33	Knee Dart Leg Spacing Apart @ Seam	DI33 Knee Dart Leg Spacing Apart @ Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT34	Knee Dart Apex (point) Spacing Apart	DT34 Knee Dart Apex (point) Spacing Apart
DT35	Knee Dart Length	DI35 Knee Dart Length
DT36	Dart Intake-(flat)	DT36 Dart Intake (flat)
		RIDUNE

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT37	Shoulder Dart Length	
		DT37 Shoulder Dert Length
DT38	Bust Dart Apex from Raglan Peak	
		DES Best Durt Apex from Ragian Peak
DT39	Front Waist Dart Apex from Raglan Peak	DIT39 Front Waist Dart Apex from Raglan Rak

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
DT40	Back Waist Dart Apex from Raglan Peak	DE40 Back Wissit Dart Apex from Raglan Peak
EP01	Epaulet Length @ Center	EPOI Epilet Length @Center
EP02	Epaulet Length @ Sides	EF02 Epilet Length @ Sides

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
EP03	Epaulet Width	
		EFO3 EpiletWidth
EP04	Epaulet Edge from Neck Edge	
		EP04 Epaulet Edge from Neck Seam
		ARMITE
FC01	Facing Height	
		PC01 Facing Height

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
FC02	Facing Width	
		FC02 Facing Width
51.04	Ter	
FL01	Flounce Height @ CF	H.01 Hounce Height @CF
FLOO	Flures Wint & 00	
FL02	Flounce Height @ SS	H. De Hounce Height @SS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
FL03	Flounce Height @ CB	
		H.03 Hounce Height @CB
		da da
FL04	Sleeve Flounce Height	
	<u>, </u>	H.04 Sleeve Flounce Height
GD01	Godet Height @ Center	
		CD01 Code Height @Center

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
GD02	Godet Width @ Bottom-Along Curve or Straight	
		Straight Along Quive or Straight
GD03	Godet Point from CF	
		CD03 Codet Point fromCF
GD04	Godet Point from CB	
		GD4 Code Point from CB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
GD05	Godet Spacing Apart-Point to Point	
		CD05 Codet Spacing Apart - Point to Point
HB01	Back Neck Width-Seam to Seam @ Shldr. Sm.	HBOI Back Neck Width Seamto seam BACK
HB01.1	Back Neck Width Egde-Edge @ Shldr. Sm. 8-11"	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HB01.2	Back Neck Width Egde-Edge @ Shldr. Sm. over 11"	
HB02	Back Neck Width-Edge to Edge @ Shldr Sm.	HB02 Back Neck Width-Edge to Edge
		BACK
LIDOO 4	Dayly Mark Wildle Coars Coars & Oblide Cor C 4411	
HB02.1	Back Neck Width Seam -Seam @ Shldr. Sm. 8-11"	

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

SIZE Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
HB02.2	Back Neck Width Seam -Seam @ Shldr. Sm.over 11"	
		HBO2.2 Bk Neck Width Fidge - Fidge @ Shkir. Sin over 11" BACK
НВ03	Raglan Seams Apart @ Back Neck	
		HEO3 Regian Scarns Apart @Back Neck
HB04 Lay garment	Across Back-Seam to Seam flat facing back. Measure straight across garment from seam to seam at the across back om HPS (VB07) as specified on spec sheet.	HB04 Across Back-Seam to Seam
piacement in	AITTH 5 (VD01) as specified on spec street.	HES HEO4 BACK

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Ref Code	Description / How 2 Measure	Image
HB04.1	Across Back-Edge to Edge	HB04.1 Across Back-Edge to Edge
Lay garment placement fro	flat facing back. Measure straight across garment from side to side at the across back m HPS (VB07) as specified on spec sheet.	HPS HB04.1 BACK
HB05	Back Bottom Opening-SS to SS Along Curve	
		HB05 Back Bottom Opening- SSto SS Along Curve BACK
HB06 Always meas Measure acro	Back Sweep-SS to SS Along Curve ure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed. ss the bottom of the garment, from side seam to side seam, following the curve.	HHX6 Back Sweep- SS to SS Along Curve BACK

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HB07	Back Chest Along Edge Between Side Seams	HB07 Back Chest along edge between Side Seams
		BACKNECKLINE
HB08	Across Shoulder Edge to Edge @ Back Shldr. Sm.	
		HF08- Across Shoulder - Erige to Erige @ Back shildr seam
		BACK
HB08.1	Across Shoulder Seam to Seam @ Back Shldr. Sm	
		HF08.1 - Across Shoulder - Seamto Seam@Back shidr seam
		BACK

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
HD01	Hood Opening- Along Seam	
		HD01 Hood Opening - Along Seam
HD02	Hood Height-Straight from HPS	
		HD02 Hood Height - Straight From HPS
HD02.1	Hood Height @ CF	HD02.1 Hood Height @CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HD03	Hood Width @from HPS	
		HD03 Hood Width @(specified point) from HPS
		(specified part) in FFS
HD04	Hood Center Panel Width @ Opening	
		HD04 Hood Panel Width @Opening
HD05	Hood Center Panel Width @ Back Neck Seam	
		HD05 Hood Parel Width @ Back Neck Seam

Company: ANTHROPOLOGIE/URBAN - NEW

HD06 Hood Center Panel Length @ Center HD0 HxxtPanel Lough @ Cotton GCGENIG GGGENIG HF00.1 Neck Width Edge to Edge @ HPS (8 - 11*) HC01 Neck Width Edge to Edge @ HPS (8 - 11*)	
HF00.1 Neck Width Edge to Edge @ HPS (8 - 11")	
HF00.1 Neck Width Edge to Edge @ HPS (8 - 11") HF00.1-Neck Width Edge to Edge @ HPS (8"-11" width)	
ficenS' to II'	
HF00.2 Neck Width Edge to Edge @ HPS (+11in.) HF00.2-Neck Width Edge to Edge @ HPS (over 11" width)	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF00.3	Neck Width Seam to Seam @ HPS (8 - 11")	
		HFCO.3 - Neck Wighth Seam to Seam @ HFS (8" - 11" wight)
		FromS' to 11"
	1	
HF00.4	Neck Width Seam to Seam @ HPS (+11")	
		HF00.4 - Neck Width Seam to Seam @ HPS (over 11" width)
		over 11"
HF00.5	Neck Width Edge to Edge @ Shldr Sm (8 -11")	HF005 - Neck Width Felge to Felge @Stroukler Seam(8 to Him.)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF00.6	Neck Width Edge to Edge @ Shlder Sm (+ 11")	HF00.6 - Neck Width Filge to Filge @Shoulder Seam(over 11 in.)
HF00.7	Neck Width Seam to Seam @ Shldr Sm (8 - 11")	HF00,7 - Neck Width Seam to Seam @ Shoulder Seam (8 to 11 in.)
HF00.8	Neck Width Seam to Seam @ Shldr Sm (+11")	HF00.8 - Neck Width Searn to Searn @ Shoulder Searn (over 1 lin.)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF01	Neck Width-Seam to Seam @ HPS	
Lay garment	flat with back of garment facing you. Measure horizontally neck seam to neck seam.	HFOI - Neck Width Seamto Seam@HFS
HF01.1	Neck Width-Edge to Edge @ HPS	
Lay garment	flat with back of garment facing you. Measure horizontally neck point to neck point.	HF01.1 - Neck Width Filge to Filge @HFS
HF01.2	Neck Width- @ Top Band Opening-Straight	HF01.2 - Neck Wickth @Top Band Opening - Straight
		CB CT

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF01.3	Neck Width Seam to Seam @ Shoulder Seam	HFOL3- Neck Width Seam@Shoulder Seam
HF01.4	Neck Width Edge to Edge @ Shoulder Seam	HFOL4-Neck Width Fitge to Fitge @ Strukter Seam
HF02 Lay garment	Front Neck Width-Seam to Seam @ HPS flat with the front of the garment facing you. Measure horizontally neck point to neck point.	HF02 - Front Neck Width Seamto Seam@HPS EXTEND COM. NEX STRAGHT SOLLER SEMA

General

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: **Product:**

Size Range: XS-XXL W1 Tolerance **Ref Code Description / How 2 Measure Image** HF02.1 Front Neck Width - Edge to Edge @ HPS HF02.1 - Front Neck Width Edge to Edge @HPS SHOULDER SEAM HF03 Neck Width-Seam to Seam @ Across Chest Lay garment flat. Measure straight across the neck opening from seam to seam at the across chest HF03 - Neck Width Seam to Seam @ Across Chest placement from HPS (VF29) as specified on spec sheet. HPS HF03.1 Neck Width-Edge to Edge @ Across Chest Lay garment flat. Measure straight across the neck opening from edge to edge at the across chest placement from HPS (VF29) as specified on spec sheet. HF03.1 - Neck Width Edge to Edge @ Across Chest HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF04	Neck Width-Seam to Seam @ Front Neck Drop	
Lay garment fla	tt. Measure straight across the neck opening from seam to seam at the front neck drop.	HF04 - Neck Width Seamto Seam @ Front Neck Drop HFS
1	Neck Width-Edge to Edge @ Front Neck Drop It. Measure straight across the neck opening from edge to edge at the front neck drop.	HF05 - Neck Width-Fitge to Fitge @Fitant Neck Drap HPS
	Raglan Seams Apart @ Front Neck It front facing up. Measure straight across the neck opening from raglan seam to raglan	HF06 - Ragian Scams Apart @ Front Neck

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF07	Across Shoulder-Seam to Seam	
seams meet	flat with the frontof the garment facing you. Locate the shoulder points, where the shoulder the top of the armhole. When there is no natural shoulder seam, measure where the fold of the ets the top of the armhole.	HO7 - Arross Struicter - Searnto Searn BACK HS
HF07.1	Across Shoulder-Edge to Edge @ Back Fold	
Lay garment seams ends	flat with the frontof the garment facing you. Locate the shoulder points, where the shoulder at the edge of the garment.	HF07.1 - Across Shoulder - Entge to Entge @ Back Fold
		BACK
HF08	Across Chest-Seam to Seam	
Lay garment	flat. Measure straight across garment from side to side at the across chest placement from as specified on spec sheet. Assure to include all fullness from darts, shirring, etc.	HOS- Aross Chest Szamto Szam VF29 VF29

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF08.1	Across Chest-Edge to Edge	HF08.1 - Across Chest Edge to Edge
Lay garment HPS (VF29) a	lat. Measure straight across garment from side to side at the across chest placement from is specified on spec sheet. Assure to include all fullness from darts, shirring, etc.	VF29
HF09	Chest @ Armhole	
Lay garment fullness from	lat. Measure straight across garment from side to side at the armhole. Assure to include all darts, shirring, etc.	HF09-Chest @Ambale
HF09.1	Chest @ Armhole CF to CB	HF09.1 Chest @ Armhole CF to CB
		CB CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF10	Chest @ 1" Below Armhole	HF10-Chest 1" Below Amhole
Lay garment Assure to inc	flat. Measure straight across garment from side to side 1" below the armhole on the side seam. clude all fullness from darts, shirring, etc.	ambole level I'
HF10.1	Chest @ 1" Below Armhole CF to CB	HF10.1 Chest @1" below Armhole CF to CB
		B CF
HF10.2	Chest @ Specified Placement	HF10.2 Chest @ Specified Placement
		18702

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
curve of the s	Chest @ Bodice Seam-Straight lat. Measure straight across garment from side to side at the bodice seam. Do not follow the eam. If the bodice seam stretches, take one measurement stretched and one measurement ord both on the MSE Page.	HF11-Chest @ Bxdice Seam-Straight
HF12 Lay garment spec sheet.	Waist lat. Measure straight across garment from side to side at the waist placement as specified on	HF12 - Waist AT SPECIFIED PLACEMENT AT SPECIFIED PLACEMENT
HF13 Lay garment HPS (VF30) a	Waist @ Seam-Along Curve lat. Measure along the curve of the waist seam from side to side at the waist placement from as specified on spec sheet.	HF13 - Waist @ Seam- Along Curve AT SPECIFIED PLACEMENT VF30

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
HF14	Waist @ Top	
Lay garment waistband.	flat facing front. Measure straight across garment from side to side at the top edge of the	HF14- Waist @ Top
HF15 Lay garment waistband.	Waist @ Bottom flat facing front. Measure straight across garment from side to side at the bottom edge of the	HF15 - Waist @ Bottom WB - Along Scam
HF16	Waist Extended	
Lay garment	flat. Stretch the waistband until the gathers on the fabric are flat, and measure straight across waistband while extended.	HF16- Waist Extended B03

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
HF17	Waist Relaxed	
Lay garment waistband.	flat. Measure the waistband straight across the top edge, being sure not to stretch the	HF17 - Waist Relaxed
HF18	High Hip	
Measure dow side seam, fo	rn vertically from the High Hip Placement indicated on spec sheet. Measure from side seam to illowing the contour of the garment.	HCHIPParis/Sars HCHIPParis/Sars HCHIPParis/Sars Weil Weil Weil Weil Weil Weil Weil Weil
HF19	High Hip-Along Yoke Seam	
Lay garment hip.	flat. Measure horizontally across from side seam to side seam, along the yoke seam at high	HF19 - High Hip Along Yoke Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
HF20	Low Hip	
Measure down edge, following	n vertically to the Low Hip Placement indicated on spec sheet. Measure from side edge to side g the sketch details.	HF20-LowHip LOWHPGirde Skirts Well Well HF20
	I	
HF21 Lay the garme	Low Hip-Along Yoke Seam at low hip, from side seam to side seam.	HF21-LowHp Along Yoke Seam
HF22	Bottom Opening-Straight	
Always measu Measure at bo	Irre closed unless indicated on spec. Lay garment flat making sure that any pleats are closed. Itom of garment, following bottom edge.	HF22 - Bottom Opening - Straight

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HF22.1	Front Bottom Opening-CF to SS-Straight	HF22.1-Front Bettom Opening - CF to SS Straight
HF23 Always meas Measure at b	Bottom Opening-Along Curve ure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed. bottom of garment, following curve of the bottom edge.	HF23 - Bettom Opening Along Curve
HF23.1	Front Bottom Opening-CF to SS-Along Curve	HF23.1 - Front Bottom Opening - CF to SS Along Curve

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed Measure across the bottom of the garment, from edge to edge, following the curve. HF24.1 Front Sweep-SS to SS-Along Curve Always measure closed unless indicated on spec. Lay garment flat with front facing you making sure that any pleats are closed. Measure across the bottom of the garment, from side seam to side seam, following the curve. HF25 Lining Sweep-Along Curve Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed the curve.	HF24.1-Hort Sweep-SStoSS-Along Circe
HF24.1 Front Sweep-SS to SS-Along Curve Always measure closed unless indicated on spec. Lay garment flat with front facing you making sure that any pleats are closed. Measure across the bottom of the garment, from side seam to side seam, following the curve. HF25 Lining Sweep-Along Curve Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed.	
Always measure closed unless indicated on spec. Lay garment flat with front facing you making sure that any pleats are closed. Measure across the bottom of the garment, from side seam to side seam, following the curve. HF25 Lining Sweep-Along Curve Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed.	HF24.1 - Front Sweep - SS to SS - Along Curve
Always measure closed unless indicated on spec. Lay garment flat with front facing you making sure that any pleats are closed. Measure across the bottom of the garment, from side seam to side seam, following the curve. HF25 Lining Sweep-Along Curve Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed.	HF24.1- Front Sweep - SS to SS - Along Curve
Always measure closed unless indicated on spec. Lay garment flat making sure that any pleats are closed	
Measure across the bottom of the lining, from edge to edge, following the curve.	
	HF25- Lining Sweep- Along Curve

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code Description / How 2 Measure	Image
HL01 Hanger Loop-Total Length	HLOI Hanger Loop - Total Length
	CB SIDE SEAM OF
HL02 Hanger Loop from	HLO Harger Loop From?
	OB SIDE SEAM OF
HM01 Hem Height	
	FM01 H-mH-ight

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
HM02	Hem Height-Include Binding	
		HM12 Hem Height - Including Binding
HM03	Hem Height-to Lining Seam	
		HM3 H-mH-ight - To Lining Seam
		Dorly Lining Coer Hang
HM04	Hem Height - To Finished Lining Edge	
		HMD4 Hem Height - To Finished Lining Edge
		Body Lining

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
KH01	Keyhole Opening-Edge to Edge	
		KH01 Keyhole Opening - Edge to Edge
KH02	Keyhole Width @ Center-Edge to Edge	KHD2 Keyhole Width @Center - Felge to Felge
MS01	Minimum Stretch @ Neck Opening	
	The state of the s	MSOI Minimum Stretch @ Neck Opening

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
MS02	Minimum Stretch @ Back Neck	
		MS02 MnimumStretch @ Back Neck
MS03	Minimum Stretch @ Waist	
		MS03 MinimmStretch @ Waist
MS04	Minimum Stretch @ Bottom Opening	
		MS04 Mnimum Bottom Opening

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
MS05	Minimum Stretch @ Top Cuff Seam	
		MS06 Minimum Stretch @ Top Cuff Seam
MS06	Minimum Stretch @ Sleeve Opening	
		MS06 Minimum Stretch @ Sleeve Opening
PA01	Placket Length @ Center	
		PAOI Hacket Length @Center

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PA02	Placket Length @ Sides	
		PAO2 Placket Length @ Sides
	Taran and an analysis of the same analysis of the same and an analysis of the same and	
PA03	Placket Width	PAOS Placket Width
PA04	Placket Facing Width	PA04 Flacket Facing Width OUTSIDE INSIDE

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK01	Chest Pocket from HPS @ CF Side	
		PKOI Chest Product from HPS @ CF Side
PK02	Chest Pocket from HPS @ SS Side	
FKU2	Chest Focket Holli FFS & 33 Side	PKO2 Chest Pecket from HPS @SS Side
PK03	Pocket from HPS @ CF Side-(over 10")	
		PK03 Rocket from HPS @CF Side (over 10")

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK04	Pocket from HPS @ SS Side-(over 10")	
		PKO4 Packet from HPS @SS Side (over 10")
DIVOS	D 1 1/ T W 1 1 0 0 5 0 1	
PK05	Pocket from Top Waist @ CF Side	
		PK05 Pocket from Top Waist @CF Side
		GF GF
PK06	Pocket from Bottom WB @ CF Side	
		PK06 Packet from Bottom Waist @CF Side

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK07	Pocket from Top Waist @ SS Side	
		PK07 Pocket from Top WB @SS Side
		SIDE SEAM
PK08	Pocket from Bottom WB @ SS Side	
		PKOS Pocket from Bottom WB @ SS Side
		SIDE SEAM
PK08.1	Jean Pocket from Bottom WB @ SS Side	
		PKOR I Jean Pocket from Bottom WB @ SS Side SIDE SEAM

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK09	Pocket from Top Waist @ CB Side	
		PKO9 Pocket from Top Waist @CB Side
		8
PK10	Pocket from Bottom WB @ CB Side	
		PK10 Pocket from Bottom Waist @CB Side
		8
PK10.1	Pocket from Bottom Waist @ Outer Side	
		PK10.1 Pocket fromBottomWaist @Outer Side

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
PK11	Pocket from CF @ Top-(use for graded pkts)	
		PK11 Pocket from CF @ Top (use for graded pockets)
		σ F
PK11.1	Pocket from CF @ Bottom (use for graded pockets)	
		PK11.1 Pocket from CF @ Bottom (use for graded pockets)
PK12	Pocket from CF@Top-(use for nongraded pkts)	
	construction of a top (and the interigration print)	Wind has great (is a little)
		PK12 Pocket from CF @ Top (use for non-graded pockets)
		OF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK12.1	Pocket Opening from CF-Along Seam	
		PK12.1 Pocket fromCF - Along Szam
		GF 1
PK12.2	Pocket from CF @ Bottom (use for non-graded pkts)	
	J ,	PK12.2 Pocket from CF@ Bottom (use for non-graded pockets)
		PKIZZPOSRE IIUIR P @ BAICHI (Re ROTHU-9-REU JUSCES)
PK13	Jean Pocket from SS @ Top Waist	
		PK13 Jean Pocket from SS @ Top Waist

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK13.1	1/4 Top Pocket from SS @ Top Waist	
		PK13.1 1/4 Top Pocket from SS @ Top Waist
PK14	Jean Pocket from SS @ Bottom WB	
		PK14 Jean Pocket from SS @ Bottom WB
PK14.1	1/4 Top Pocket from SS @ Bottom WB	
		PK14.1 1/4 Top Pocket from SS @ Bottom Waist

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK15	Pocket from CB @ Top-(use for graded pkts)	
		PK15 Pocket from CB @ Top (use for graded pockets)
PK15.1	Pocket from CB@Top-(use for nongraded pkts)	
		PK15.1 Pocket from CB @ Top (use for non-graded pockets)
PK15.2	Pocket Opening from CB-Along Seam	
		PK15.2 Pocket from CB - Along Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK15.3	Pocket frm CB @ Bottom (use for graded pocket)	
		PK15.3 Pocket from CB @ Bottom (use for graded pockets)
		←
PK15.4	Pocket frm CB @ Bottom (use for non-graded pocket)	
		PK15.4 Pocket from CB @ Bottom (use for non-graded pockets)
PK16	Pocket Height @ Center	
		PK16 Pocket Height @Center

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK17	Pocket Height @ Sides	
		PK17 Pocket Height @Sides
		·
DICAG	Postor Flor Height & Control	
PK18	Pocket Flap Height @ Center	
		PK18 Pocket Hap Height @Center
		<u> </u>
PK19	Pocket Flap Height @ Sides	
		PK19 Pocket Hap Height @ Sides
		<u> </u>
		*

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK20	Pocket Height @ Center from Top Flap	
		PK20 Pocket Height @Center from Top Hap
PK21	Pocket Height @ Sides from Top Flap	
		<u>PK21 Pocket Height @ Side from Top Hap</u>
		<u> </u>
PK22	Pocket Width @ Top	
		<u>PK22</u> Pocket Width @Top
		resided mane ap
		<u> </u>

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General
Product: W1 Tolerance

Size Range: XS-XXL **Ref Code Description / How 2 Measure Image** PK23 Pocket Width @ Bottom PK23 Pocket Width @ Bottom PK24 Pocket Flap Width @ Top PK24 Pocket Flap Width @ Top PK25 Pocket Flap Width @ Bottom PK25 Pocket Flap Width @Bottom

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK26	Welt or Besom Pocket Height	
		<u>PK26 Welt or BeesomPocket Height</u>
		↑
		↓
		^
		——
PK27	Welt or Besom Pocket Opening-Seam to Seam	
		PK27 Welt or Beesom Pocket Opening - Seam to Seam
		<u> </u>
		<u></u>
PIKOO	D 1 10 : / V 1100 / 40 III	
PK28	Pocket Opening-(on seam)-from HPS-(over 10")	•
		PICSPocket Opening (on-seam) from IFS - over 10 inches

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK29	Pocket Opening-(on seam)-from Top Waist	
		PK29 Pocket Opening (on-seam) from Top of WB
PK29.1	Pocket Opening-(on seam)-from Bottom WB	
		PK29.1 Pocket Opening (on-seam) from Bottom of WB
		3
PK30	Desket Opening (on peem)	
PK30	Pocket Opening-(on seam)	
		PK30 Pecket Opening (on-seam)
		<u> </u>

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code Description / How 2 Measure Image PK31 Pocket Bag Depth from Opening PK31 Bag Depth from Opening PK32 Pocket Bag Width (@center) from Opening PK32 Pocket Bag Width (@center) from Opening PK35 Pocket from Bottom Opening PK35 Pocket from Bottom Opening 0 0 0

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PK36	Coin Pocket Height (Exposed)	
		PK36 Coin Pocket Height Exposed
		<u> </u>
	T	
PK37	Coin Pocket Height @ CF Side (Exposed)	
		PK37 Coin Pocket Height @CF Side Exposed
PK38	Coin Pocket Height @ SS Side (Exposed)	
1 100	Controcket rieight & 33 Side (Exposed)	PKS8 Crin Proket Height @SS Side Exposed
		·

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code PK39	Description / How 2 Measure Coin Pocket Width (Exposed)	PK99 Coin Prodect Width Expresed
PL01	Pleat from CF	PLOI Pleat from CF
PL02	Pleat from CB	PLO2 Pleat from CB

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
PL03	Pleat Spacing Apart-Fold to Fold	
		PL03 Pleat Spacing Apart - Fold to Fold
		\longleftrightarrow
		
PL04	Pleat Depth-(flat)	
		PL04 Pleat Depth
		<u>→</u>
PL05	Diagt Danth (Flat) from OF @ Valva Coom	
PL05	Pleat Depth-(Flat)-from CF @ Yoke Seam	PL05 Reat Depth-(Rat)-from CF @Yoke Seam
		OF CF
		GF -

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PL05.1	Pleat Depth-(Flat)-from CB @ Yoke Seam	PL05.1 Pleat Depth-(Flat)-from CB @ Yoke Seam
PL06	Pleat Depth-(Flat)-from CF @ Bottom Opening	PL06 Reat Depth-(Rat)-from OF @ Bottom Opening OF OF
PL06.1	Pleat Depth-(Flat)-from CB @ Bottom Opening	PLO6.1 Pleat Depth-(Rat)-from CB@Bottom Opening CB CB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PL07	Sleeve Pleat From Opening	PLO7 SLEEVEPLEAT FROM OPENING
PL08	Stitched Pleat Length	
		PLOS Pleat Stitch Length the state of the
PM01	Peplum Height @ CF	
		PMOI Peplum Height @CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PM02	Peplum Height @ SS	
		PM2 Peplum Hight @SS
PM03	Peplum Height @ CB	
		PMB Peplum Height @CB
PP01	Print Placement from HPS-(under 10")	
		Prol Print Pacement from HFS- (under 10") Print P

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PP01.1	Print Placement from HPS-(over 10")	
		PPOI.1 Print Placement from IPS - (over 10") Print Print
PP02	Print Placement from CF	
		Print Placement from CF
PP03	Print Placement from CB	P103 Print Placement from CB
		Pirt

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PP04	Print Placement from Top Pocket	
		Protest Protest Protest Protest Protest
PP05	Print Placement from SS	
		PFOS Print Placement from SS
		Pirt
PP06	Print Placement from Bottom Opening	
		Prof. Print Placement from Bottom Opening Print Print

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PP07	Print Placement from Sleeve Opening	
		PP07 Print Placement from Sleeve Opening
PP08	Print Placement from Shoulder Seam	
PP08	Print Placement from Shoulder Seam	PP08 Print (on sleeve) Placement from Shoulder Seam
		Engl.
PS01	Princess Seam from HPS @ Front Armhole	
		PSOI Princess seamfrom HPS @ Front Amhole HPS HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PS02	Princess Seam from CF @ Neck Seam	PS02 Princess searnfromCF @ Neck Searn
PS03	Princess Seam from CF or CB @ Shoulder Seam	PS03 Princess seamfromCF or CB @Shoulder Seam
PS04	Princess Seam from CF @ Raglan Seam	PS04 Princess searnfrom CF @ Ruglan Searn

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PS05	Princess Seam from CF @ Yoke Seam	PSOS Princess Seamfrom Gr @ Yoke Seam
PS06	Princess Seam from CF @ Chest	PS06 Princess scamfromCF @Chest
PS07	Princess Seam from CF @ Waist	PS07 Princess searnfrom CF @ Waist

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PS08	Princess Seam from CF @ Top Pocket	
		PS08 Princess searn from CF @ Top Pocket
PS09	Princess Seam from CF @ Bottom Opening-Along Curve	
		PS09 Princess seamfrom CF@ Bottom Opening - Along Curve
		Es Res
PS10	Princess Seam from CF @ Bottom Opening-Straight	
		PS10 Princess seam from CF @ Bottom Opening - Straight
		G R

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code PS11	Princess Seam from HPS @ Back Armhole	Image PSII Princess seamfrom HPS @ Back Amhole HPS
PS12	Princess Seam from CB @ Neck Seam	PS12 Princess scarnfrom CB @ Neck Scarn
PS13	Princess Seam from CB @ Raglan Seam	PSI3 Princess seamfrom CB @ Raglan Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PS14	Princess Seam from CB @ Yoke Seam	PS14 Princess Searmfrom CB @ Yoke Searm
PS15	Princess Seam from CB @ Chest	
		PS15 Princess searmfrom CB @ Chest
PS16	Princess Seam from CB @ Waist	
		PS16 Princess searmfrom CB @ Waist

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PS17	Princess Seam from CB @ Bottom Opening-Along Curve	
		PSI7 Princess seamfrom B @ Bottom Opening - Along Curve B B B B B B B B B B B B B B B B B B B
PS18	Princess Seam from CB @ Bottom Opening-Straight	
		PSI8 Princess seamfrom (B @ Bottom Opening - Straight
PT01	Front Rise from Top Waist	PIOI: FRONT RISE FROM TOP WAIST TOP WASTOR TO PUBLISHED. BACK FRONT

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
PT01.1	Front Rise From Bottom of WB	PIOLI: FRONT RISE FROMBOTTOM WAIST
		CF PIO1.1
PT02	Back Rise from Top Waist	PHD: BACK RISE FROM TOP WAIST TOPWING TOPWIEME. BACK BACK FHONT
PT02.1	Back Rise From Bottom of WB	P1021: BACK RISE FROMBOTTOMWAIST
		CB PIO1.1

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code **Description / How 2 Measure Image** PT03 Thigh @ 1" Below Crotch PI03 Thigh @ 1" Below Crotch Lay one entire leg flat. At 1" down from crotch indicated on spec, measure straight across the leg from fold to fold, or crease to crease. PT03 PT04 Thigh @ " Below Crotch PT04 Thigh @ "Below Crotch Lay one entire leg flat. At distance down from crotch indicated on spec, measure straight across the leg from fold to fold, or crease to crease. Specified Knee @ __" Below Crotch PT05 Knee @__" Below Crotch Lay one entire leg flat. At distance down from crotch indicated on spec, measure straight across the leg from fold to fold, or crease to crease. Specified Distance PT05

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
PT06	Leg Opening-(for inseams over 6")	
Lay the bottom to crease.	n of the pant leg flat. Measure straight across thew bottom opening from fold to fold, or crease	PIO61 eg Opening - (for inseams over 6")
PT07	Leg Opening-(for inseams under 6")	P107 Leg Opening - (for inseams under 6")
to crease.		PIO7
PT08	Inseam-(22" or Longer) leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down	PIO8 Inseam- (22" or longer)
to the bottom	of the garment along the seam.	PIOS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT08.1 Lay one entire to the bottom	Inseam w/ Cuff Rolled Up-(22" or Longer) e leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down of the garment along the seam, including cuff.	PT08.1 Inseamw/ Cuff Rolled Up- (22" or longer) PT08.1
PT08.2 Lay one entire to the bottom	Inseam w/ Cuff Unrolled-(22" or Longer) e leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down of the garment along the seam, with cuff unrolled.	PIOS 2 Inseamw Cuff Unrolled- (22" or longer) PIOS 2 top cuff finished placement after fold up fold top cuff
PT08.3	Inseam (men's gang grade)	PTO&1

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code Description / How 2 Measure **Image** PT09 Inseam-(under 6") Lay one entire leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down PT09 - Inseam(under 6') to the bottom of the garment along the seam. PT09.1 Inseam w/ Cuff Rolled Up-(under 6") Lay one entire leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down PT09.1 - Inseam w/ Cuff Rolled Up (under 6") to the bottom of the garment along the seam, including cuff. PT09.2 Inseam w/ Cuff Unrolled-(under 6") Lay one entire leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down PT09.2 - Inseam w/ Cuff Unrolled (under 6") to the bottom of the garment along the seam, with cuff unrolled. TOP CUFFEINISHED PLACEMEN

TOPCUFF

Company: ANTHROPOLOGIE/URBAN - NEW Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
PT09.3	Inseam-(6" to 21")	NYMO2 I WWW.Cliv. 2015
Lay one entire to the bottom	e leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down of the garment along the seam.	PIO9.3 - Inseam(6" to 21")
PT09.4	Inseam w/ Cuff Rolled Up-(6" to 21") e leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down	PI09.4 - Inseamw/ Cuff Rolled Up (6" to 21")
to the bottom	of the garment along the seam, including cuff.	
PT09.5	Inseam w/ Cuff Unrolled-(6" to 21")	PIO9.5 - Inseam w/ Cuff Unrolled (6" to 21")
to the bottom	e leg flat, with inseam facing you. Measure from where the crotch seam joins the inseam down of the garment along the seam, with cuff unrolled.	TOPOLIF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT10	Outseam from Top Waist-(22" or Longer)	PF10 - Outseamfrom Top Weist (22" or Longer)
PT10.1	Outseam from Top Waist w/Cuff Rolled Up-(22"or L)	PT10.1 - Outseamfrom Top Waist w/ Ouff Rolled Up (21" or Longer)
PT10.2	Outseam from Top Waist w/Cuff Unrolled-(22"or L)	PF10.2 - Outseamfrom Top Weist w/ Cuff Unrolled (22" or Longer)
		TEPCHENSHORAGIMENT RIDDINE TEPCHE

General

W1 Tolerance

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: Size Range: XS-XXL **Product:**

Ref Code	Description / How 2 Measure	Image
PT11	Outseam from Top Waist-(under 6")	PT11 - Outseam from Top Waist (Under 6')
PT11.1	Outseam from Top Waist w/Cuff Rolled Up(under 6")	PT11.1 - Outseamfrom Top Waist w Ouff Rolled Up (Under 6")
PT11.2	Outseam from Top Waist w/Cuff Unrolled-(under 6")	PT11.2 - Outseamfrom Top Waist w/ Cuff Unrolled (Under 6')

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT11.3	Outseam from Top Waist-(6" to 21")	PT11.3 - Outseamfrom Top Weist (6' to 21")
PT11.4	Outseam from Top Waist w/Cuff Rolled Up(6"to21")	PT11.4 - OutseamfromTop Waist w/ Ouff Rolled Up(6" to 21")
PT11.5	Outseam from Top Waist w/Cuff Unrolled-(6"to21")	PT11.5 - Outseamfrom Top Waist w/ Cuff Unrolled (6" to 21")
		TOPCHFINSHDRAGMENT

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT12	Back Knee Seam from Bottom Opening	PT12 - Back Knee SeamfromBottomOpening
PT13	Front Leg Seam from CF Seam @ Waist	
1113	Thom Leg Seam nom of Seam & Walst	PT13 - Front Leg Seamfrom CF Seam @ Waist
PT13.1	Front Leg Seam from Inseam @ Leg Opening	PT13.1 - Front Leg SeamfromInseam@Leg Opening

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT14	Back Leg Seam from CB Seam @ Waist	PTI4-Back Leg SeamfromCB Seam@Waist
PT14.1	Back Leg Seam from Inseam @ Leg Opening	PT14.1 - Back Leg SeamfromInseam@Leg Opening
PT15	Side Front Leg Seam from CF Seam @ Waist	PT15 - Side Front Leg SeamfromCF Seam@Waist

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT15.1	Side Front Leg Seam from Inseam @ Leg Opening	PT151 - Side Front Leg Searmfrom Inseam@Leg Opening
		G G G
DT16	Side Book Log Soom from CE Soom @ Woigt	
PT16	Side Back Leg Seam from CF Seam @ Waist	PT16 - Side Back Leg Seamfrom CB Seam @ Waist
PT16.1	Side Back Leg Seam from Inseam @ Leg Opening	
		PT16.1-Side Back Leg SeamfromInseam@Leg Opening

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
PT17	Side Leg Panel Width @ Top & Bottom	PT17 - Side Leg Panel Width @Top & Bottom
		CF CB
RF01	Ruffle Height-Total	
		RFOI Raffile Height - Total
RF02	Ruffle Height-Exposed	
		Reffle Height - Exposed Reffle Exposed

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
RF03	Ruffle Width-Total	
		RFO3 Ruffle Width - Total
RF04	Ruffle Width-Exposed	
		RF04 Ruffle Width - Exposed
SH01	Shirring from CF	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SH02	Shirring from CB	
SH03	Shirring Width @	SHR: SHIRRING WIDTH @ SPECIFIED LOCATION
SK01	CF Waist Level Drop from CB	SK01 - CF Waist Level Drop from CB CB CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SK02	Waist Curve from SS to CB	SKO2 - Waist Curve from SS to CB CB SS SS CB
SK03	Skirt Length from Top Waist @ CB-(18" or over)	SK03 - Skirt Length from Top Waist @CB(18" or over)
SK03.1	Skirt Length from Top Waist @ CB-(under 18")	SKOB.1 - Skirt Length from Top Waist @CB (Under 18")

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SK04	Skirt Length from Top Waist @ SS-(18" or over)	SKO4 - Skirt Length from Top Waist @SS (18" or over)
SK04.1	Skirt Length from Top Waist @ SS-(under 18")	SKO4.1 - Skirt Length from Top Waist @SS (Linder 18")
SK05	Skirt Length From Top Waist @CF (18" or over)	SkDS - Skirt Length from Top Weist @CF(18" or over)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SK05.1	Skirt Length From Top Waist @CF (under 18")	
		SK08.1 - Skirt Length from Top Wiist @CF (Under 18") CB
avec.	<u></u>	
SK06	High Hip Placement from Top of Waist	SKO6 - Skirt High Hip Placement from Top Waist
		HCHHP Sairs SN06 SN06 FF18 CF
SK06.1	Low Hip Placement from Top of Waist	SKIX.1 - Skirt Low Hip Placement from Top Weist
		SQUAL

Company: ANTHROPOLOGIE/URBAN - NEW
Size Range: XS-XXL

Ref Code	Description / How 2 Measure	Image
SM01	Smocking from HPS @ CF	SMD1: SMOCKING FROM HPS @ CF HPS
SM02	Smocking from HPS @ SS	SMD2: SMOCKING FROM HIPS @SS
SM03	Smocking from HPS @ CB	SMD: SMOCKING FROMHPS @ CB
		##S

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SM04	Smocking from CF	SMM: SMOCKING FROMCE
SM05	Smocking Height-(eval stch gauge & grade accrdly)	SMD5: SMOCKING HEIGHT
SM06	Smocking Width (non-graded option)	SMD6: SMOCKING WIDTH

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SM07	Smocking Width @ Top- (graded option)	SMD7: SMOCKING WIDTH@TOP
SM08	Smocking Width @ Bottom-(graded option)	SMI®: SMOCKING WIDTH @ BOTTOM
SP01	Surplice Wrap Point from HPS	STOI: SURFLICE WRAPPOINT FROM HES

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SP02	Surplice Overlap Total Width @ Bodice Seam-und 4"	SHO-SI RH (CF (MAH APT) PAI WINTH
		SPO: SI RPI JCE OMPRI APTOFAL MIDTH @BODICESEAM(under-4")
SP03	Surplice Overlap Total Width @ Bodice Seam-ovr 4"	SDD-SI DDI ICE (MADI ADTOPA) MINTH
		SPRE SURPLICE OWER APTOFAL WIDTH © HOMCE SEAMforer 4")
SS02	Sleeve Length from Shoulder-Long ng the outside fold of the sleeve from the armhole seam at shoulder to the bottom of the sleeve.	
		SSO2 Sleeve Length from Shoulder-Long

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS02.1	Sleeve Length from Shoulder w/ Cuff Rolled Up-Long	
Measure strai of the cuff.	ght along the outside fold of the sleeve from the armhole seam at shoulder to the bottom edge	SSO2.1 Sleeve Length from Shoulderw/Cuff Rolled Up-Long
SS02.2	Sleeve Length frm Shoulder w/ Cuff Unrolled-Long	
	g the outside fold of the sleeve from the armhole seam at shoulder to the bottom edge of the	SS02.2 Sleeve Length from Shoulderw/Cuff Unrolled Up-Long
		Rap
SS03	Sleeve Length from Shoulder-Short	
Measure alon	g the outside fold of the sleeve from the armhole seam at shoulder to the bottom of the sleeve.	SSO3 Sleeve Length from Shoulder-Short

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS03.1	Sleeve Length from Shoulder w/Cuff Rolled Up-Short	
Measure along cuff.	g the outside fold of the sleeve from the armhole seam at shoulder to the bottom edge of the	SSO3.1 Sleeve Length from Shoulder w/Cuff Rolled Up-Short
SS03.2	Sleeve Length from Shoulder w/ Cuff Unrolled-Short	
	g the outside fold of the sleeve from the armhole seam at shoulder to the bottom edge of the	SS03.2 Sleeve Length from Shoulder w/Cuff Unrolled - Short
SS04	Sleeve Length from Neck Seam @ HPS-Long	SSO4 Sleeve Length from Neck Seam @HPS-Long
Lay garment f	lat with sleeve and shoulder free of wrinkles.	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code Description / How 2 Measure	Image
SS04.1 Sleeve Length from Neck Edge @ HPS-Long	SSO4.1 Sleeve Length from Neck Filge @HPS-Long
Lay garment flat with sleeve and shoulder free of wrinkles.	
SS05 Sleeve Length from Neck Seam @ HPS-Short	SSOS Sleeve Length from Neck Seam @HPS-Short
Lay garment flat with sleeve and shoulder free of wrinkles.	
SS05.1 Sleeve Length from Neck Edge @ HPS-Short	SS05.1 Sleeve Length from Neck Filge @HPS-Short
Lay garment flat with sleeve and shoulder free of wrinkles.	

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SS06 Lay the garmon	Undersleeve Length-Long ent flat. Measure straight along the underarm seam from the armhole to the hem of the sleeve.	SSO6 Undersleeve Length—Long SENEGRANG 1 PIECE SLIEWE 1 PRONT E BACK 7
SS07 Lay the garme	Undersleeve Length-Short ent flat. Measure straight along the underarm seam from the armhole to the hem of the sleeve.	SEMECHANG 2 PIECE SILFEVE RONT BACK
SS07.1	Sleeve Cap Height	SSO7.1 Sleeve Cap Height

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: W1 Tolerance

General

Size Range: XS-XXL **Product:**

Ref Code	Description / How 2 Measure	Image
SS08	Sleeve Cap Width @ 3" from Shoulder	
		SS08 Sleeve Cap Width @3" below Shoulder 3"
SS09	Sleeve Width @ 1" Below Armhole	
Lay the sleeve from underarr grain.	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle 1" down in from edge to edge, measure straight across from underarm to center fold, keeping cross	SSOO Sleeve Width @I" Below Amhole
SS10	Sleeve Width @ 13" from Shoulder	SS10 Sleeve Width @13" Below Shoulder
Lay the sleeve from underarr	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle to 13" down measure from underarm to center fold edge to edge, keeping/ following cross grain.	13'

Company: ANTHROPOLOGIE/URBAN - NEW Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SS11	Sleeve Width @ 5" up from Opening	
Lay the sleev sleeve hem,	re flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle 5" up from measure straight across from underarm to center fold, keeping cross grain.	SSI1 Sleeve Wickh @5" up from Opening
SS11.1	Sleeve Width @6" up from Cuff Seam	
		SSIL1 Sleeve Width @6" up from Cuff Seam
SS12 Lay the sleeve the cuff sean	Sleeve Width @ Top Cuff Seam re flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the top of in, measure straight across from underarm to center fold, keeping cross grain.	SS12 Sleeve Width @Top Cuff Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

GIE/URBAN - NEW Size Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SS13 Lay the sleeve the cuff seam, measuring.	Sleeve Width @ Top Cuff Seam-Relaxed flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the top of measure straight across from underarm to center fold. Do not stretch the cuff while	SS13 Sleeve Width @Top Cuff Szam-Relaved
SS14 Lay the sleeve the cuff seam, flatten out the	Sleeve Width @ Top Cuff Seam-Extended flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the top of measure straight across from underarm to center fold, while stretching the top cuff enough to gathers.	SS14 Sleeve Width @Top Ouff Scam Extended
SS15 Lay the sleeve, of the sleeve,	Sleeve Width @ Opening-Long If lat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold.	SS15 Sleeve Width @Opening- Long

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SS16	Sleeve Width @ Opening-Relaxed-Long	
Lay the sleeve, of the sleeve, measuring.	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold. Do not stretch the cuff while	SS16 Sleeve Width @Qpening Relaxed-Long
SS17	Sleeve Width @ Opening-Extended-Long	
Lay the sleev	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold, while stretching the cuff enough to	SS17 Sleeve Width @Oxening-Extended-Long
SS18 Lay the sleeve, of the sleeve,	Sleeve Width @ Opening-Along Curve-Long e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure from underarm to center fold, along the curve of the sleeve hem.	SS18 Sleeve Width @Opening-Along Curve Long

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SS19	Sleeve Width @ Opening-Short	
Lay the sleeve, of the sleeve,	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold.	SS19 Sleeve Width @Opening-Short
0000	Clasus Width @ Opening Delayed Chart	
SS20 Lay the sleeve, of the sleeve, measuring.	Sleeve Width @ Opening-Relaxed-Short e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold. Do not stretch the cuff while	SS20 Sleeve Width @Quening-Relaxed-Shart
SS21 Lay the sleeve, of the sleeve, flatten out the	Sleeve Width @ Opening-Extended-Short e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold, while stretching the cuff enough to gathers.	SS21 Sleeve Width @Opening-Extended-Short

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS21.1	Cap Sleeve Width @ Opening-Along Curve-Short	
Lay the sleeve, of the sleeve,	e flat. Eliminate all wrinkles under the arm. With the tape measure at a right angle at the hem measure straight across from underarm to center fold, along the curve of the sleeve hem.	SS21.1 Cap Sleeve Width @Opening-Along Gurve-Short ALON INTERSECT OF SLEEVE-HEMMITHAH ON FROM INVITED HEMMITHAH ON FROM I
SS21.2	Cap Sleeve Width @ Opening-Along Curve-Total	
	full circumference of the sleeve hem, following the curve of the sleeve.	SS21.2 Cap Sleeve Width @Opening-Along Curve-Total
SS22	Front Sleeve Hem from HPS @ Armhole-Straight	SS22 Front Sleeve HumfromHPS @ Armhole-Straight HPS HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS23	Front Sleeve Hem from SS @ Armhole-Along Curve	
		SS23 Front Sleeve Hamfrom SS @ Amthole-Along Curve
SS24	Back Sleeve Hem from HPS @ Armhole-Straight	SS24 Back Sleeve Hemifrom HFS @ Armhole Straight HFS
SS25	Back Sleeve Hem from SS @ Armhole-Along Curve	SS25 Back Sleeve HemfromSS @ Ambrile-Along Curve

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS26	Armhole Gusset Width Front to Back	SS26 Amthole Gusset width front to back
SS27	Armhole Gusset Height End to End	SS27 Amthole Gusset height end to end
SS28	Front Neck Length @ Raglan Slv.Edge	
		SS28 Front Neck Length @ Reglan Sleeve Fidee

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS28.1	Front Neck Length @ Raglan Slv.Seam	
		SS28.1 Front Neck Length @ Raglan Sleeve Seam
SS29	Back Neck Length @ Raglan Slv.Edge	
		SS29 Back Neck Length @ Reglan Sleeve Fides
SS29.1	Back Neck Length @ Raglan Slv.Seam	
		SS29.1 Back Neck Length @ Raglan Sleeve Seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
SS30	Total Raglan Sleeve Neck Length @ Edge RLXD	
		SS30 Total Reglan Sleeve Neck Length @ Files RLXD
SS30.1	Total Raglan Sleeve Neck Length @ Edge XTND	
		SSSO.1 Total Regian Sleeve Neck Length @Fitge XTND
SS31	Total Raglan Sleeve Neck Length @ Seam RLXD	SS3/Total Ragian Sleeve Neck Length @ ScamRLMD GF GB GB

Size Class:

General

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL Product: W1 Tolerance

Ref Code Description / How 2 Measure	Image
SS31.1 Total Ragian Sleeve Neck Length @ Seam XTND	SS31.1 Total Raglan Sleeve Neck Length @ Seam XTND GF GB SLEEVE
ST01 Strap Length-Total (extends to across back)	
Measure strap from bodice point to top of back bodice. ST01.1 Strap Length - Total (extends to back chest)	STOL - Strap Length Total BACKTOP BOOKE PRONT TOP BOOKE
Ottap Zorigan Total (oxtonide to back direct)	STOL 1 - Strap Length Total (extends to back chest) BACK (enterds to back chest)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
ST02	Strap Overlap from Top "o" Ring to Center Slider	
		SI02 - StrapOverlap from Top of "O" Ring to Center Slider
ST03	Strap Width-(1/2" or under)	
		SIOB - Susp Width 1/2" or Under
ST04	Strap Width-(5/8" to 1 3/8")	
		SI04 - Susp Width 58" to 1 38"

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
ST05	Strap Width-(1 1/2" or over)	
		ST05 - Strap Width 1 1/2" or Over
ST06	Front Straps Apart-Inside lat and measure from inside of strap edge to inside edge of other strap at top of bodice.	A It t -
zay gamon	tak and medeate norm mode of chap edge to mode edge of chief chap at top of bediet.	Alternate
		image
		-3 2
		0700 5
		ST06 - F
0707		
ST07 Lay garment	Back Straps Apart-Inside lat, back facing up, and measure from inside of strap edge to inside edge of other strap at top	
of bodice.		ST07 Back Straps Apart - Inside
		CB C

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
SW01	Stitches Per 1" Height	
		SW01 Stitches Per 1" Height
	1	
SW02	Stitches Per 1" Width	SW2 Stiches Per 1" Wath
		1"
SW03	Net Weight	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TB01	Tab Height	TB01: TABHFIGHT
		1
		*
TB02	Tab Height @ Center	TBO2: TABHEIGHT @CENIER
TB03	Tab Height @ Sides	TBO3: TABHFIGHT @ SIDES

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TB03.1	Tab Height Exposed w/Cuff Rolled Up	
		TB03.1 Tab Height Exposed w Outf Rolled Up
TB04	Tab Width	TBO4: TABWIDDH
TB05	Tab Width @ Top	
		TBOS: TAB WIDTH @ TOP

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TB06	Tab Width @ Bottom	TBOG: TAB WIDTH @BOTTOM
TB07	Tab from HPS @ CF	TB07: TAB FROMHPS @CF
TB08	Tab from HPS @ SS	TB08: TAB FROMHPS @ SS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TB09	Tab from HPS @ CB	TBO9: TAB FROMHPS @CB
TB10	Tab from CF	TBIQ TAB FROMCF
TB11	Tab from SS on Front	TBIL TAB FROMSS (NEWN)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TB12	Tab from SS on Back	TBI2 TAB FROMSSONBACK
TB13	Tab from Bottom Opening	TB13 TAB FROMBOTTOMOPENING
TK01	Tuck from CF	TKIZ TUCKFROMOF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TK02	Tuck from CB	
		TK02 TUCKFROMCB
		СВ
	1	
TK03	Tuck Spacing Apart-Fold to Fold	
		TKBTUCKSPACING APART - FOLD TO FOLD
		İ
TK04	Tuck Depth- Fold to Stitch	
		TK04 TUCKDEPTH-FOLDTOSITICH
		ina icentrii red iosiici
		İ

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TN01	Tunnel Height	TNOI: TUNNELHEICHI
TN02	Top of Tunnel Placement from HPS @	TNO2:TOP OF TUNNEL PLACEMENT HROMHPS @ HPS
TR01	Tier Placement from HPS-(under 10")	TROI _ THER PLACEMENT FROM HPS-(UNDER 10')

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TR02	Tier Placement from HPS-(over 10")	TRI2 _ TIER PLACEMEN'T FROM HPS- (OVER 10')
		HPS
TR03	Tier Placement from Shoulder	
		TRIS_HER PLACEMENT FROM SHOULDER
TR04	Tier Placement from Top Waist Seam	TR04TIER.PLACEMENT FROM TOP WAIST SEAM
		IST 2ND

Company: ANTHROPOLOGIE/URBAN - NEW Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
TR05	Tier Height-Exposed	
		TRIS _TIER HEIGHT - EXPOSED
TS01	Tie Placement from HPS	TSOLTIE PLACEMENT FROM HPS
		HES
TS02	Tie Height	TS02 - THE HEICHT
		I

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

	Size Range: NO ANE	
Ref Code	Description / How 2 Measure	Image
TS03	Tie Length- Each	TS03-TIELENGIH-EACH
TS04	Tie Spacing Apart @ CF-(graded)	TS04 THE SPACING APART @ CF
TS04.1	Tie Spacing Apart @ CF-(nongraded)	TSM THESPACING APART @ CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
TS05	Tie Spacing Apart @ CB-(graded)	TIME THE STRACTIVE ADALITE (ACD
		TSOS TIESPACINGAPART@CB
TS05.1	Tie Spacing Apart @ CB-(nongraded)	TS05 THE SPACING APART @ CB
		B
UG01	Waist @ Top Relaxed	UCO1

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG01.1	Front Waist (Thong)	
Measure alor	ng waistline @ top edge with elastic relaxed/extended or amount stretched as tech specified.	UCD1.1 Frunt Weist (thorg)
UG02	Waist @ Top Extended	
		extend till fabric is flat
UG03	Upper Front Width Placement from Crotch Seam	
Measure from	n crotch (back) seam up along CF line.	UG04

Company: ANTHROPOLOGIE/URBAN - NEW

Image
889 N
UG04.1 Upper Front Width (thoug) at specified distance from waist or crotch point

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG05 Measure from	Lower Front Width Placement from Crotch Seam crotch seam up along CF line.	UGO6
UG05.1	Lower Front Width Placement from Top Waist	DG06
UG06	Lower Front Width	UCO6,

Company: ANTHROPOLOGIE/URBAN - NEW Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
UG06.1	Lower Front Width (Thong)	
Measure acro	ss front panel from edge to edge at indicated distance from waist or crotch seam/point.	UGIGH Lower Frunt Width (thong) at specified distance from waist or crotch point
UG07	Front Crotch Width-Along Seam	
		UG07.1
UG07.1	Front Crotch Width @ Crotch Panel Edge	NO SEAMINGIBLE ON OUTSIDE

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG08	Narrowest Crotch Width Plcmnt from Bk Crotch Seam	ucos A S
UG09	Narrowest Crotch Width	ucos 8
UG10	Back Crotch Width Along Seam	BACK

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG11	Crotch Panel Length @ Center	LEGI TOTAL T
UG12	Upper Back Width Placement from Crotch Seam	UGI3
UG12.1 Measure from	Upper Back Width Placement from Top Waist n waist down along CB line.	LZ G G G G G G G G G G G G G G G G G G G

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code UG13	Description / How 2 Measure Upper Back Width	Image
UG14	Lower Back Width Placement from Crotch Seam	UG15
UG14.1 Measure from	Lower Back Width Placement from Top Waist n waist down along CB line.	LGI2

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG15	Lower Back Width	
		UGI5 VGI5
UG16	Front Panel Length from Top to Crotch Seam	
		Dept. 1
UG17	Back Panel Length from Top to Crotch Seam	DCIT TOTAL T

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG18	Side Length from Top @ Seam	NO SEAMINSIBLE ON OUTSIDE
UG18.1	Side Length from Top @ Fold	UG18.1
UG19	Leg Opening (1/2) Relaxed	UCH9

Company: ANTHROPOLOGIE/URBAN - NEW

Image
UC19.1 Thong Leg opening to point-relaxed
UG9.2 Thong Leg opening -total -relaxed
UG20 fabric flat

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG20.1 Measure along fully extended	Thong Leg Opening to Point - Extended g edge to edge of leg opening from waist to point at crotch area stretching slightly until fabric is	UC20.1 Thong Leg opening - extended
UG20.2 Measure along extended.	Thong Leg Opening Total - Extended g edge of leg opening from front waist to back waist stretching slightly until fabric is fully	UG20.2 Thong Leg opening-total -extended
UG21	Minimum Stretch @ Waist (1/2)	OVEHEXTEND UC21

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG22	Minimum Stretch @ Leg Opening (1/2)	
		UG22 Overrextend
11000.4	Min Obestello & Thomas Long Operation to Delicat	
UG22.1 Measure alor	Min Stretch @ Thong Leg Opening to Point ng edge of leg opening from waist to point at crotch area over-extending elastic.	
		U.22.1 Min. Stretch Thong Leg opening to point
UG22.2	Min Stretch @ Thong Leg Opening Total ng edge of leg opening from front waist to back waist over-extending elastic.	
		UC22.2 MinimumStretched Thong Leg opening-total

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
UG23	Thong Back Width	UG23 Thing Back Panel Width @specified distance from waist
UG24	Back Crotch Sean from Crotch Foldline	BACK back crotch seam from Crotch Foldline crotch fold line
VB01 Lay garment keeping the t	Body Length @ CB from HPS flat with back facing you. Measure from the high point of shoulder to the bottom of garment, ape measure parallel to the center back.	MEOI - Body Length @CB From HPS BACK

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB01a	CB length from hps 19in. to 24in	<u>VB0la−CB Length from HPS</u> (19" - 24" length)
		BACK
VB01b	CB length from hps 19in .or less	
VB02	Body Length @ CB from CB Neck	VB02 Body Length @CB from CB Neck
Lay garment t keeping the ta	lat with back facing you. Measure from the neck edge at center back to the bottom of garment, ape measure parallel to the center back.	
		BACKNE KLINE BACKNE KLINE A BACKNE KLINE BACKNE KLINE

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB02.1	CB Length from Raglan Peak	
		VHO2.1 CB Length from Reglan Peak
VB03 Lay garment the tape mea	Body Length @ CB from Armhole flat with back facing you. Measure from the armhole level to the bottom of garment, keeping sure parallel to the center back.	VB03 Body Length @CB from Armhole
		BACKNEKLINE
VB033	Peak Height @ CB	VB033 Peack Height @CB
		BACK

Company: ANTHROPOLOGIE/URBAN - NEW

Size Range: XS-XXL

Size Class: General
Product: W1 Tolerance

Ref Code Description / How 2 Measure Image VB03a CB Length from Armhole 10in. to 15.5in. VB03b CB Length from Armhole 10in.or less VB03a CB length from Armhole 10" -15 1/2" VB04 Back Neck Drop-HPS to Seam-(under 3") VB04 Back Neck Drop-HPS to Seam (Under 3")

Company: ANTHROPOLOGIE/URBAN - NEW

Description / How 2 Measure	Image
Back Neck Drop-HPS to Edge-(under 3")	VB04.1 Back Neck Drop-HPS to Edge-(Under 3") HPS.
	BACK
Back Neck Drop-HPS to Seam-(over 3")	VB04.2 Back Neck Drop-HPS to Seam-(Over 3") HPS BACK
Back Neck Drop-HPS to Edge-(over 3")	VB04.3 Back Neck Drop-HPS to Edge-(Over 3") HPS BACK
	Back Neck Drop-HPS to Edge-(under 3") Back Neck Drop-HPS to Seam-(over 3")

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB05	Back Neck Drop-from Armhole	VB05 Back Neck Drop - firom Amthole FRONTNEKLINE BACKNEKLINE DO NOT THE PROPERTY OF THE PRO
VB06	Back Neck Drop-Excluding Straps	MBY6 Back Neck Drop Excluding Straps BACK
VB06.1	Back Neck Drop from Raglan Peak	VBOS.1 Back Neck Drop from Raglan Peak

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB06.2	Back Neck Drop to Seam from Raglan Peak	
		VB06.2 Back Neek Drop to Seamfrom Raglan Peak
VB07	Across Back Placement from HPS	VB07 Across Back Placement from HPS
		BACK
VB07.1	Across Back Placement from Raglan Peak	
		VB07.1 Across Back Placement from Raglan Peak

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB08	Bodice/ Waist Seam from HPS @ CB	VEOS Baxice Scarnfrom HFS @CB
VB09	Bodice/ Waist Seam from Back Neck @ CB	VBO9 Bodice Seam from Back Neck @CB RENTREKINE BACKNECKINE BACKNECK
VB10	Bodice/ Waist Seam from Armhole @ CB	WBIO Bodice Seamfrom Amhole @CB FRONT NECKLINE BACK NECKLINE YOU BE REAL TO SEA THE

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VB11	Back Raglan Seam from HPS @ Neck Seam	
		MB11 Back Raglan Seamfrom HPS @ Neck Seam HPS BACK
VB44	Back Shirt Tail Height	
		VB44 Beck Shirt Tail Height IMAGINARY LINE
VF01 Measure dista	Shoulder Forward Seam from HPS @ Neck ance from shoulder fold (true HPS) to shoulder seam.	MOI Shoulder Foward Seam From HES @ Neck Imaginary HPS shoulder seam seam

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF02	Shoulder Forward Seam from HPS @ Armhole	MO2 Shoulder Foward Seam From HPS @ Armhole Imaginary HPS shoulder seam seam
VF03 Measure the of HPS line.	Shoulder Slope from HPS to Armhole Seam@Back Fold listance between the imaginary HPS line and top of armhole, keeping tape perpendicular to	VROS Shoulder Slope From FPS to Armhole Seam @ Back Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam @ Back Implemy FPS of Armhole Seam @ Back Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam Implemy FPS of Armhole Seam
VF03.1	Shoulder Slope from HPS @ Specified Placement	WR03.1 - Shoulder Slope from HPS @ Specified Placement WR03.2 - Shoulder Slope Placement from CB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF03.2	Shoulder Slope Placement from CB	VF03.1 - Shoulder Slope from HPS @ Specified Placement VF03.2 - Shoulder Slope Placement from CB
VF03.3	Shoulder Slope from HPS @ Shldr. Sm. to Armhole Sm	MF03.3 Shoulder Slope From HFS @ Shidt. Sm to Armhole Seam shoulder seam seam
VF04 Lay garment the natural sh parallel to the	Body Length @ CF from HPS lat with front facing you. Measure from the high point of shoulder or at seam from the fold of oulder (as specified on spec sheet) to the bottom of garment, keeping the tape measure center front.	MO4-Body Length @CFfrom HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF04.1	Body Length @ CF from HPS (Bodysuit)	
		VF04.1 - Body Length @CF from LPS (Bodysuit)
VF04.2	Body Length @ SS from HPS	
		VF04.2 - Body Length @SS from HPS
VF04.3	Body Length @ CF from Neck Edge	
		MO4.3 - Bxdy Length @CF from Neck Edge

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF04.4	Body Length @ CF from Neck Seam	
		VF04.4 - Body Length @CF from Neck Seam
VF04.5	SS Length from HPS (19.5 to 24.5)	
		VF04.5 - SS Length from FPS 19.5"-24.5"
VF04.6	SS Length from HPS (19.5 tor less)	
		MO4.6 - SS Length from HPS 19.5 'or less

Company: ANTHROPOLOGIE/URBAN - NEW Size Range: XS-XXL

OGIE/URBAN - NEW Size Class: General
Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
VF04a	CF length from hps 19.5 in - 24.5 in	
VF04b	CF length from hps 19.5 or less	
VF05	Body Length @ CF from Top Bodice	
	flat with front facing you. Measure from the highest point of the bodice to the bottom of ping the tape measure parallel to the center front.	
garment, kee	ping the tape measure parallel to the center front.	VF05 - Bady Length @CF from Top Bodice

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF05.1	Body Length @ CF from Top Bodice (Bodysuit)	
		VF05.1 - Body Length @CF-from Top Bodice(bodysait)
VF05.2	CF Length from Raglan Peak	
		VF05.2 CF Length from Raglan Peak
VF05a	CF Length fromTop Bodice (12in to 17.5in)	

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF05b	CF Length fromTop Bodice (12in or less)	
VF06	Body Length @ CF from Armhole	
tape measure	lat with front facing you. Measure from the armhole level to the bottom of garment, keeping the parallel to the center front.	
		VF06 - Body Length @CF from Armhole
VF06.1	Body Length @ CF from Armhole (Bodysuit)	
V1 00.1	Body Longuit © Of Hom / Hillings (Bodyoun)	
		VFUs.1 - Body Length @CF firom AH (bodysuit)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF06.2	Body Length @ SS from Armhole	
		MT062- Body Length @SS from Amhole
	1	
VF06.3	SS Length from Armhole 10in - 15.5in	
VF06.4	SS Length from Armhole 10in or less	
	g	
		VF064 - SS Length from Amrhole 10'or less
		THOSE OF THE POPULATION AND ADDRESS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF06a	CF Length from Armhole 10in -15.5in	
VF06b	CF Length from Armhole 10in or less	
		VF06b - CF Length from Armhole 10" or less
	Is	
VF07	Peak Height @ CF	
		<u>VF07 - Peak Height @CF</u>
		i di

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF08	Front Neck Drop- HPS to Seam (under 5")	
VF08.1	Front Neck Drop - HPS to Edge (under 5")	
		VF08.1 Front Neck Drop - HPS Edge (Under 5")
		v108.1 110iii Neek Diop - Hrs Lage (Gluei 3)
VF09	Front Neck Drop- HPS to Seam (under 10")	
	flat and measure from high point of shoulder vertically to center front neck seam.	
		VF09 Front Neck Drop - HFS to Seam (Under 10")

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class:

General Size Range: XS-XXL **Product:** W1 Tolerance

Ref Code	Description / How 2 Measure	Image
VF09.1	Front Neck Drop- HPS to Edge (under 10")	
Lay garment	flat and measure from high point of shoulder vertically to center front neck edge.	VF09.1 Front Neck Drop - Reglans to Neck Seam
VF10	Front Neck Drop- HPS to Seam (over 10")	
Lay garment	flat and measure from high point of shoulder vertically to center front neck seam.	VF10 Front Neck Drep - HFS to Searm (Over 10")
VF10.1	Front Neck Drop- HPS to Edge (over 10")	VF10.1 Front Neck Drop - HPS Edge (Over 10")
Lay garment	flat and measure from high point of shoulder vertically to center front neck edge.	

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
VF11	Front Neck Drop-Top Bodice to Seam	
Lay garment fl	at and measure from the top of the bodice vertically to center front neck seam.	MF11 - First Neck Drop - Top Bediec to Seam
VF11.1	Front Neck Drop-Top Bodice to Edge at and measure from the top of the bodice vertically to center front neck edge.	
		MF11.1 - Fiort Neck Drop - Top Bediec to Files
VF11.2	Front Neck Drop to Edge from Raglan Peak	VF11.2 Front Neck Drop to Filge from Raglan Reak

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code Description / How 2 Measure	Image
VF11.3 Front Neck Drop to Seam from Raglan Peak VF12 Front Neck Drop- from Armhole	MF11.3 Front Neck Deep to Scarmfrom Regian Peak
Lay garment flat and measure from the armhole level vertically to center front neck edge.	WF12- Front Neck Deep from Armhole
VF13 Front Neck Drop- Excluding Straps Lay garment flat and measure from the top of the bodice point vertically to center front neck edge.	VF13 Front Neck Drop - Excluding Straps

General

W1 Tolerance

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: Size Range: XS-XXL **Product:**

Ref Code	Description / How 2 Measure	Image
VF14	Funnel Neck Height from HPS	
		VF14 - Furnel Neck Height from HPS
VF15	Front Neck Height from Armhole	
		VF15 - Front Neck Height from Armhole
		VID-HOLLECTED HIGH-VIIIA
VF16	Bodice/Waist Seam from HPS @ CF	
Lay garment	flat with front facing you. Measure straight from high point of shoulder to the bodice seam	VF16-Bodice Scamfrom HPS @CF
along center	TOTIL.	THE BARCEAN MAIN TO CO.

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

VF17 Bodice/Waist Seam from HPS @ Dart	Ref Code	Description / How 2 Measure	Image
the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust point. White the fullest bust bust point. White the fullest bust point. W			
Lay garment flat with front facing you. Measure straight from high point of shoulder to the bodice seam along the side seam. VF18 - Bodice Seamfrom FIFS @SS	Lay garment the fullest bu	flat with front facing you. Measure straight from high point of shoulder to the bodice seam at st point.	
Lay garment flat with front facing you. Measure straight from high point of shoulder to the bodice seam along the side seam. VF18 - Bodice Seamfrom FIFS @SS	VF18	Bodice/Waist Seam from HPS @ SS	
SI.E. SEAM	Lay garment	flat with front facing you. Measure straight from high point of shoulder to the bodice seam	VF18 - Bodice SzamfromHPS @ SS
			SICE SERM
VF19 Bodice/Waist Seam from Top Bodice @ CF			
Lay garment flat with front facing you. Measure straight from the top of the bodice to the bodice seam along center front. MF19- Bodice Seamfrom Top Bodice (point) @ OF		nat with none racing you. Measure straight from the top of the bodice to the bodice seam along	VF19 - Bodice Seamfrom Top Bodice (point) @CF

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF20 Lay garment the fullest pa	Bodice/Waist Seam from Top Bodice @ Dart flat with front facing you. Measure straight from the top of the bodice to the bodice seam along t of the bust.	VEO-Bodice ScamfromTop Bodice (point) @Dart Dartt, PRINCESSEAM SECRED TUCK CRPLEAT ROLD
VF21 Lay garment the side sear	Bodice/Waist Seam from Top Bodice @ SS flat with front facing you. Measure straight from the top of the bodice to the bodice seam along n.	VF21 - Bodice Seamfrom Top Bodice (point) @SS
VF22 Lay garment center front.	Bodice/Waist Seam from Armhole @ CF flat with front facing you. Measure straight from the armhole level to the bodice seam along	M-22 - Bodice Seamfrom Armhole @ CF

Company: ANTHROPOLOGIE/URBAN - NEW

MF23 - Bxdice Seamfrom Amhole @ Dart Dartr, SPECIFIED TUCK OR REAT FOLD
VF24-Bxdice Scamfrem Amtrole @SS
VF29 - Across Chest Placement from HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF29.1	Chest Placement from HPS	
		MF29.1 Chest Placement from HPS
V500.0	I	
VF29.2	Across Chest Placement from Raglan Peak	VF29.2 Front Neck Drop to Fisher from Regian Peak
VF30	Waist Placement from HPS	VF30 - Waist Placement from HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF31	High Hip Placement from HPS	MF31 - High Hip Placement from HFS
VF32	Low Hip Placement from HPS	VF32-Low Hip Placement from HPS
VF33	Chest Placement from Top Bodice	VF33 - Chest Placement from Top Bodice (point)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF34	Waist Placement from Top Bodice	
		MF34 - Whist Placement from Top Bodice (point)
	1	
VF35	High Hip Placement from Top Bodice	VF35 - High Hip Placement from Top Bodice (point)
VF36	Low Hip Placement from Top Bodice	
		VF36- Low Hip Placement from Top Bodice (point)

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF37	Chest Placement from Armhole	
		VF37 - Chest Placement from Armbole
	T	
VF38	Waist Placement from Armhole	VF38 - Waist Placement from Armhole
VF39	High Hip Placement from Armhole	VF39- High Hip Placement from Amthole

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF40	Low Hip Placement from Armhole	
		VF40 - Low Hip Placement from Amhole
VF41	High Hip Placement from Top Waist	
		VF41 - High Hip Placement from Top Weist OF
VF41.1	High Hip Placement from Bottom WB	
		VF41.1 - High Hip Placement from Bottom WB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code Description / How 2 Measure	Image
VF42 Low Hip Placement from Top Waist	
	VF42 - Low Hip Placement from Top Waiss OF
VF42.1 Low Hip Placement from Bottom WB	
	VF42.1-Low Hip Placement firomBottomWB
VF43 Front Raglan Seam from HPS @ Neck	MF43 - Front Reglan Seamfrom HPS @ Neck Seam HPS

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF44	Front Shirt Tail Height	
		VE44 Front Shint Tail Height IMGINARY LINE
VF45	Across Chest Placement from Armhole	VF45 Across Chest Placement from Armhole
VF46	Bodice Height @ Tie End from Armhole	VF46 Bodice Height @ Tie Frd from Amhole

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VF47	Bodice Height @ Seam from Armhole (inside edge)	WE47 Bodice Height @ Seamfrom Armhole (inside edge)
VF48	Bodice Height @ Seam from Armhole (outside edge)	VF48 Bodice Height @ Seamfrom Armhole (outside edge)
VS01	Vent Opening Height	VSDI VENI OPENINGHEICHT

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
VS02	Slit Opening Height	VS02 SLIT OPENING HEIGHT
VS03	Sleeve Vent Height @ Point	VSB SLEEVE VENT HEIGHT @POINT
VS04	Sleeve Vent Height @ Side	VS04 SLEEVE VENT HEIGHT @SIDE

Company: ANTHROPOLOGIE/URBAN - NEW

General

Ref Code	Description / How 2 Measure	Image
VS05	Sleeve Vent Width	VSUS SLEEVE VENT WIDTH OO O O O O O O O O O O O
WB01 Lay garment	WB-(top seam)- from HPS @ CF flat, front facing up. Measure straight from HPS to the top waistband seam, vertically along CF.	WB01 WB-(top scam)- from FSP@CF
WB02 Lay garment SS.	WB-(top seam)- from HPS @ SS flat, front facing up. Measure straight from HPS to the top waistband seam, vertically along the	WHOI WB-(tep seam)- from HSP@SS

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code Description / How 2 Measure	Image
WB03 WB-(top seam)- from HPS @ CB	
Lay garment flat, back facing up. Measure straight from HPS to the top waistband seam, vertically along CB.	WHO3 WB-(tep seam)- from HS@CB
WB04 WB Height Measure Outside Finished Height of Waist Band.	WB04 WB Height
	WB04
WB05 WB Height @ CF	WP5-WPW-1-0-G
Measure CF Finished Height of Waist Band.	WB05 WB Height @CF

Company: ANTHROPOLOGIE/URBAN - NEW
Size Range: XS-XXL

Size Class: General

Product: W1 Tolerance

Ref Code	Description / How 2 Measure	Image
WB06	WB Height @ SS	
Measure SS F	inished Height of Waist Band.	WB06 WB Height @SS
WB07	WB Height @ CB	
	Finished Height of Waist Band.	WB07 WB Height @CB
WB08	WB Extension (overlap) from Fly Edge @ Center	WB08- WB Extension(overlap) from Hy Edge @ Center

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
WB09	WB Extension (overlap) from Fly Edge @ Top & Btm	WB09- WB Extension(overlap) from Hy Edge
		@Rop ⊥
		<u></u>
		I
YK01	Front Yoke Seam from HPS @ Neck	
	HPS imaginary line to yoke seam at neck seam/edge	YKD1 Front Yoke Seamfrom HPS @ Neck
		BMCENNRY LINE-188 BMCENNRY LINE- Yole warn @ Nek
		Yoles seam (# Need:
YK01.1 Measure from	Front Yoke Seam Point from HPS HPS imaginary line to yoke seam point.	YK01.1 Front Yoke Seam Point from HPS
		INVERVEY LINE- HIS.
		IMAGENMEY LINE.

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
YK02	Front Yoke Seam from HPS @ CF	
Measure from	HPS imaginary line to yoke seam at CF.	INDICENSITY LINE: 1488 IMMERNICY LINE: 1488
YK03	Front Yoke Seam from HPS @ Armhole	
	HPS imaginary line to yoke seam at Armhole	YK03 Front Yoke Seamfrom HFS @ Am hole
		IMCINACYLINE:
YK04	Back Yoke Seam from HPS @ Neck	
Measure from	HPS imaginary line to yoke seam at neck seam/edge	NACENSAY LINE - 1888 BACENSAY LINE - 1888

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
YK04.1	Back Yoke Seam Point from HPS	
Measure from	n HPS imaginary line to yoke seam point	YKO4.1 Back Yoke ScamPoint from HFS IMAGINARYLINE IMAGINARYLINE
YK05	Back Yoke Seam from HPS @ CB	
	n HPS imaginary line to yoke seam @ CB	NACENAVILNE-185 IMCENAVILNE-185 IMCENAVILNE-185 IMCENAVILNE-185
YK06 Measure from	Back Yoke Seam from HPS @ Armhole n HPS imaginary line to yoke seam @ armhole.	
		PACENCYLINE: HS BACENCYLINE: HS BACENCYLINE: HS BACENCYLINE: HS BACENCYLINE: HS BACENCYLINE: HS

Company: ANTHROPOLOGIE/URBAN - NEW

Description / How 2 Measure	Image
Front Yoke Flap from HPS-Straight	
	YK07 - Front Yoke Flap from HPS-Straight
Front Volve Flow from LIDO @ Averbala	
	YK08-Front Yoke Hap from HPS @ Amitole
Back Yoke Flap from HPS @ CB	YKOD-Back Yoke Hap from HPS @CB
	Front Yoke Flap from HPS @ Armhole

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
YK10	Back Yoke Flap from HPS @ Armhole	
		YKIO- Back Yoke Hap from HPS @ Amhole
V((4.4	V	
YK11 Measure at 0	Yoke Seam from Top Waist @ CF center Front from top waistband edge to yoke seam.	YK11 Yoke Scamfrom Top Weist @CF
		G-
YK12 Measure at S	Yoke Seam from Top Waist @ SS ide Seam from top waistband edge to yoke seam.	YK12 Yoke Seamfrom Top Weist @SS
		\$5

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: General

Size Range: XS-XXL Product: W1 Tolerance

Ref Code	cription / How 2 Measure Image	
YK12.1	Yoke Seam From Bottom WB @ SS	
		YK12.1 Yoke Semfrom Bottom Waist @SS
YK13	Yoke Seam from Top Waist @ CB	
	Center Back from top waistband edge to yoke seam.	YK13 Yoke Seamfrom Top Waist @CB
		8
YK13.1	Yoke Seam From Bottom WB @ CB	
		YK13.1 Yoke Seamfrom Bottom Waist @CB

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
Ref Code YK14	Raglan Yoke Seam from Neck Seam	YK14- Reglan Yoke Stamfrom Neck Stam
YK14.1	Raglan Yoke Seam from Neck Edge	
		YK14.1 - Raglan Yoke Scamfrom Neck Edge
ZF01 Measure from	Fly Length from Top Waist-(pants) n top edge of garment along fly edge to bottom edge of top stitching.	ZF01 Hy Length from Top Waist - Parts ZF01 ZF01

Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
ZF01.1	Fly Length From Bottom of WB - pants	ZF01.1 ZF01.1
ZF02 Measure from	Fly Length from Top Waist-(skirts) In top edge of garment along fly edge to bottom edge of top stitching.	ZF02 Hy Length from Top Waist - Skirts ZF02 ZF02
ZF03 Measure from	Fly Width In fly edge to outside edge of top stitching.	ZH3 Hy Width

General

W1 Tolerance

Company: ANTHROPOLOGIE/URBAN - NEW

Size Class: Size Range: XS-XXL **Product:**

Ref Code **Description / How 2 Measure Image** ZF04 Zipper Length-(pants) Measure from top of zipper teeth to zipper stop ZF04 Zipper Length - Pants ZF05 Zipper Length-(skirts) Measure from top of zipper teeth to zipper stop. ZF05 Zipper Length - Skirts Zipper Opening from Armhole @ Left SS ZH06 Zipper Opening from Armhole @ Left SS Measure from armhole to top of zipper stop along left side seam.


Company: ANTHROPOLOGIE/URBAN - NEW

Ref Code	Description / How 2 Measure	Image
ZF07	Zipper Opening- (over 8")	
Measure from	top of teeth to end of opening at seam of fabric.	ZIOT Zipper Opening - Over 8"
ZF07.1	Zipper Opening- (8" or under) top of teeth to end of opening at seam of fabric.	ZF07.1 Zipper Opening - Under 8"
ZF08	Zipper Tape Length-(over 8")	ZF08 ZipperTape Length - Over 8"


Company: ANTHROPOLOGIE/URBAN - NEW
Size Range: XS-XXL
Size Range: XS-XXL
Size Range: XS-XXL
Size Class: General
W1 Tolerance

Ref Code	Description / How 2 Measure	Image
ZF08.1	Zipper Tape Length-(8" or under)	
		ZF08.1 ZipperTape Length - 8" Or Under

HOW TO MEASURE: WAIST @ TOP (HF14)

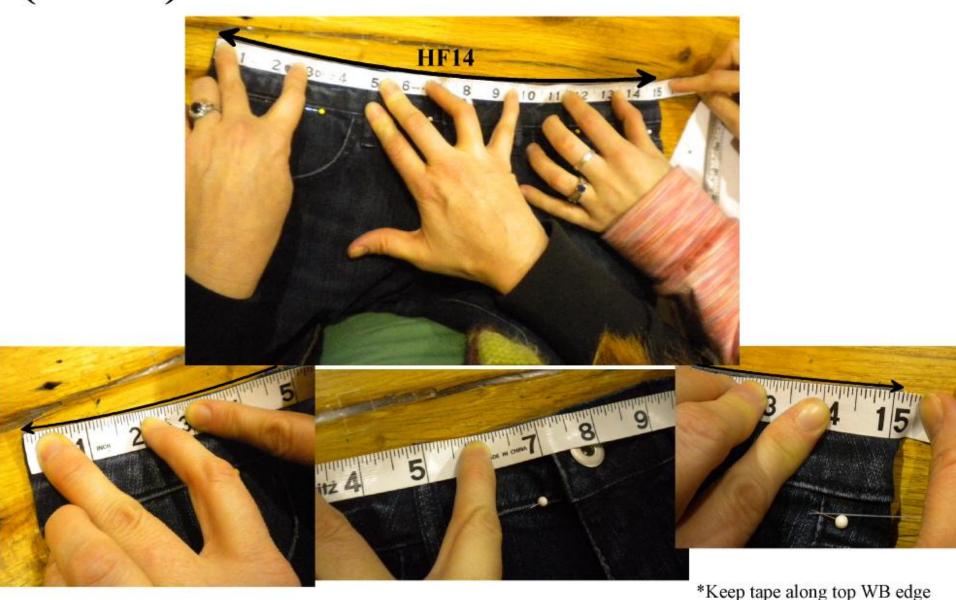

HOW TO MEASURE: WAIST @ BOTTOM (HF15)

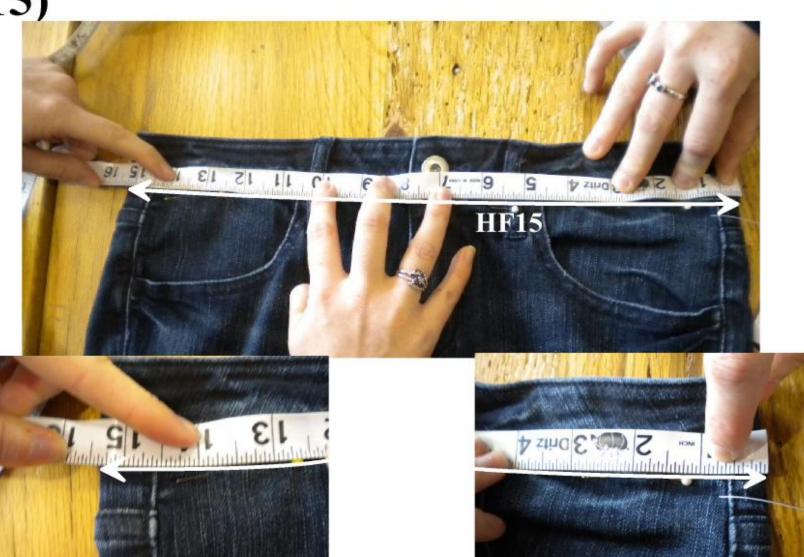

HOW TO MEASURE: HIP PLACEMENT FROM TOP WAIST (VF42 & VF42b)







FRONT


SS

BACK

HOW TO MEASURE: HIP (HF20)



HOW TO MEASURE: FRONT RISE (PT01)

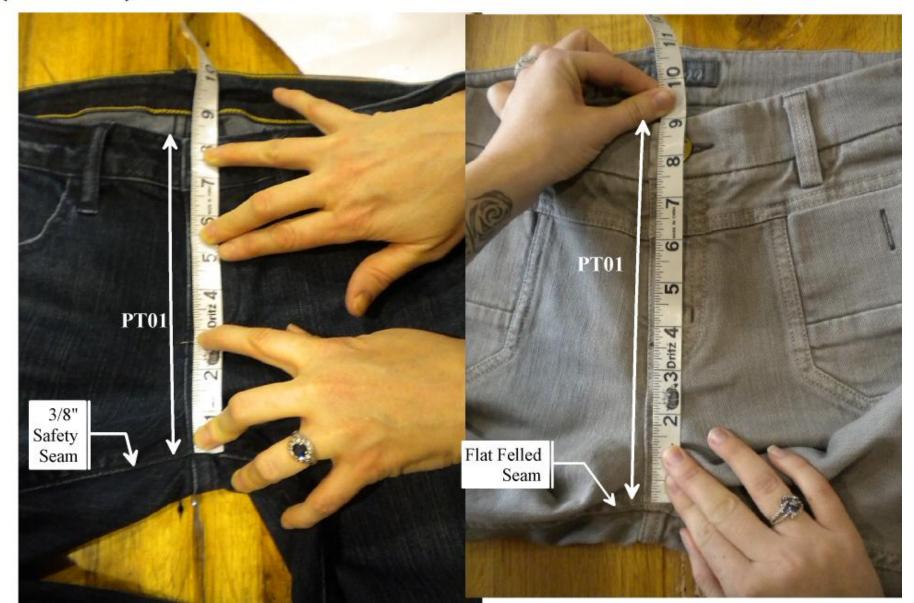


HOW TO MEASURE: BACK RISE (PT02)






HOW TO MEASURE: THIGH 1" BELOW CROTCH (PT03)

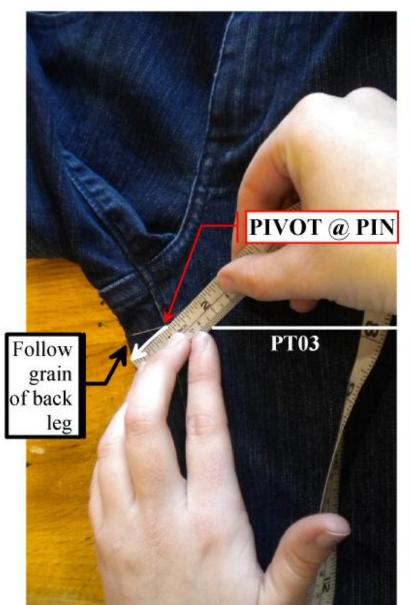




HOW TO MEASURE: THIGH 6" BELOW CROTCH (PT04)

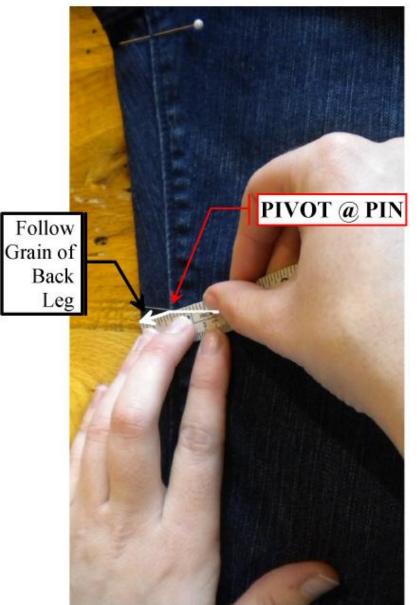



HOW TO MEASURE: KNEE 11" BELOW CROTCH (PT05)

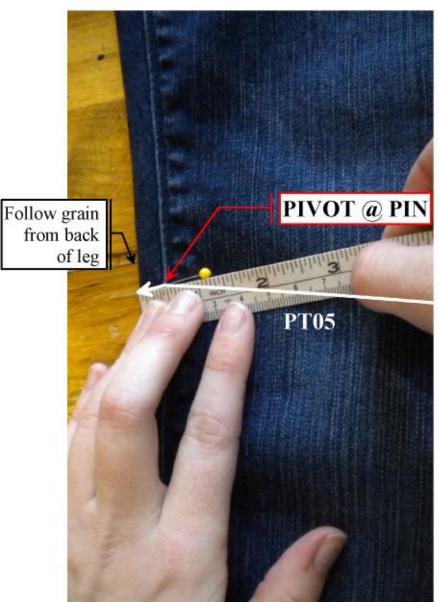




HOW TO MEASURE: LEG OPENING (PT06)



HOW TO MEASURE: INSEAM (PT08)



HOW TO MEASURE: FLAT FELLED INSEAM (PT08)

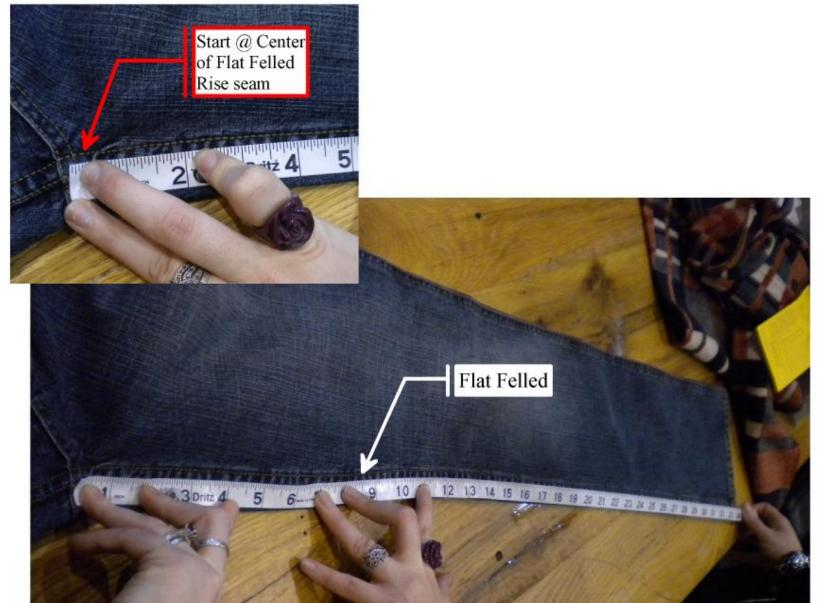


HOW TO MEASURE: OUTSEAM (PT10)



HOW TO MEASURE: YOKE SEAM from Bottom WB @ CB (YK13.1)



HOW TO MEASURE: YOKE SEAM from Bottom WB @ SS (YK12.1)

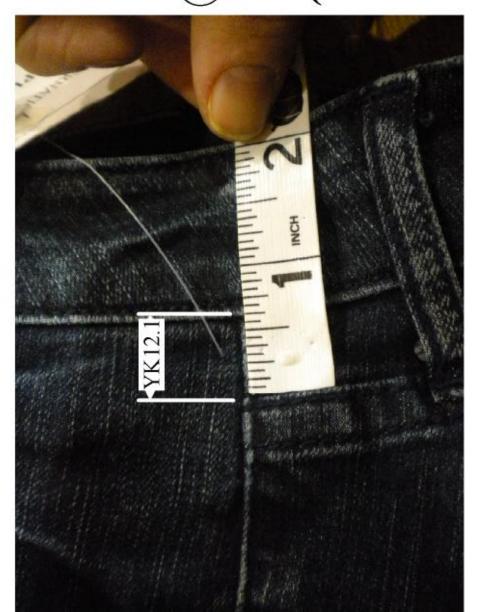

Company: BRAS
Size Range: 32A-36D

Size Class: General
Product: B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA01 BRA01 Lay	Front Nk Length-(CF Cup to Strap Point)Along Curve garment flat. Measure from cap/ CF gore joining seam to bust point along the edge.	
		FEE
BRA02	Side Wing Height @ Cup Seam- Along Curve	
BRA02 Mea	sure side wing height along cup/ tunnel seam	
		FEE
BRA03	CB Closure Height (1 hook 3 adj)- Edge to Edge	
BRA03 Mea	sure from edge to edge @ CB closure	
		FEE.

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA04	Back Straps Apart-Inside-(on tightest adjustment)	р п
BRA04 Lay g	parment flat with CB closure on the tightest adjustment. Measure distance between back straps inside (edge to edge)	BRA04 BACK VIEW: (CLOSED ON TIGHTEST ADJUSTMENT)
DDAGE	Oteres Weddie	
BRA05 Meas	Strap Width sure strap's width from edge to edge on the line perpendicular to the strap	BRA 05
BRA06 Meas	Strap Length-(total)-w/ 2" between O ring&slider sure front & back strap pieces from join @ front to join @ back (with 2" turn back adjuster);	BRA 06
		D 0 (46

Company: BRAS
Size Range: 32A-36D

Size Class: General

Product: B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA07	Side Bone Tunnel Height	
BRA07 Meas	sure from edge to edge @ side bone tunnel seam	La viere de la constant de la consta
BRA08	Bottom Width- Flat- (on tightest adjustment)	h n
BRA08 Lay (garment flat with CB closure on the tightest adjustment. Measure width at bottom edge relaxed from fold to fold	BRAGE BACK VIEW: (CLOSED ON TIGHTEST ADJUSTMENT)
BRA09	Bottom Width-Total- (Hook to 1st eye)	
внаи9 Take	e this measurement straight completely flat on the table from outside tunnel's edge/ seam at CF to outside tunnel's edge/seam @ side.	BRA 69
	DEC 2007 05:22 DM EST Conveight Lirhan Outfittage Inc	Page 2 of 1

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA10	Wire Tunnel Length- Along Outside Curve Edge	
BRA10 Lay g	jarment flay. Measure contour along outside tubing/ tunneling edge/seam from edge to edge;	BRA10
BRA11	Gore Height @ Cup Seam- Along Curve	
BRA11 Meas	sure CF gore height from edge to edge along cup/ tunnel seam	
BRA12	Gore Height @ CF-Straight	
BRA12 Meas	sure CF gore's height @ center of the panel from edge to edge	

Company: BRAS
Size Range: 32A-36D

Size Class: General
Product: B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA13	Gore Width @ Top Edge-Straight	
BRA13 Mea	sure straight across CF gore from cup seam/ tunnel to cup seam/ tunnel @ top of CF gore edge	
BRA14	Gore Width @ Bottom Edge-Straight	
BRA14 Mea	sure straight across CF gore from cup seam/ tunnel to cup seam/ tunnel @ bottom of CF gore edge	
		BBA 14
BRA15	Front A/H Length-(Side Cup to Strap Pt)Along Curve	
	garment flat. Measure from cup/ bodice point @ front to cup seam/ tunnel @ side along armhole edge	
		FEE
	DEC 0007 OF 00 DM FOT	,

Company: BRAS
Size Range: 32A-36D

Size Class: General

Product: B1 Tolerance

T 0:1 W 1 1 1 (0 0 1 1 1 1 1 4 1 1)	
Top Side Wing Length-(Cup Seam to Hook/1st eye)	
y garment flat. Measure side wing length from CB to cup seam/tunnel along top edge	
	BRAIN
	The state of the s
Bottom Side Wing Length-(Cup Seam to Hook/1st eye) by garment flat. Measure side wing length from CB to cup seam/tunnel along bottom edge	
y garment hat. Measure side wing length from OD to cup seam/turner along bottom edge	
	BRATT F.E.E.
Wing Distance Apart@Bottom Cup-Straight (Hook Up)	
y garment flat and measure straight from one wing to another @ bottom of cup	
	BRA19
2 DEC 2007, 05:22 PM EST Conveight Lirhan Outfittors, Inc.	Page 6 of 1

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA19	Front Strap Length (including hardware) Relaxed	BRA 19
BRA19 Meas	ure front strap piece/ extension relaxed from join @ front to join @ strap excluding hardware;	
BRA20	Front Strap Length (including hardware) Extended	BBA 20
	ure front strap piece/ extension extended from join @ front to join @ strap excluding hardware;	
BRA21	Back Strap Width	
BHA21 Meas	ure back strap's width from edge to edge across the strap;	BRAZI
		BACK VIEW: (CLOSED ON TIGHTEST ADJUSTMENT)
	NEO 0007 OF 00 PM FOT	

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA22	Back Strap Length-(back strap point to ring)	
BRA22 Meas	ure back strap piece from join @ back excluding hardware with 2" turn back adjuster;	BRA 22
BRA23	Across Cup Width- Along Seam- Seam to Seam	
cup/ tunnel e	sure across molded cup following the height of the cup. Measure straight across from CF cup/ tunnel edge @ top to side cup/ tunnel edge at top or along cup seam from dge to cup/ tunnel edge.	BRASS
BRA24 BRA24 Meas	Cup Height-Total-Strap Point to Bottom Cup Edge sure over molded cup following the height of the cup. Measure straight up from bottom edge of the cup @ center thru apex to top edge	To some

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA25	Bottom Cup Height @ Center	
BRA25 Meas	ure straight up from bottom edge of the cup @ center thru apex to across cup seam;	The state of the s
BRA26	Across Cup Seam from Top Edge @ CF-Along Wire	
BRA26 Meas	ure along cup/tunnel edge @ CF from top edge to cup seam	
BRA27	Across Cup Seam from Top Edge @ SS-Along Wire	
BRA27 Meas	ure along cup/tunnel edge @ sides from top edge to cup seam	AND THE PROPERTY OF THE PROPER

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA28	Wire Bone Play Width	
BRA28 Slide Measure dista	wire all way to top edge/ bar tack @ CF. ance between wire's end & bar tack @ side;	WIRE (INSIDE TUNNEL)
BRA29	Side Bone Tunnel Placement from Side Cup @ Top	
BRA29 Meas	sure straight from side bone tunnel to cup seam/ tunnel at top of side wing	BRA 20
BRA30	Back Neck Drop-Strap Point to Edge (racerback)	

Company: BRAS
Size Range: 32A-36D

Size Class: General
Product: B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA31	Across Back@2 1/2" from Strap Point-Edge to Edge	
BRA32	Back Length from Strap Point to Bottom Edge(racer)	
BRA33	Dart Legs Apart @ Bottom Cup Seam	
BRA33 Lay (parment flat and measure straight from one dart's leg to another @ bottom of cup	
		BRA 33

Company:BRASSize Class:GeneralSize Range:32A-36DProduct:B1 Tolerance

Ref Code	Description (Variation) / How 2 Measure	Image
BRA34	Dart Length	
BRA34 Meas	sure along the dart from cup seam/ edge to dart point.	***************************************
BRA35	Back Straps (inside) from Hook/1st eye	