


# Installation Guide

## Clawfoot Bathtubs

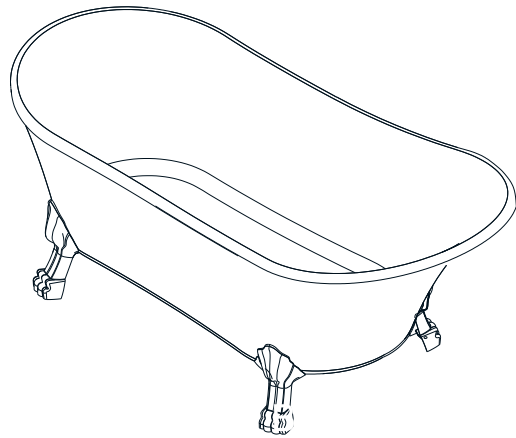

Wrench





Level Bar



Pencil



Measurement

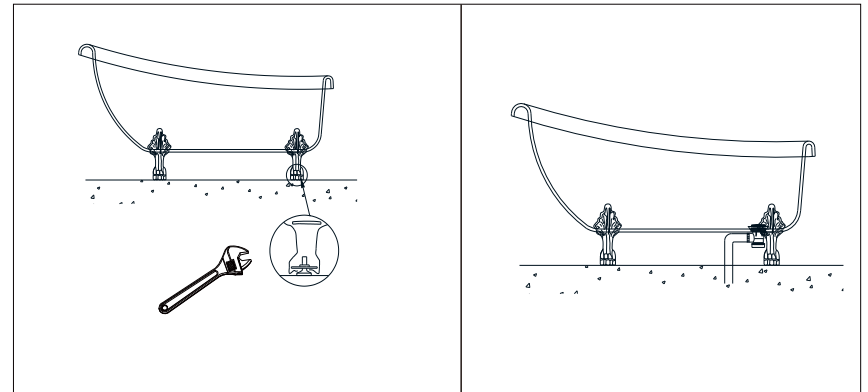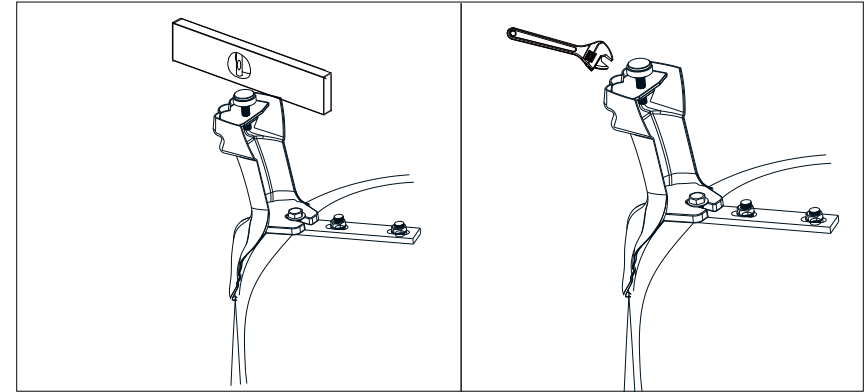

- Please read all instructions carefully before proceeding with installation.
- Due to the complexity of the installation procedure a professional plumber is required.
- Specifications and directions may change without notice.

1. Adjust the feet to be level.
2. Put the bath waste into floor drainage