


A6I

I-JOIST AS STARTER JOIST

8d nail at 6" o.c.

(when used for shear transfer
nail to bearing plate with same
nailing schedule as decking)

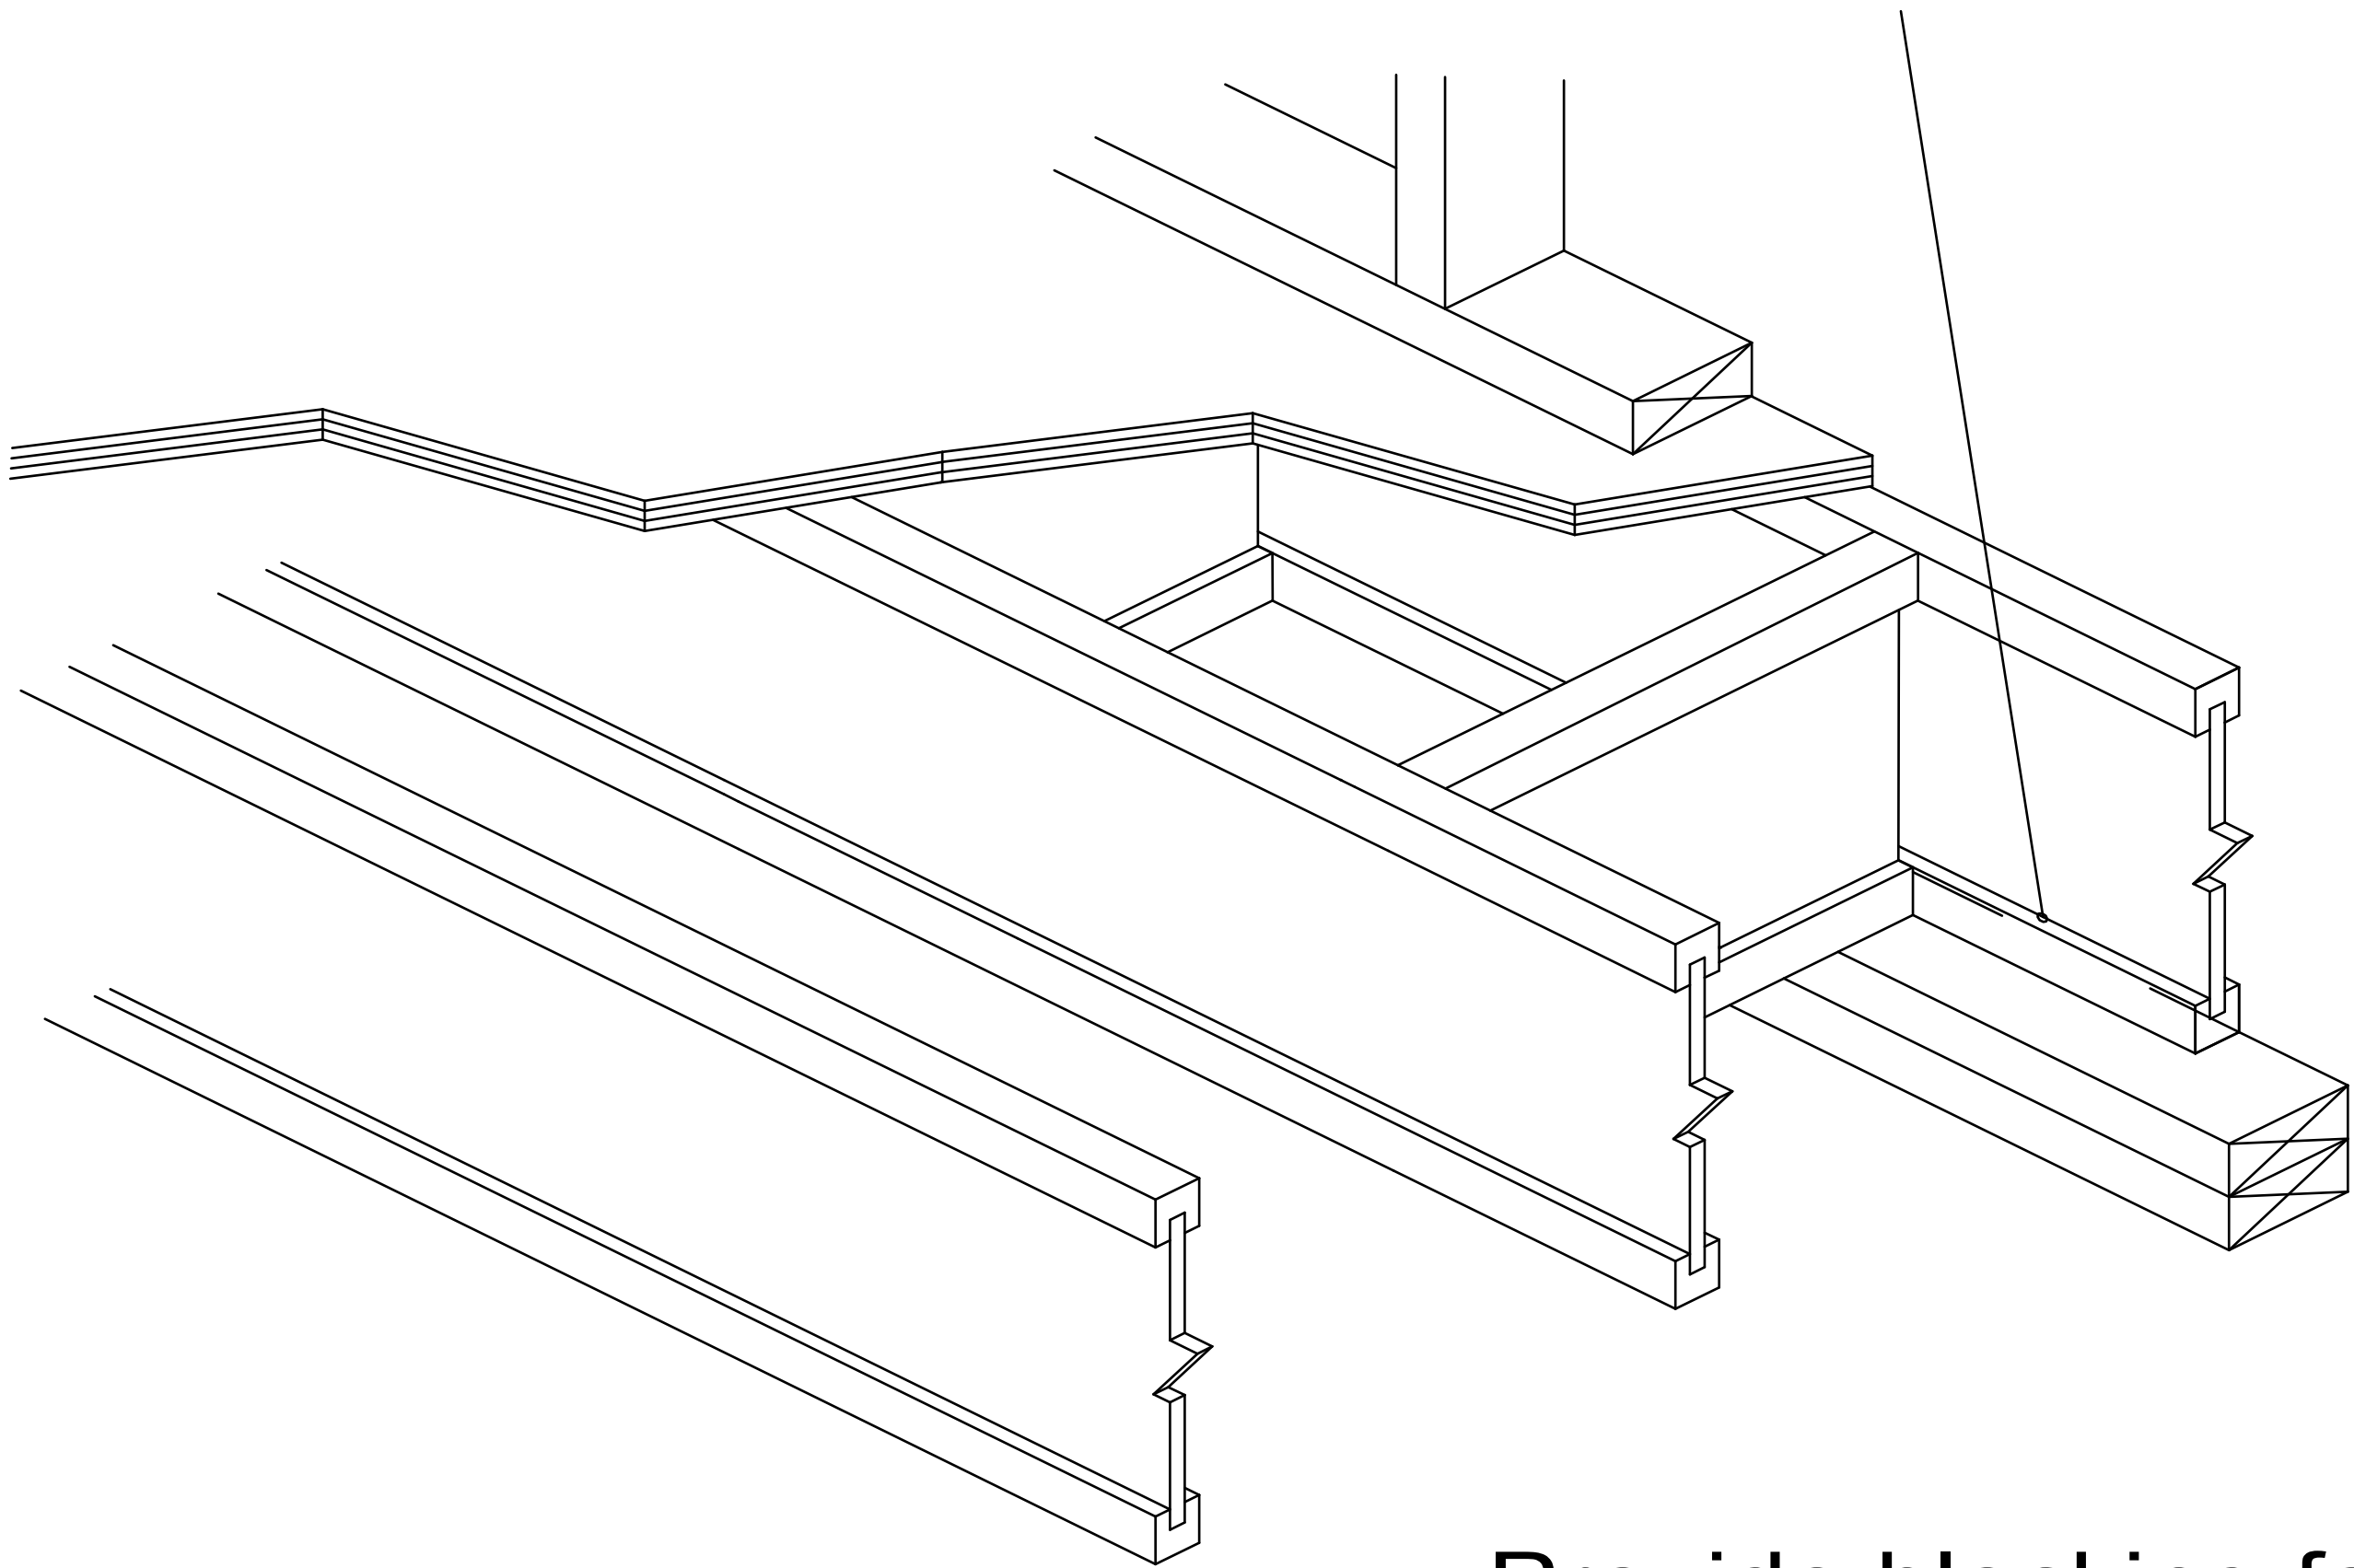

**Provide blocking for
lateral support as required. Use LP I-Joist,
LP LVL, LP LSL, or LP Rim Board as blocking**