

INSTALL GUIDE

INSTALL KIT:



Microfiber Cloth



Squeegee Card







Alcohol Pad




Dust-absorber


- 1** **(A)** Remove your phone case (if applicable)
- (B)** Carefully clean your screen with the included wipes and cloth
- (C)** Dab your screen with the included dust removal stickers to remove dust.

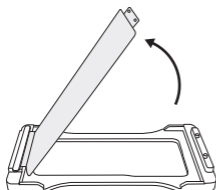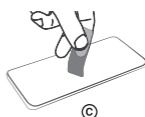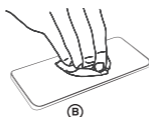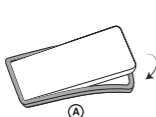


- 2** Lift the side of the install applicator that is free.

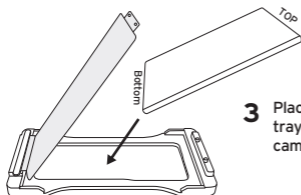


- 3** Place the device into the install tray. Make sure the front facing camera is positioned at "top"

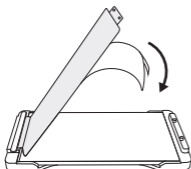


- 4** Carefully remove the inner film (transparent labeled ①) from the blue screen protector

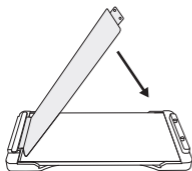


- 5** Gently close the install screen onto the install tray.

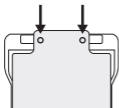


Match the holes to the 2 pins to secure.

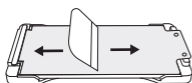

- 6** Use the included squeegee card to gently push out all air bubbles that are on the screen.

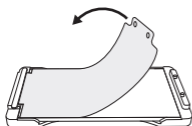

- 7** Carefully remove the outer film (blue) and remove your device from the installation tray.

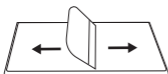

- 8** Use the included squeegee card to gently push out all air bubbles that are on the screen.

NOTE

There could be air bubbles that are still present.
These will dissipate in 24-48 hours.

⚠ ATTENTION ⚠

After you install your screen protector. We highly recommend that you re-register your fingerprint for optimal performance. This should fix any issues with your fingerprint sensor.

For questions and additional help, please visit
urbanarmorgear.com/install