
DOCUMENT BOX – INSTALLATION INSTRUCTIONS

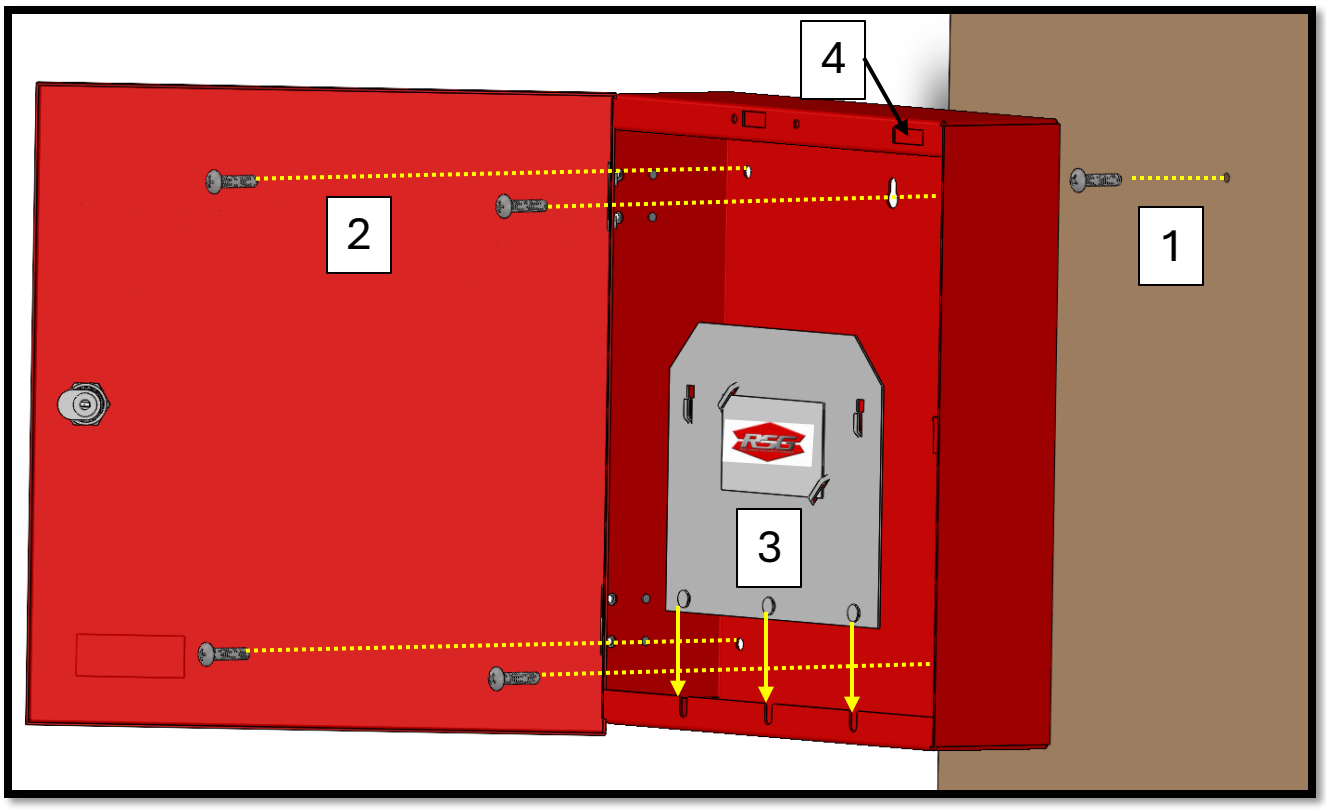

1. Install one #8 pan head screw at the desired mounting location on the wall, leaving the head slightly protruding. Align the keyhole slot on the enclosure with the screw head. Slide the enclosure over the screw head and lower it until it seats in the narrow section of the slot.
2. Using a level, install four #8 pan head screws appropriate for the wall material in the remaining mounting holes.
3. Align the subplate bolts with the slots on the bottom flange. Lower the subplate until it sits on the floor of the cabinet.
4. NOTE: Certain models have an optional USB pre-installed in the top right slot (pictured above).