


# Spot UV (Scodix)

## How to supply files correctly

When preparing Spot UV Scodix artwork, add an extra page to your PDF. This page should repeat only the parts of the design you want to highlight. Set these elements as a **Spot Colour** called **Scodix**.


For example, a business card should be supplied as one PDF containing four pages, arranged in the required order. This ensures the pages stay in the correct sequence when the artwork is backed up.

### To apply Spot UV to the front page:

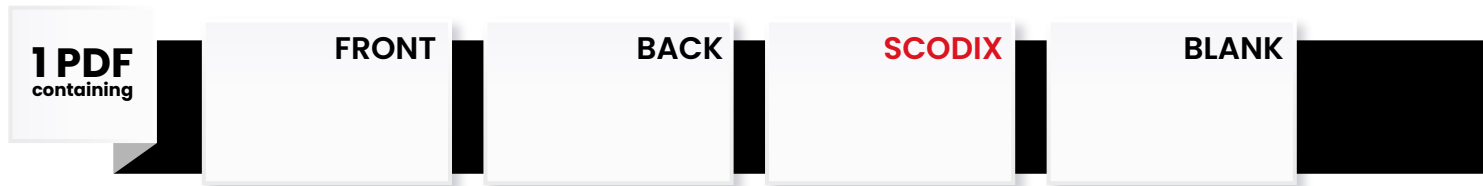

First page including the front design of your business card. Second page including the back design. Third page with the Scodix element, set in a spot colour. Fourth page left blank.

### To apply Spot UV to the back page:

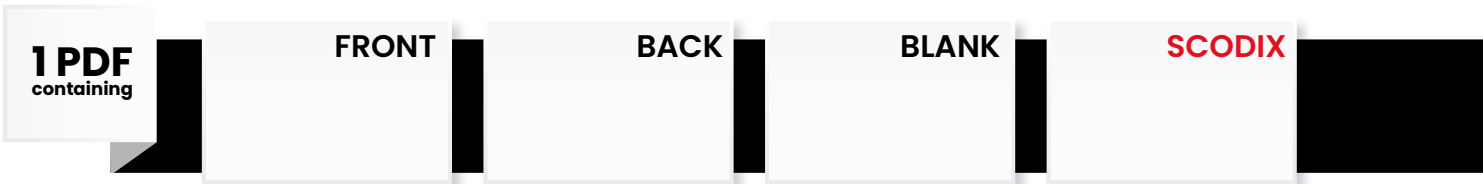

First page including the front design of your business card. Second page including the back design. Third page left blank. Fourth page with the Scodix element, set in a spot colour.

**Do not supply the Scodix layer as a separate file**, it must be included within the same PDF as the print artwork. Where a blank page is required, include this in the PDF. Files supplied incorrectly will be rejected by our system.



Spot UV cannot be applied over crease or fold areas on folded products. Leave a clear gap of 2mm from the trim edge and at least 2mm from any fold lines. This helps prevent the UV coating from cracking during trimming.