


INSTRUCTIONS

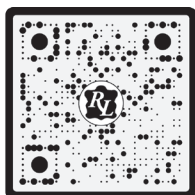

Find tutorials, tips, patterns
and project ideas on
www.realeather.com.



KEYLESS KEY FOB


Silver Creek Leather Co.
Jeffersonville, IN 47130

15325-03

Keyless Key Fob Instructions Continued




6. When reaching the last hole at the bottom of the second side of the gusset, turn and stitch back to the starting point at hole #2, filling in the gaps. (**Fig. H**). End your stitch in between the layers (ending between the layers helps to hide the knot).

7. Remove needle and tie the thread tails in a square knot. Trim excess thread and repeat steps 3-6 with the gusset on the opposite side.

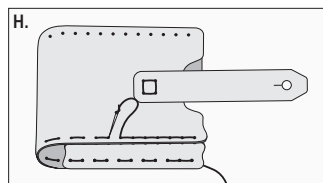


8. **Attaching Your Fob And Keys:** How you secure your key fob will depend on the type of fob that you own.

- Some key fobs have a wide enough passage that will accommodate the width of the fob strap. Pass the fob strap through this passage as shown (**Fig. I**), fold the rough sides together, then push the strap ends inside the fob case and pull through the slot. Pass the small keyring through the two holes of the fob strap, then attach to larger keyring and keys.
- Your key fob may allow for the fob strap to be attached by the small keyring. (**Fig. J**). If attaching with keyring, the folded end of the strap will be pushed into the fob case and pulled through the slot, then slid onto the larger keyring.
- Alternatively, your key fob may be attached with the provided lace. (**Fig. K**). Loop the lace through the inset or small keyring on your fob, pull ends of lace through the fob case and out the slot, then tie an overhand knot at the desired length. Trim excess lace and attach to larger keyring and keys.

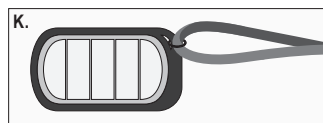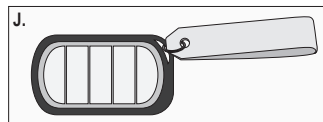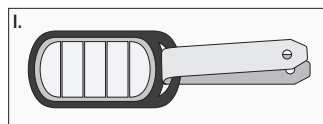


Keyless Key Fob Instructions

PARTS:

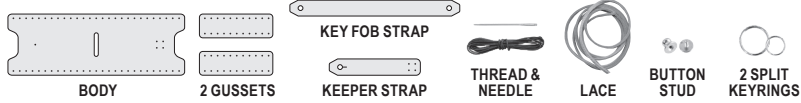


Stitching Basics: Starting in between layers, stitch up through the top layer leaving a 2"-3" tail between parts. Proceed by stitching down through all layers in the next hole as directed, up through the following and continue this pattern until you reach the end. **NOTE:** To this point your project will look like it is stitched between every other hole. Now turn and stitch back to your starting point, filling in between previous stitches. When back to the first hole, stitch up through the bottom layer only. Remove the needle and tie the thread ends in a knot between layers (square knot recommended). Trim excess thread.

Tip: For a professional look, always stitch out next to previous stitch on the same side of the stitch;




1. Unwrap thread and needle pack. With a ruler, measure and cut one 12" piece and set it aside. Fold the remaining section in half and cut into two equal pieces, approximately 30" each.





2. **Attaching The Keeper Strap:** Thread the 12" section of thread onto the needle. Align the 4 holes of the keeper strap with the body of the fob. Begin in the lower right corner and stitch clockwise following the basic stitching instructions above. (Fig. A). **Note:** Thread tail should be kept towards the bottom of your project.

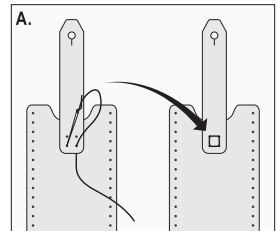

3. **Attach Button Stud:** Insert the button stud screw through the rough side of the hole and, using a screwdriver, secure the button stud in place. (Fig. B)

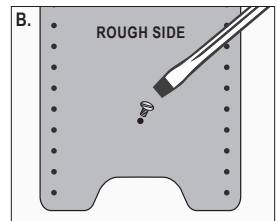


4. **Attaching The Gussets:** **Note:** Each gusset has a top and bottom. You will notice that the distance from the bottom two holes to the edge on one side is longer than the other, this is the bottom. (Fig. C). Align the holes of your project with the body face down and one of the gussets face up. Begin by stitching up the second hole on the gusset only at the bottom marked by a "star symbol" on the diagram (Fig. D), being sure to leave a 2"-3" tail. Continue your stitch down through both layers of the first hole and then back up through both layers of the second hole. (Fig. E). Continue your running stitch up the edge of the project until you come to hole #16. (Fig. F). **Note:** You will only be stitching the body part on holes #12-16.

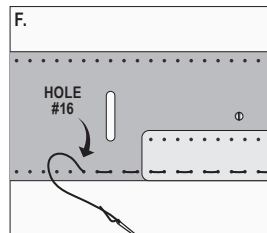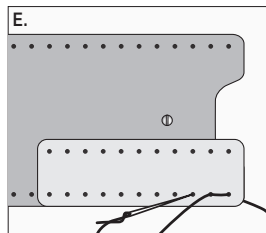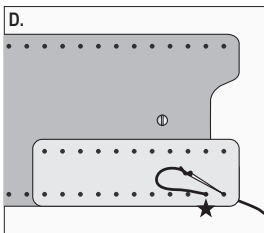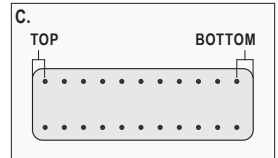

Tip: You can mark this hole with a pen on the inside of your project. No one will ever see it.

5. Hole #17 will align with the top hole on the opposite side of the gusset. (Fig. G).

When you fold the body over to align the holes, be sure that the flesh side of each part remains together.

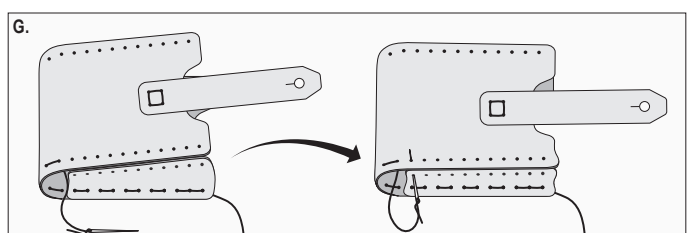

Continued on next page...