



Custom Wood Frame Assembly Instructions

Scan the QR Code for Online Instructions

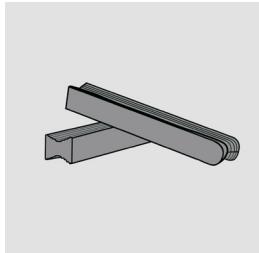

Included Hardware:

- Dovetail Joints

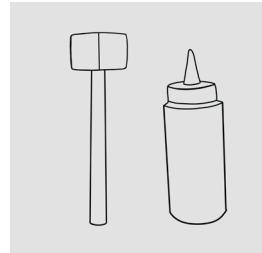

Needed Materials:

- PVA wood glue
- Rubber mallet or small hammer
- Soft Cloth, Towel, or Protective Surface

1. Prepare the Corners

Lay out all four frame sections. Select one top piece and one side piece to form the first corner.

Apply a small amount of glue to the mitered ends of both pieces, just enough to cover the joint. Spread the glue evenly with the nozzle tip. Place the pieces face down and let the glue sit for about 15 seconds until tacky.

Important: Do not fill the routed opening with glue.

2. Secure the Joints

Align the glued ends to form a clean 90° angle.

Insert a dovetail key into the routed opening and tap it down gently with a rubber mallet or small hammer to secure the joint. Wipe away any excess glue with a damp cloth.

Repeat for the remaining corners until the frame is fully assembled.

Allow the frame to dry for at least 24 hours before inserting your artwork, glazing, and backing.

*For instructions on installing and hanging artwork, see **Wood Frame Assembly** sheet.*

