



Assembly Instructions: PL-2 Planning Table

Hardware:

- (8) 5/16"-18 x 2-1/2" Hex Head Bolts
- (8) 5/16" Split Lock Washers
- (4) Adjustable Glides

Required Tools:


- Socket Wrench
- 1/2" Socket
- 1/16" x 3/8" x 2" Magnet (provided)



Each table consists of an apron assembly w/ top and (4) legs.

1. The tabletop was attached to the aprons at the factory. Place the top/apron assembly upside down onto a clean, soft surface so that the top will not be scratched.
2. If ordered with adjustable glides, screw the glides into the t-nuts in the bottom of each leg. Install the 'boots' on the bottom of each leg.

If ordered with casters, insert the casters into the metal sockets in the bottom of each leg. It will likely be necessary to tap the bottom of the caster plate with a hammer to start and fully seat the caster.

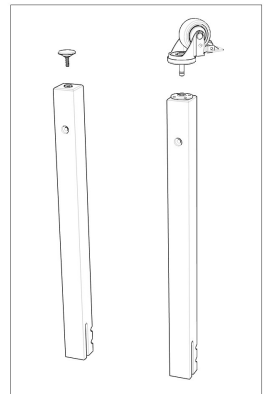

3. Attach legs to the apron assembly.
 - a. Position a leg in the corner of the apron assembly. If the table aprons/legs include mortise and tenons, slide the mortises in the top of the leg down onto the apron tenons.
 - b. Secure the leg to the apron assembly through the corner brackets using the 5/16" x 2-1/2" hex head bolts and split lock washers.

NOTE: *It is possible to overtighten the bolts. If a power tool such as an impact driver is being used, it is highly recommended not to fully tighten the bolts with the tool and to instead do the final tightening with a socket wrench so that it is possible to 'feel' when the bolts have been properly tightened.*

