



## Custom Wood Frame Assembly Instructions

Scan the QR Code for  
Online Instructions

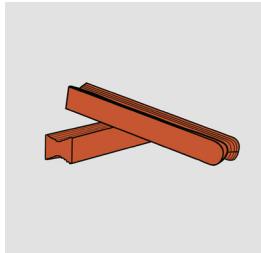

### Included Hardware:

- Dovetail Joints

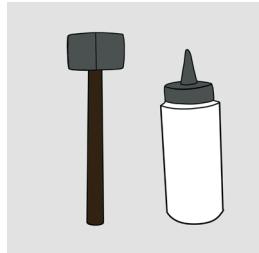

### Needed Materials:

- PVA wood glue
- Rubber mallet or small hammer
- Soft Cloth, Towel, or Protective Surface

## 1. Prepare the Corners

Lay out the four frame sections into two "L" shapes, placing the long sides on the left and the short sides on the right. This helps prevent accidentally joining two sides of the same length.

Apply a small amount of glue to the mitered ends of both pieces, just enough to cover the joint. Spread the glue evenly with the nozzle tip. Place the pieces face down and let the glue sit for about 15 seconds until tacky.

**Important: Do not fill the routed opening with glue.**





## 2. Secure the Joints

Align the glued ends to form a clean 90° angle. Join the two "L" shapes by inserting a dovetail key into the routed opening and tapping it gently with a rubber mallet or small hammer. Tap the key in partway, adjust the corner if needed, then drive it fully into place. For float frames, place a support block inside the corner to support the bottom of the frame while tapping. Wipe away any excess glue with a damp cloth.

Join the third corner, then the fourth, until the frame is fully assembled.

Allow the frame to dry for at least 4 hours before inserting your artwork, glazing, and backing.

For instructions on installing and hanging artwork, see *Wood Frame Assembly* sheet.

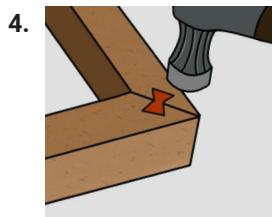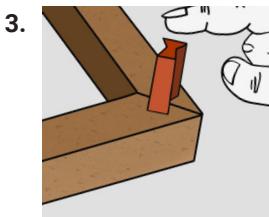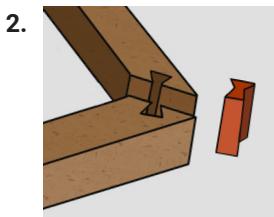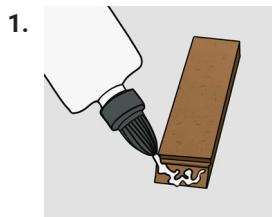

For Float Frames

