


Assembly Instructions:

NOTE: Complete any designs first, let dry, then apply protective finish. Let dry completely before assembly.

1. First you will need to case (dampen) the leather with a sponge and clean water.
2. Once leather returns to normal color and is cool to the touch, tool or stamp a design.
3. Optional: Once dry, add color with leather dyes, markers, or acrylic paints. Let dry again and add protective finish.
4. Fold fob through keyring, align holes and set rivets as shown below. **Note:** Rivet setter and anvil are recommended but not required to set rivets.

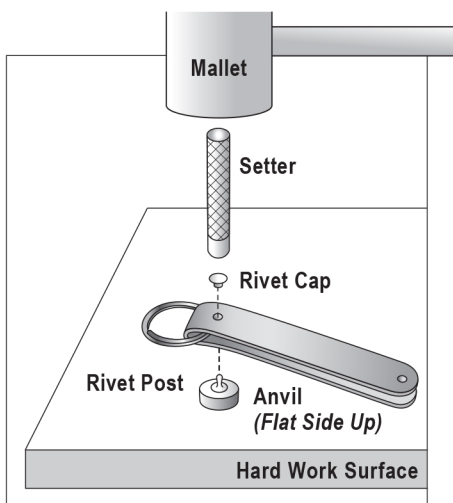

⚠ WARNING: CHOKING HAZARD
Small parts. Not for children under 3 years.

Find tutorials, tips, patterns and
project ideas on realeather.com