



# Pallet Shroud System


## 1. Erect Pallet

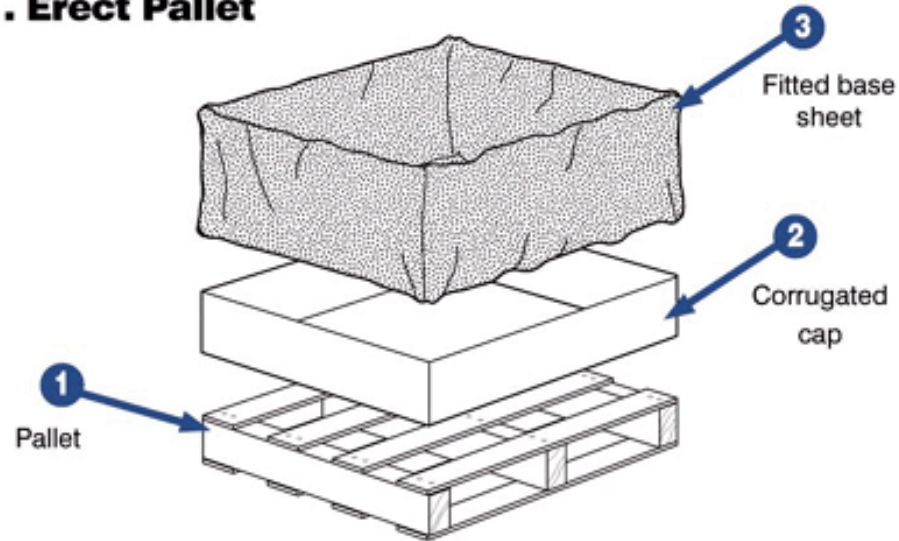


## 2. Stack Boxes of Produce

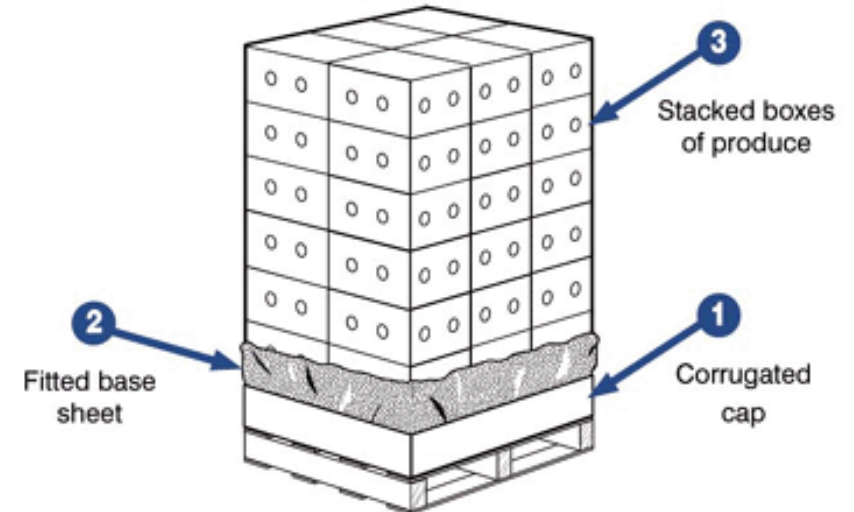

## 3. Fit Temporary Corner Boards

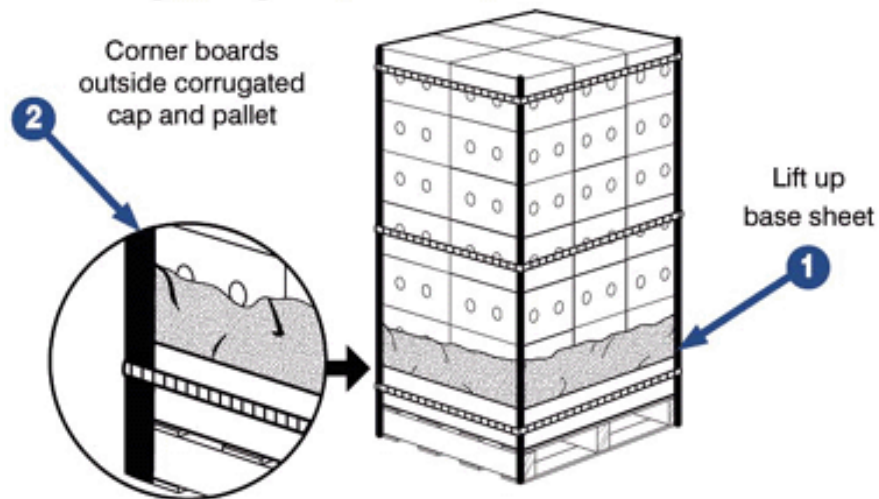


## 4. Rapid Cooling

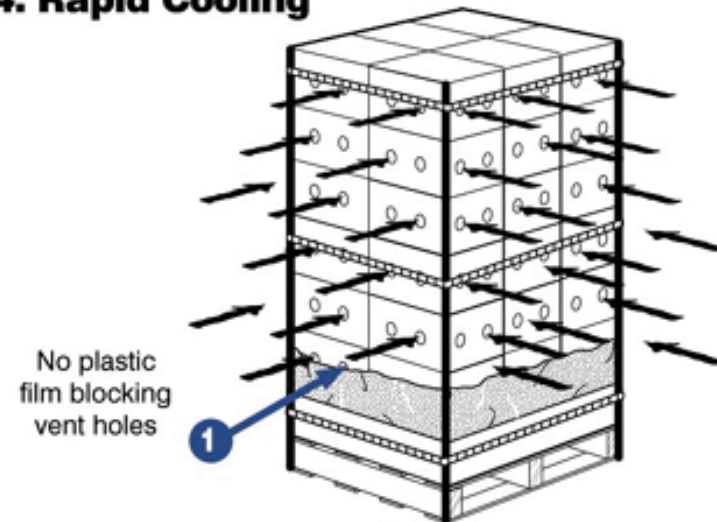



# Pallet Shroud System

## 5. Remove temporary corner boards

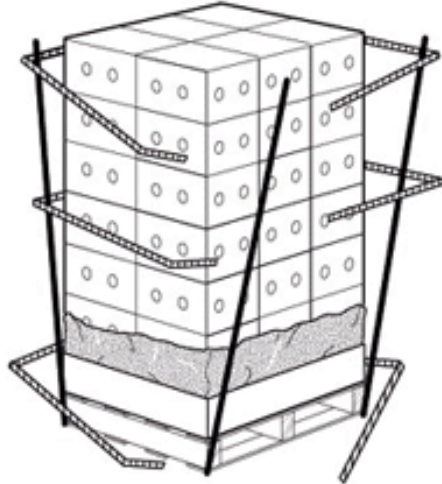

## 6. Fit Pallet Shroud Over Boxes

Tuck Pallet Shroud inside Base Sheet

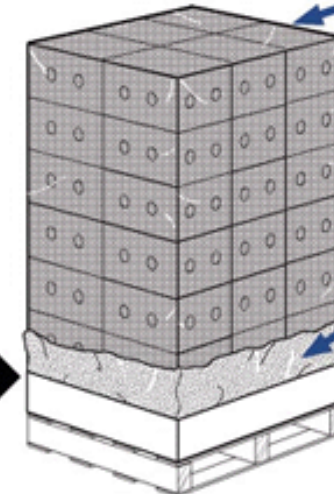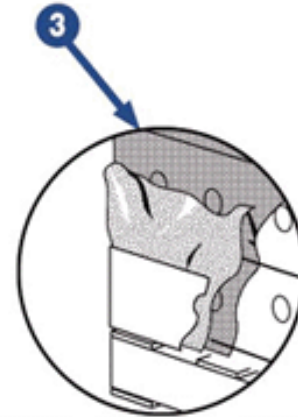

Pull down for tight fit at top


Long side of shroud to match long side of pallet

## 7. Apply stretch Wrap

Note: Must be applied by Stretch Wrapping Machine

Wrap ½ way up pallet

Wrap down to base to apply second layer

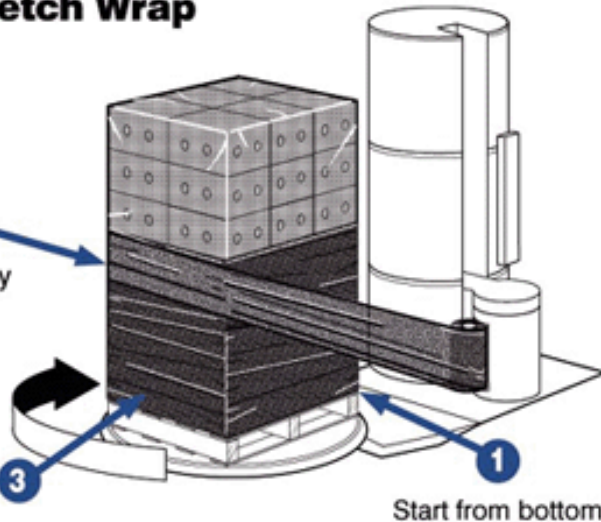

Start from bottom

## 8. Apply Corner Boards on outside Stretch Wrap

CAUTION; Do not puncture pallet shroud during transport

Apply corner boards

Corner boards to base of pallet

