



Pallet Shroud System

Pallet Setup


Erect Pallet

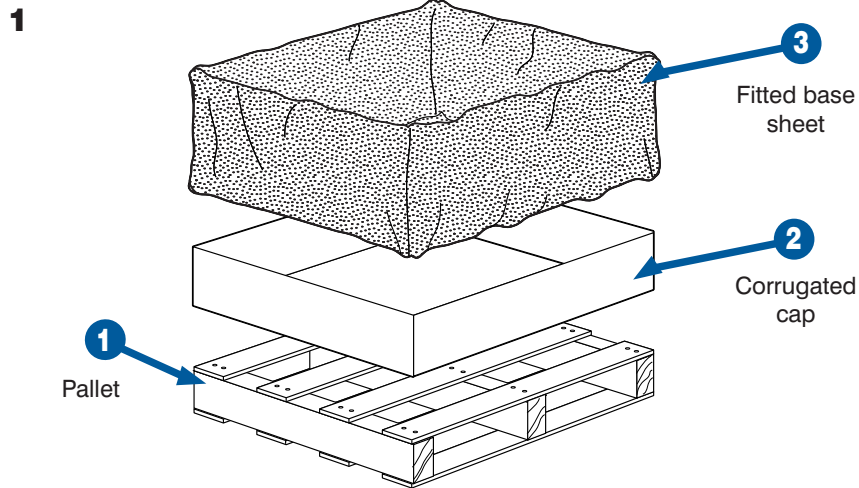


Stack Boxes of Produce

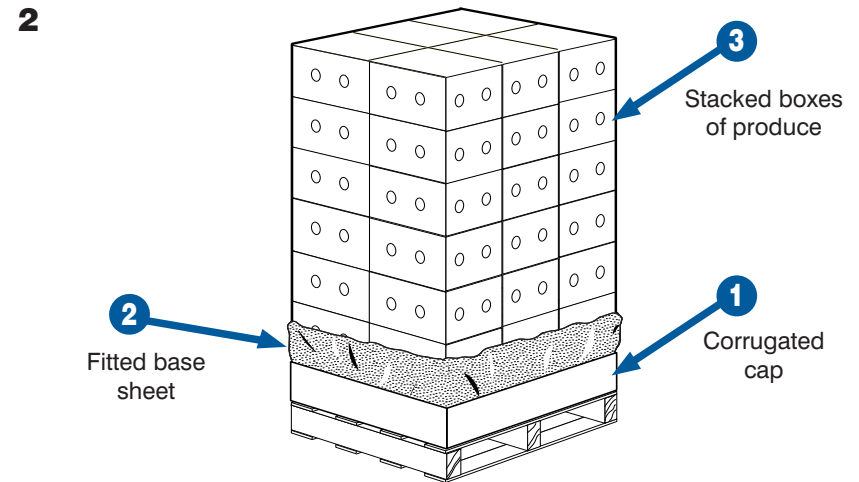

Rapid Cooling

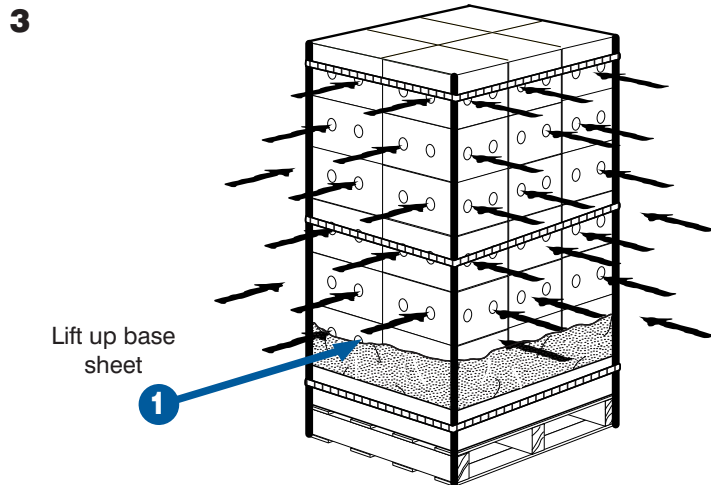


Fit Pallet Shroud Over Boxes

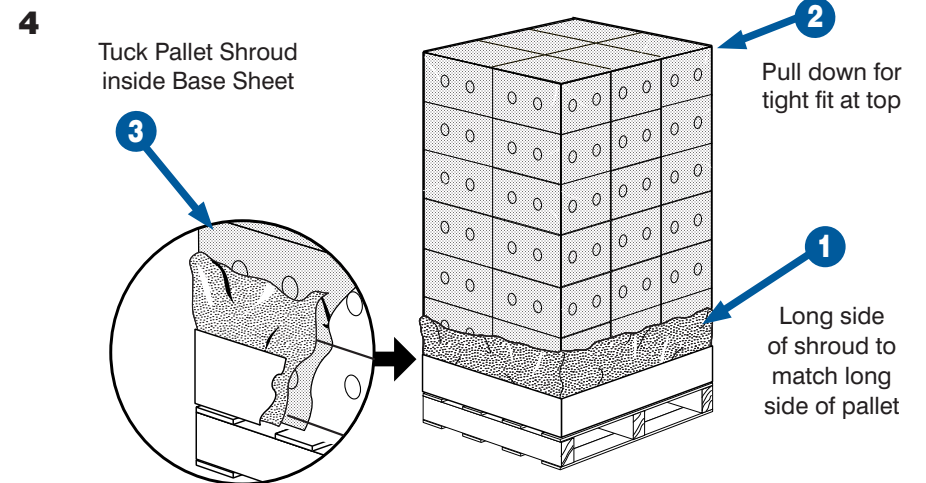

Pallet Shroud System

Tape Sealing

Seal with wide adhesive tape

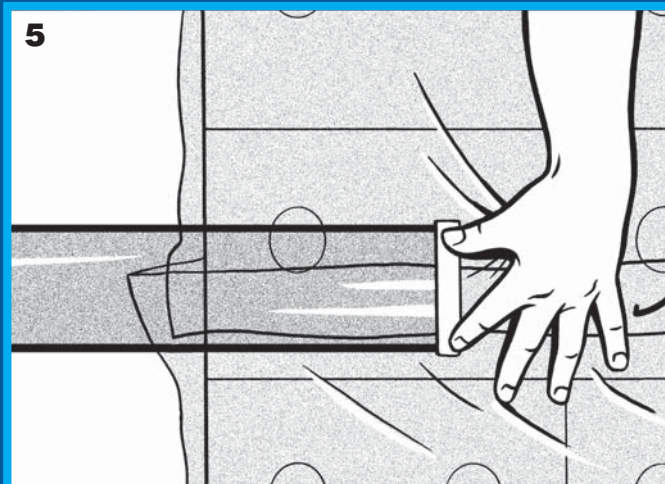


Commence before 1st corner

Take up 25% of slack Shroud & base sheet




Fold around corner & tape down


Pull film tight to next corner

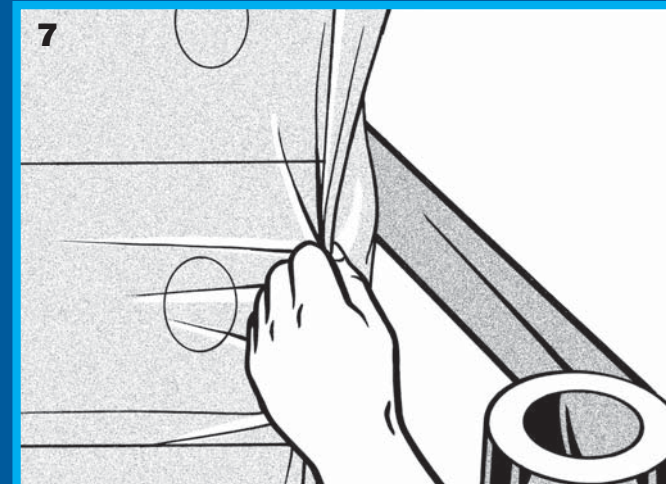

Apply Adhesive Tape along crease-free side

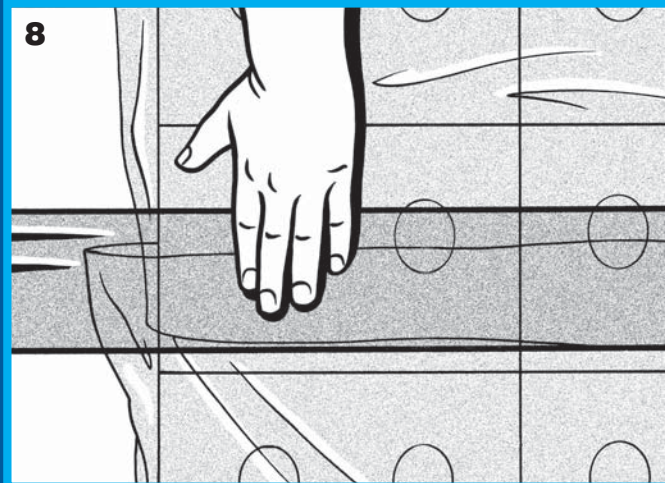


Repeat for other sides & corners

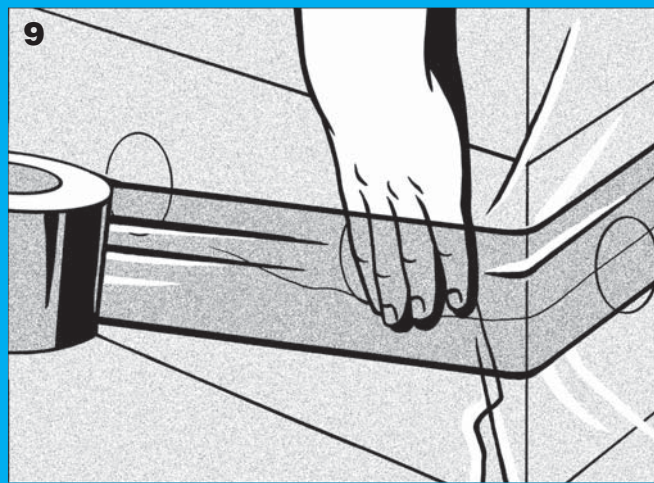

fold slack film around corner

Cover sharp metal clips

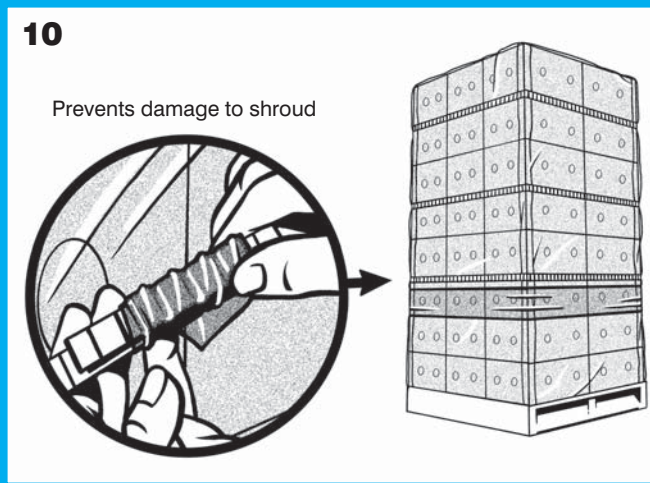

CAUTION; Do not puncture pallet shroud during transport