

## How to get the theatre look


## Step 1: Prep

- · Clean your surface and spot prime as necessary.
- · Mask off the area.
- · Stir paint well with an up and down

## scooping motion.

## Step 2: Topcoat

- · Cut in around the edges using a brush, then apply your first coat using a roller.
- · Lay off the area once you have covered it with paint.
- · Allow two hours dry time, then repeat for the second coat.

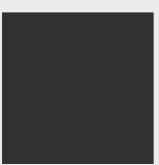



Everything you need to get the job done!	
SHOPPING LIST	
Dulux Theatre Black 4L	
100mm synthetic brush for cutting in	
Medium nap (10-18mm) synthetic roller	
Roller tray	
Paint stirrer	
Drop sheet	
Painter's tape	

TIP:

When cutting in, don't paint too far ahead. Keep a wet edge so your roller can blend with the brushed paint.



Theatre Black