



CONTENTS



Bottle and
Roll-Bar Mount

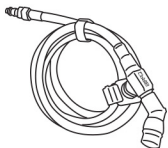

Draw Tube with
Bite Valve and Dock




Roll-Bar Clamps



Hook and
Loop Straps

ROLL-BAR

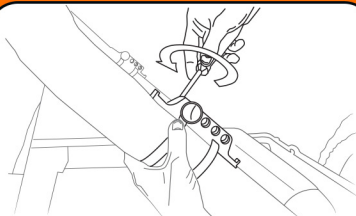


Put the hose clamps through the holes in the roll-bar mount (Bottle must be upright).

Wrap the hose clamps around your roll-bar.

Tighten the hose clamps using a 5/16" socket or a flathead screwdriver.

1

HOSE

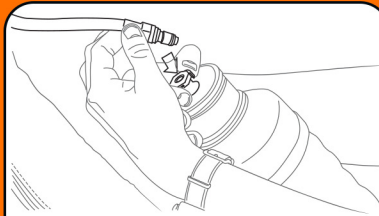


Connect the hose to the bottle by pressing the hose side (Male) to the bottle side (Female).

Disconnect the two CPC's by pressing on the gray tab.

2

DOCK

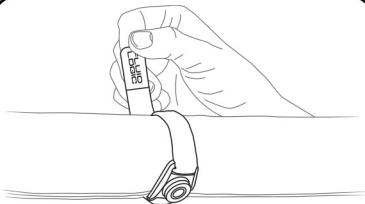


Position the Dock on the roll-bar within arm's reach, while seated in the vehicle.

Secure using the provided hook and loop straps. Remember to Dock the bite valve when not in use.

3

SECURE

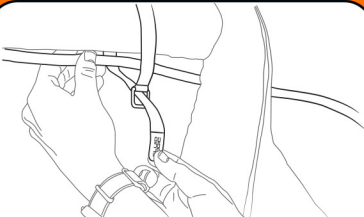


Using the provided hook and loop straps, secure the length of hose to your roll-bar.

Do not over-tighten the straps as it will disrupt the flow of fluid.

4

DISCONNECT

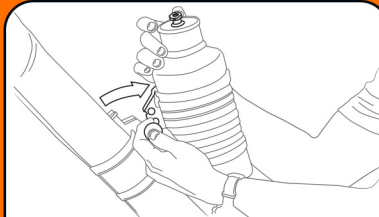

Disconnect the CPC connectors by pressing the gray tab.

Pull the red handle on the Bottle mount, tilt the Bottle towards you, and lift the Bottle up and away.

5