


**Canyon Bed Frame**


Before getting started:

Remove instructions from side of box and clear the area of fragile objects. Assembly requires two people.  
Read instructions carefully and keep for future reference.

Parts list:



Hex Bolts x 12




Wood Screws x 8

The following tools (not included) are required for assembly:




Phillips Head Screwdriver




7/16" Wrench




or

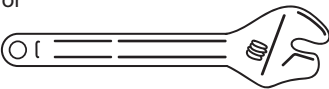

Small Crescent Wrench

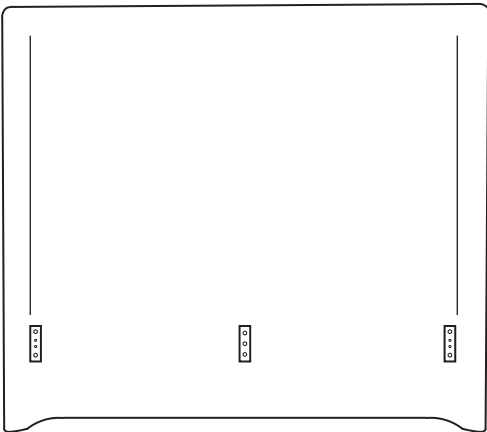



Headboard x 1

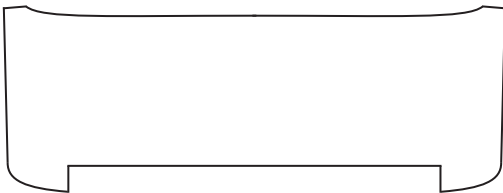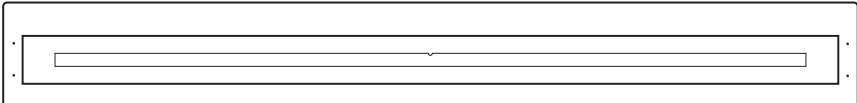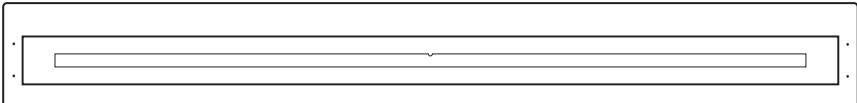

Side Rail x 2      Footboard x 1




Bed Slats x 2 sets

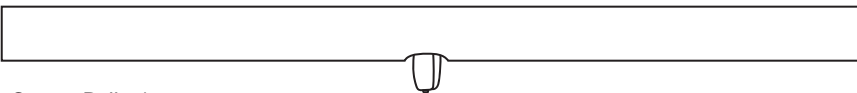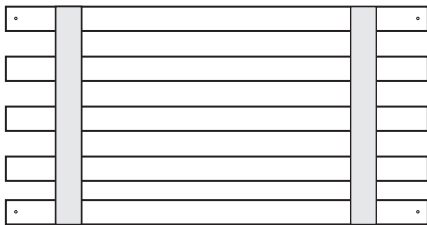

Center Rail x 1


1

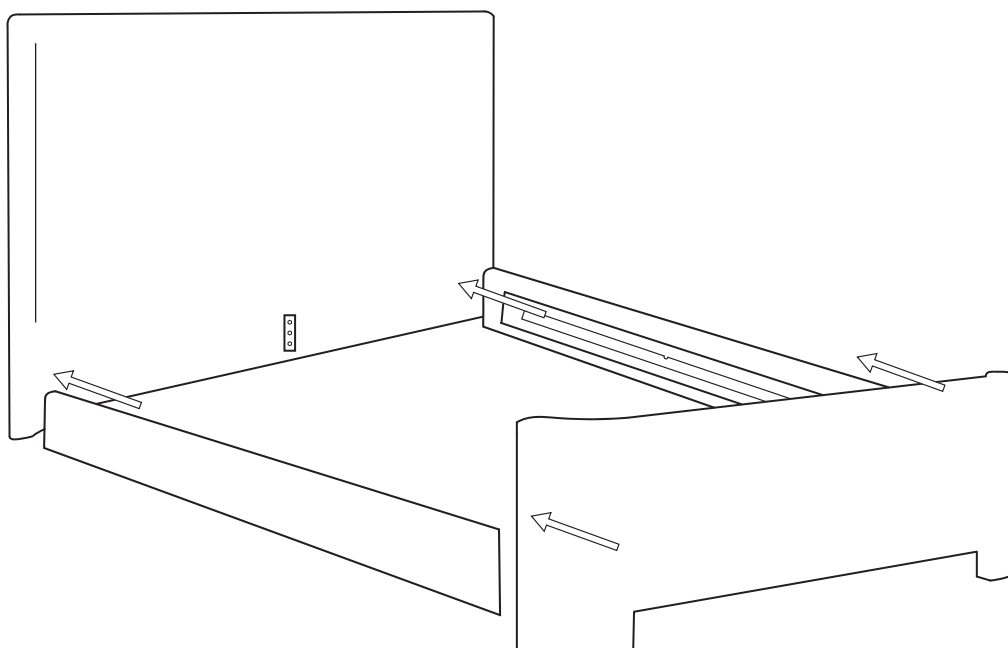

Attach first side rail to headboard by placing side rail on the outside of the bracket.

NOTE: Ensure side rails are right side up, with the upholstered side up.

2

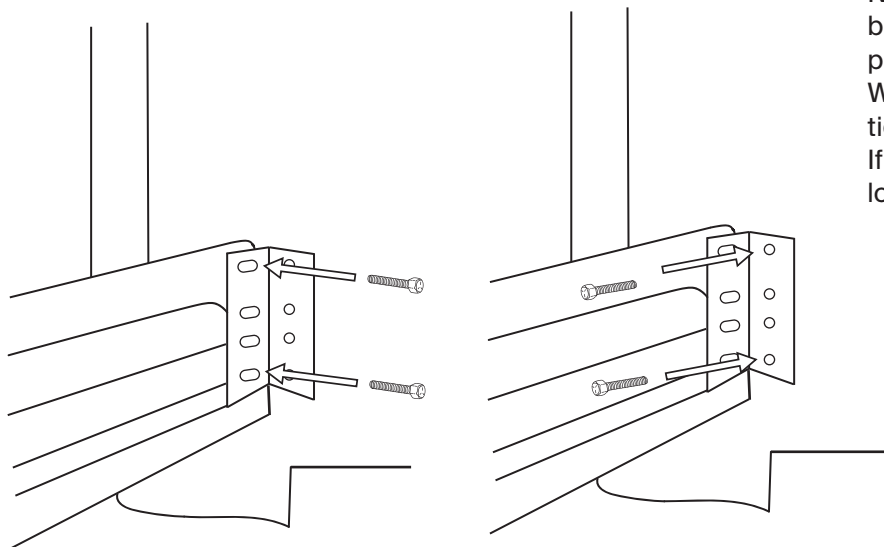

NOTE: Loosely hand thread all bolts and screws first while putting each piece together. When each is aligned, securely tighten bolts and screws in place. If screws/bolts don't thread in, try loosening metal brackets to align.


Line up top and bottom holes of the side rail to the top and bottom holes of the bracket.

Screw in and tighten hex bolts into the top and bottom holes.

3


Repeat Step 2 on the opposite side with remaining side rail.

4

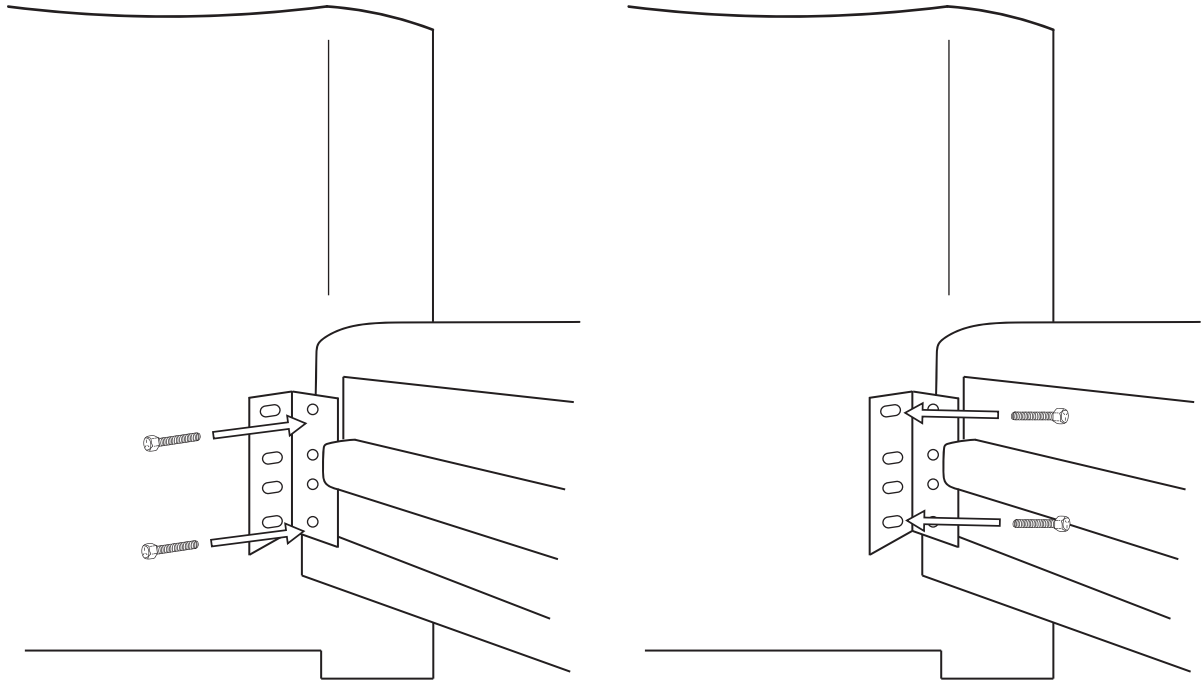


Repeat Steps 2 through 3 on the footboard.

5

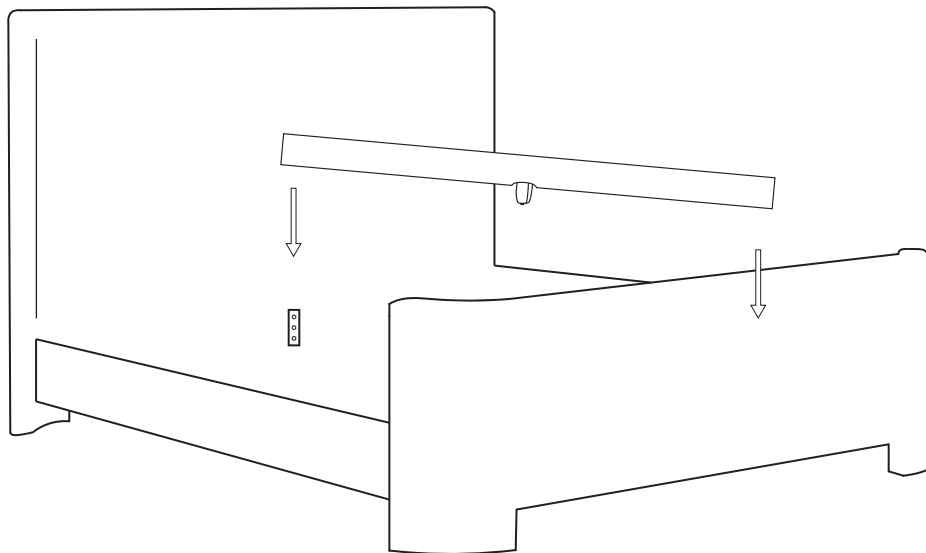

Line up top and bottom holes of the center rail with the top and bottom holes of the center bracket.


6

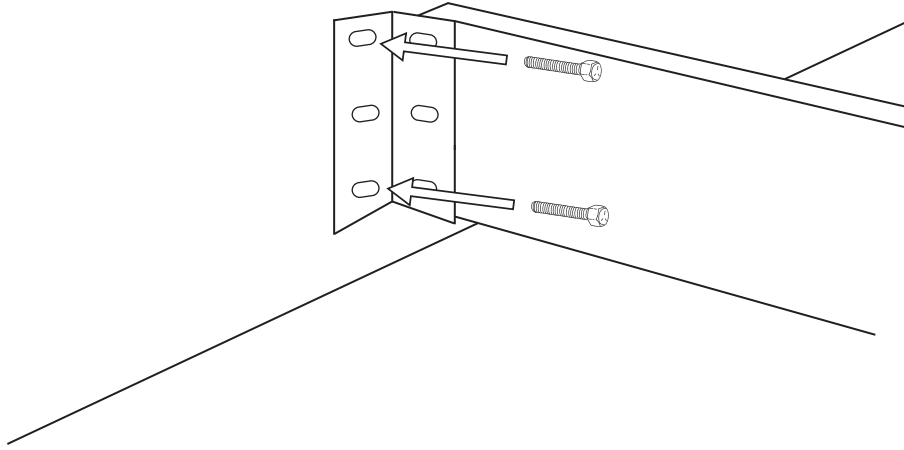


Screw in and tighten hex bolts into the top and bottom holes on the headboard.

7

Repeat Step 6 on the footboard.

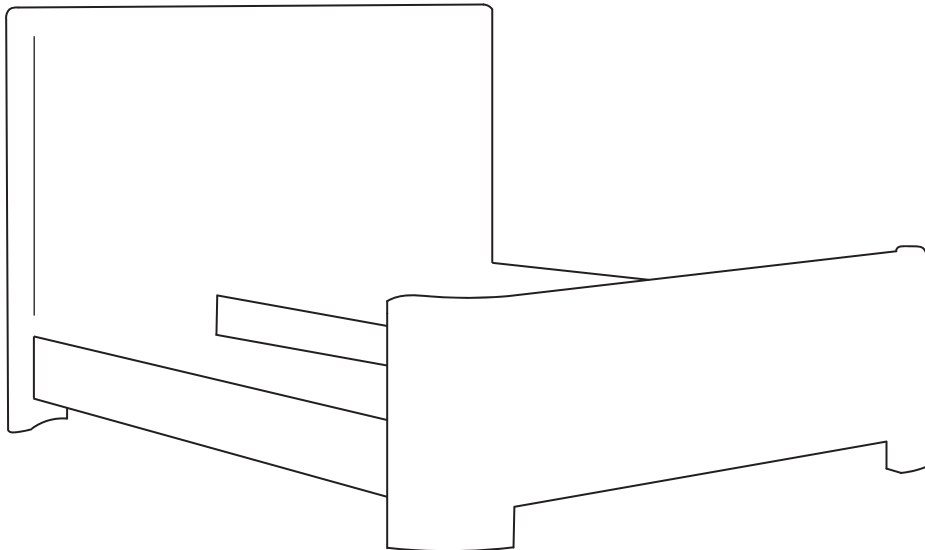


8

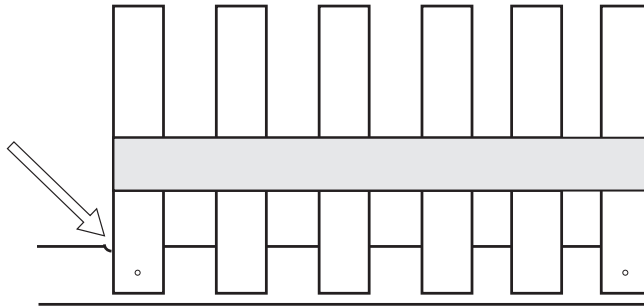

Align one set of slats with the center mark inside of each side rail.


NOTE: The set of 6 slats should be placed closest to the foot of the bed, and the set of 5 slats should be placed closest to the head.

9

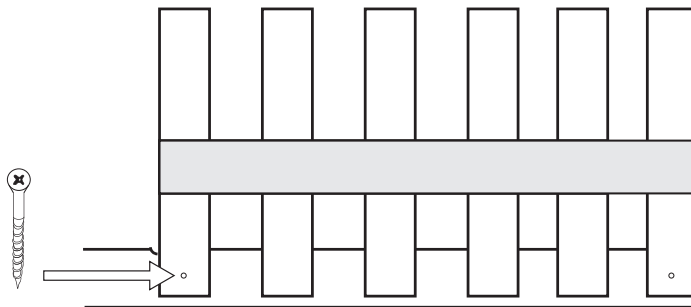

Place first set of slats on first center mark inside of each side rail.

Screw in wood screw into slat closest to center mark on each side rail.

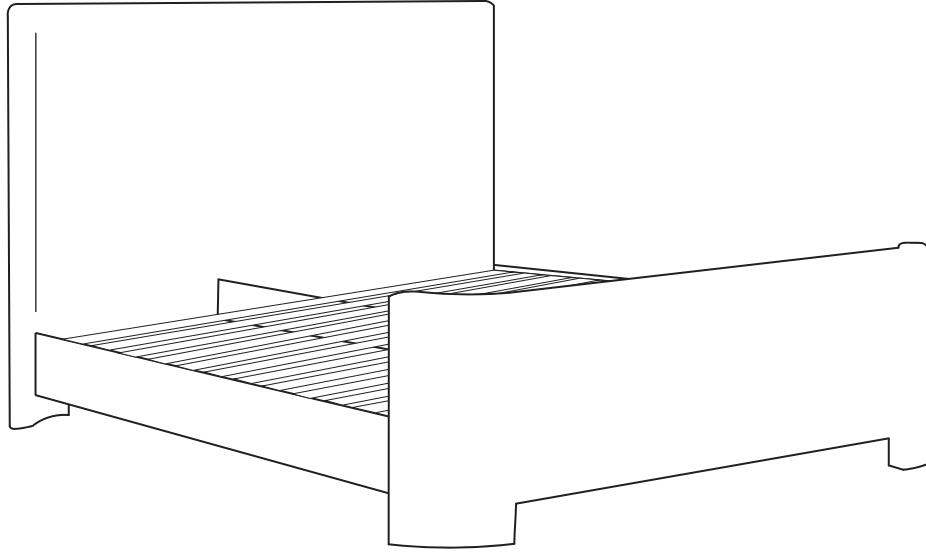**10**

Stretch out first set of slats until fully extended.

**11**

Screw in wood screw into the last slat of the fully extended unit.

**12**

Repeat Steps 8-11, starting with the second center mark on the inside of side rails.