


RVX-WIPER-BLADE

Wiper Blade Kit Installation Guide

This is a guide to show the steps of replacing a wiper blade on the Redvision X-Series product range.

Installation

- 1) Remove the existing wiper blade by loosening and removing the M4 dome nut, then lifting the blade away from the assembly.
- 2) Install the replacement wiper blade, ensuring correct alignment. Secure it using the new M4 dome nut, M4 plain washer, and M4 spring washer. While holding the wiper blade to keep the assembly in position, tighten the M4 dome nut with a 7 mm wrench or nut spinner to a torque of 2.6 Nm.

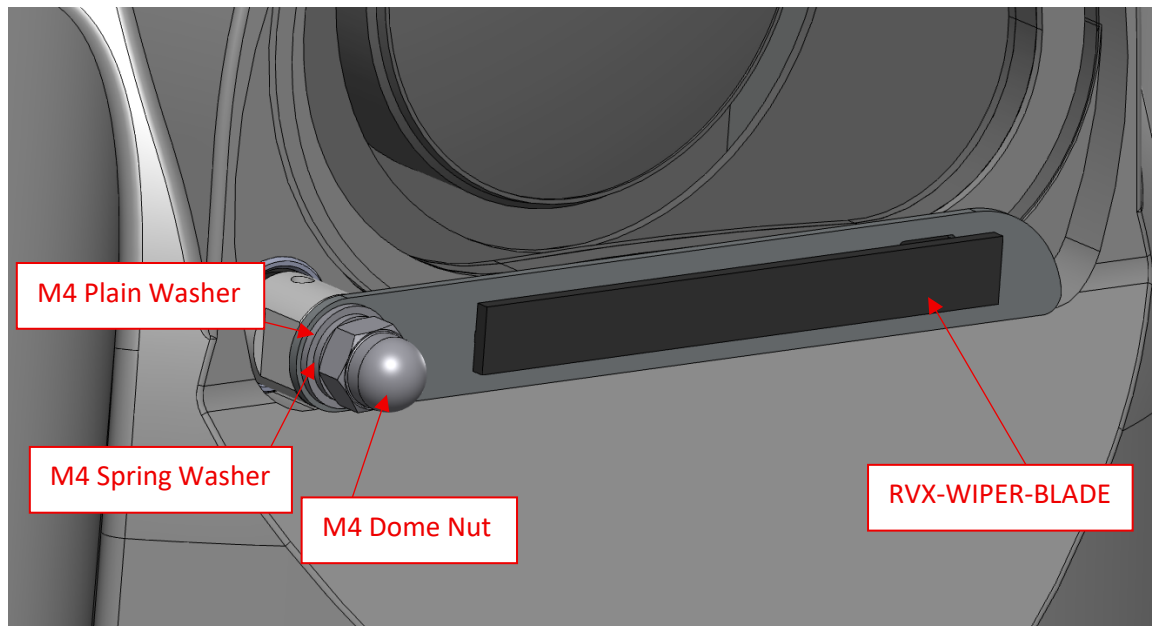

Contents

- 1 x RVX-WIPER-BLADE
- 1 x M4 Dome Nut Stainless Steel
- 1 x M4 Plain Washer Stainless Steel
- 1 x M4 Spring Washer Stainless Steel